


baby
jogger®






city tour™
Stroller

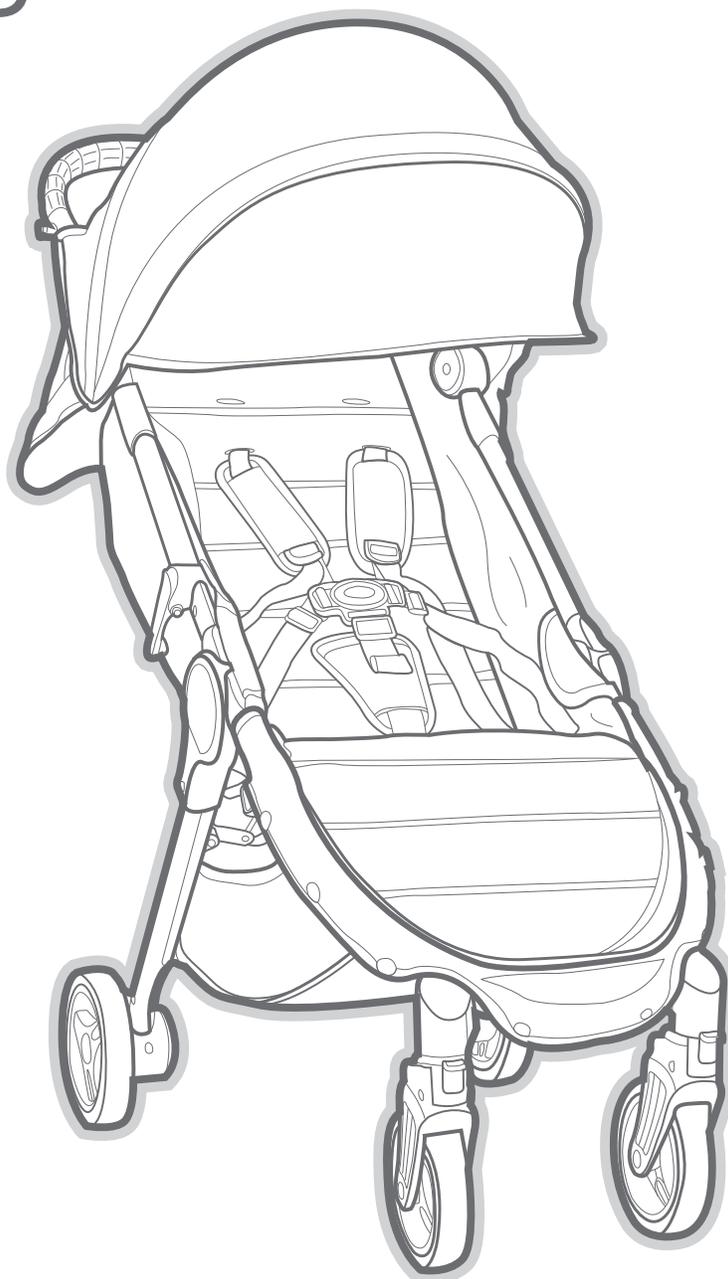








©2016 PD349310A 3/16









ASSEMBLY INSTRUCTIONS








babyjogger.com




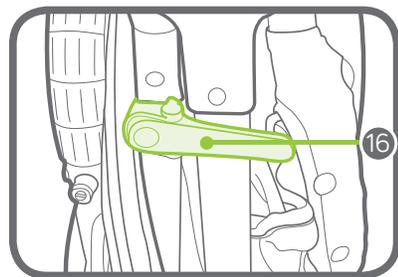
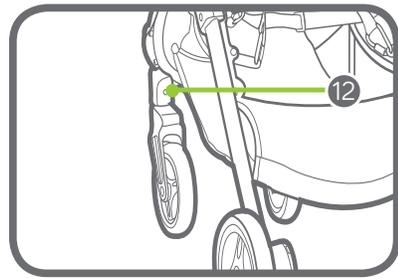
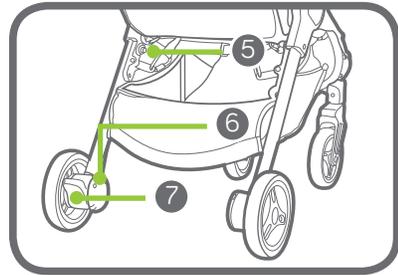
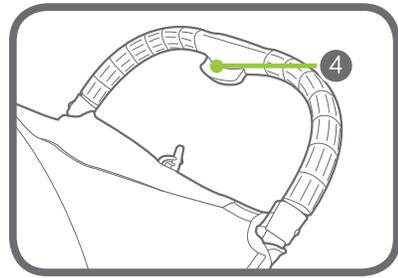
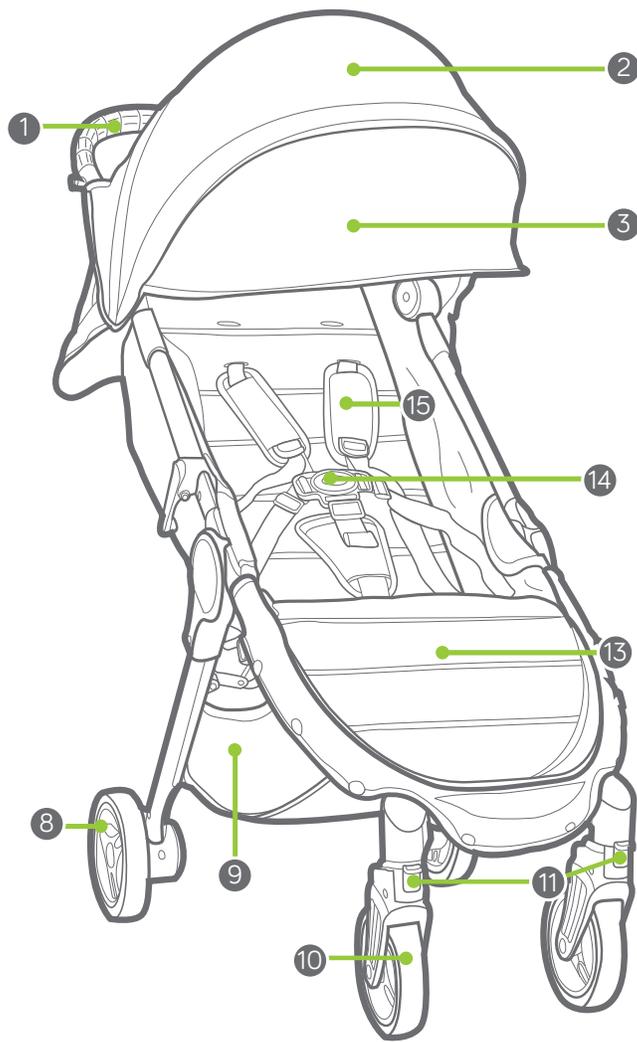










- | | | | |
|---|---------------------------|----|----------------------------|
| 1 | Handlebar | 9 | Storage Basket |
| 2 | Canopy | 10 | Front Wheel |
| 3 | Canopy Extension | 11 | Swivel/Lock |
| 4 | Handlebar Fold Button | 12 | Front Wheel Release Button |
| 5 | Lock Release Button | 13 | Footwell |
| 6 | Rear Wheel Release Button | 14 | Harness Buckle |
| 7 | Parking Brake | 15 | Harness Pads |
| 8 | Rear Wheel | 16 | Auto-lock |

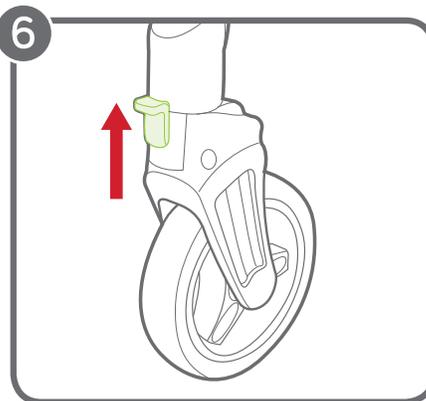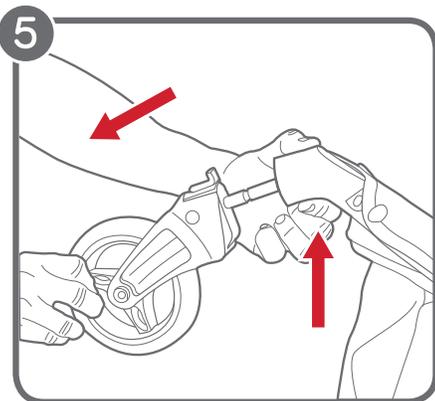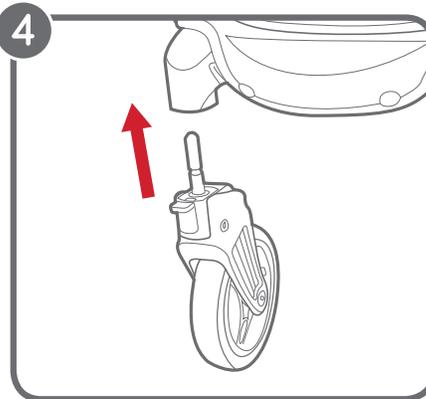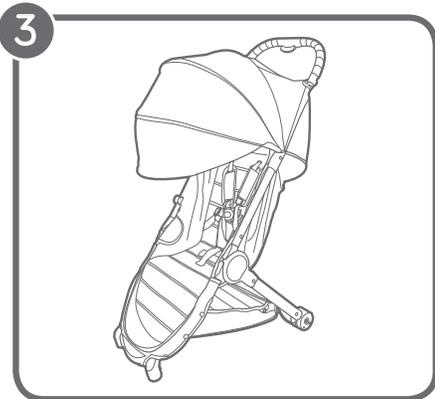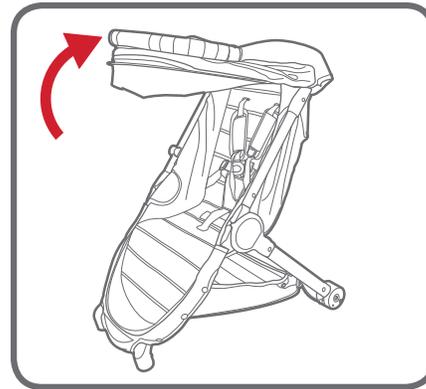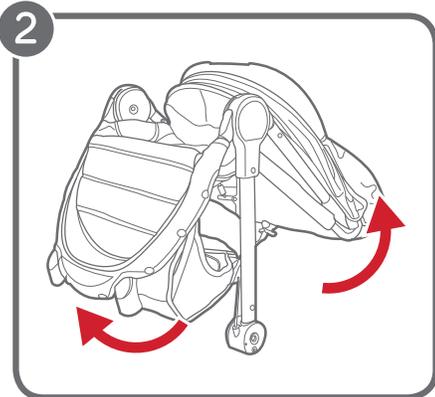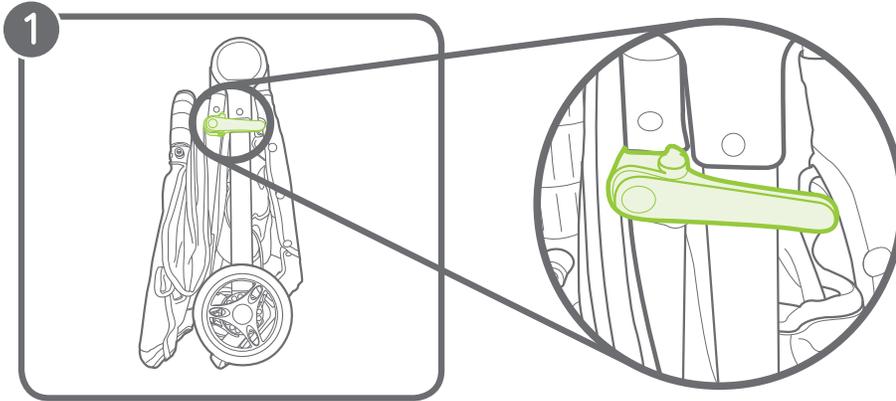

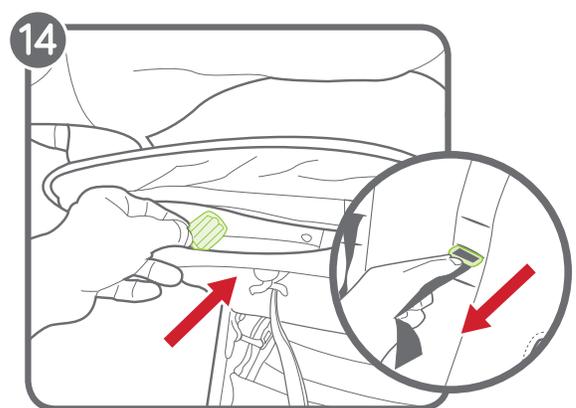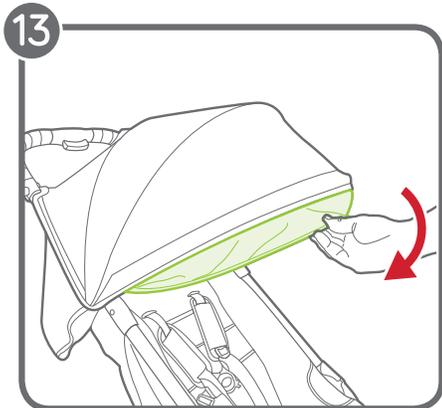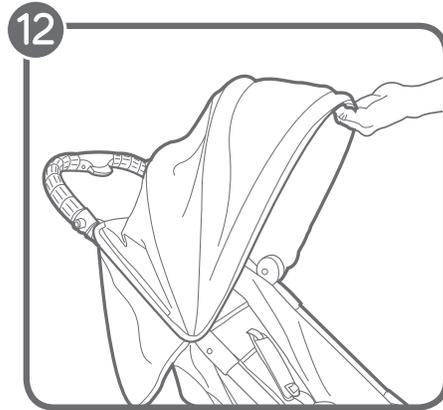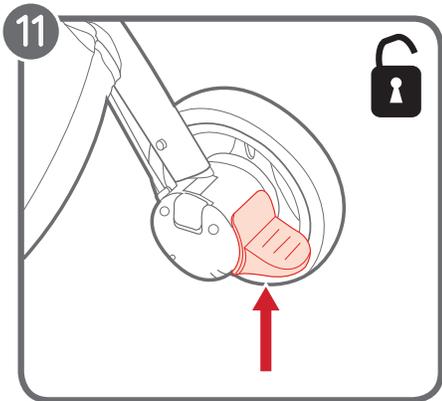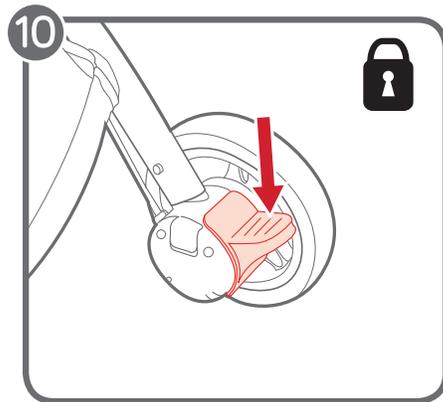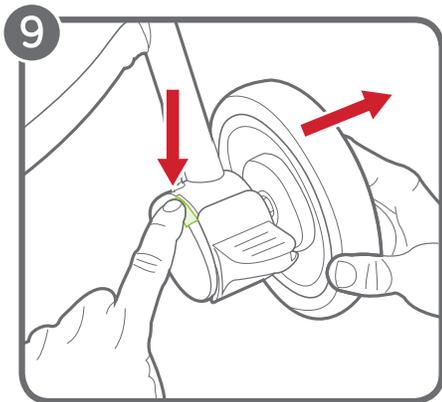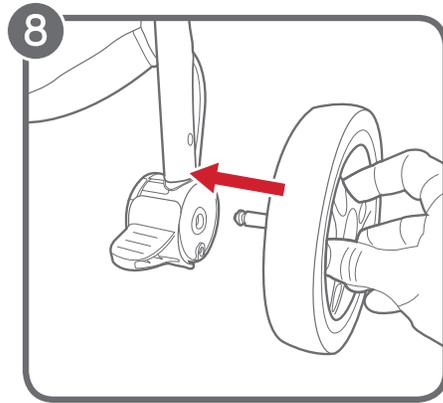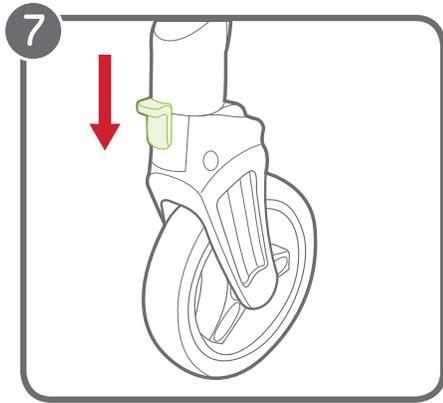

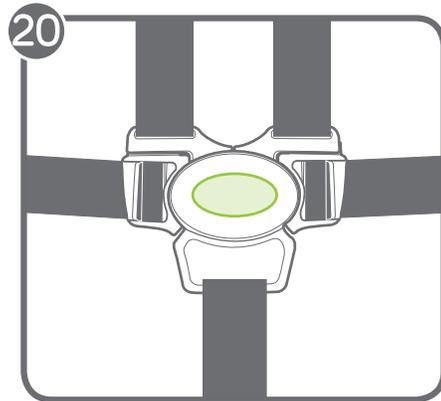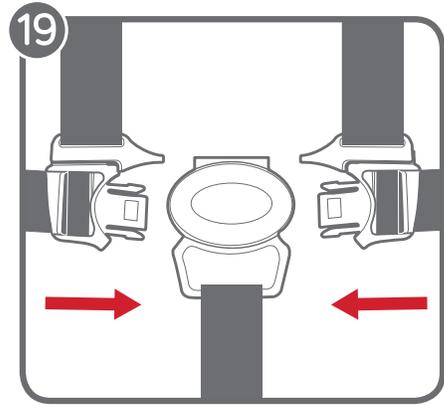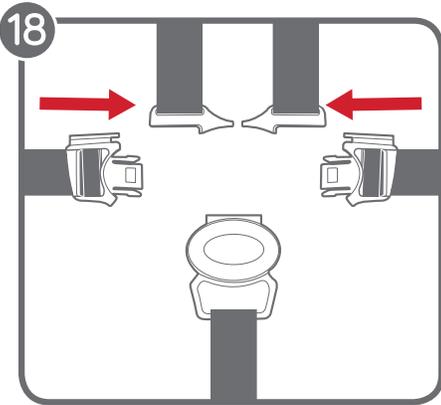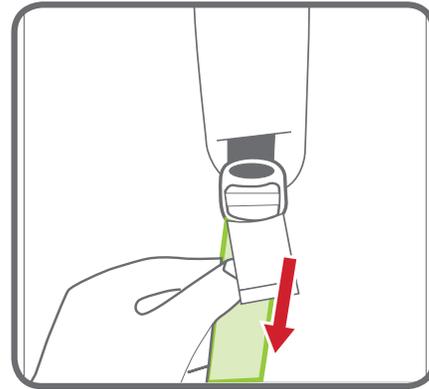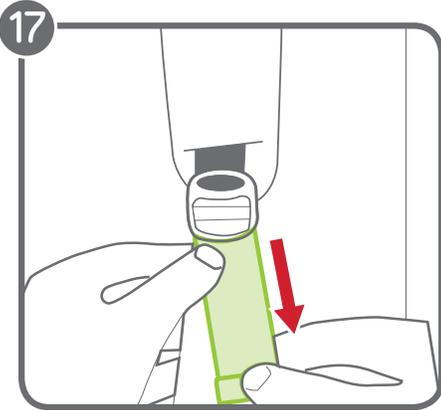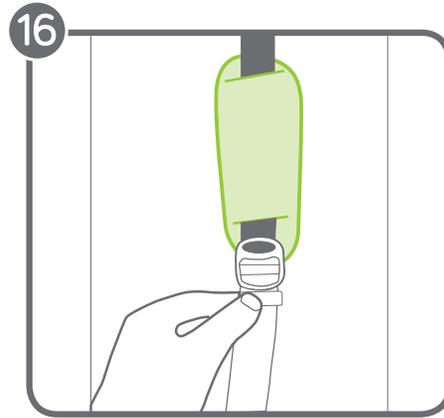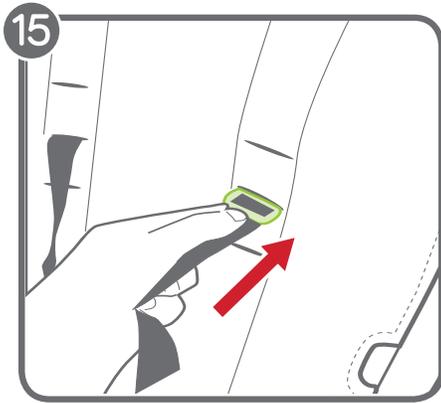

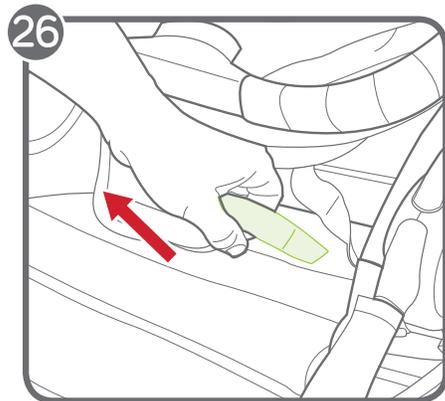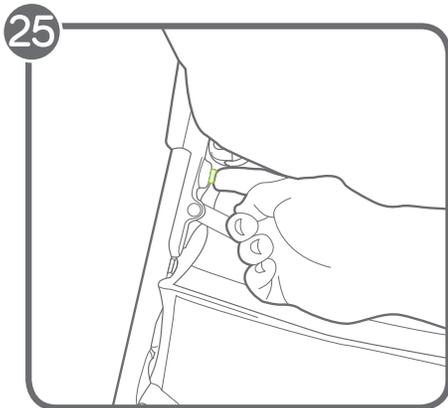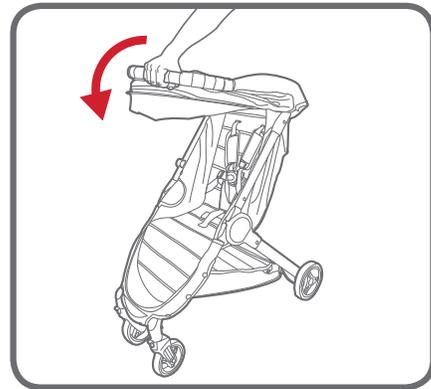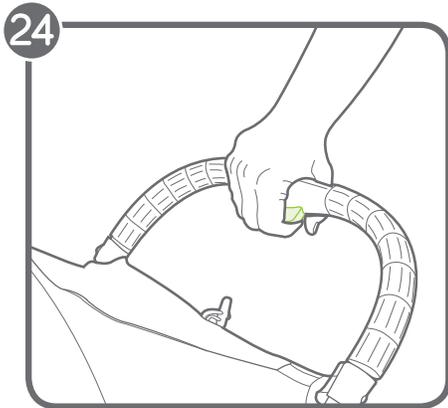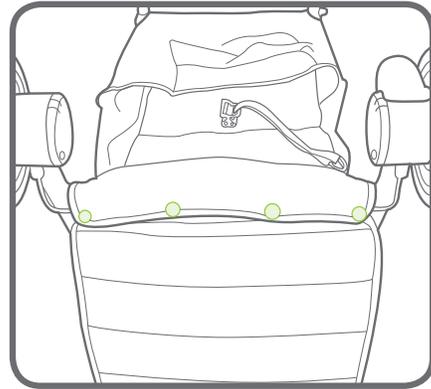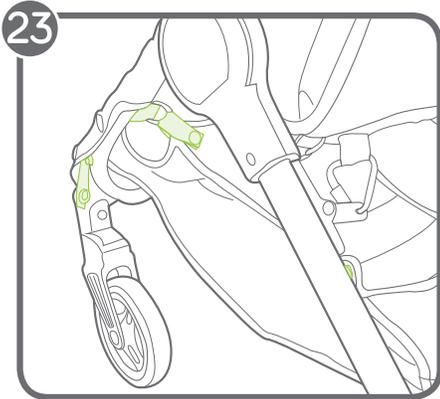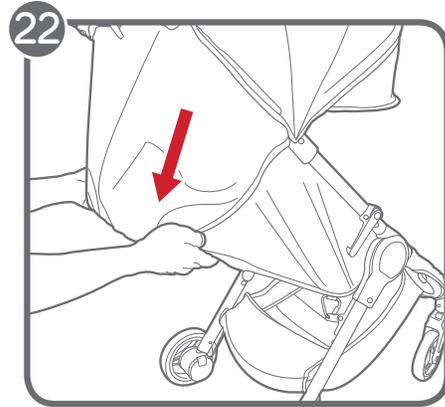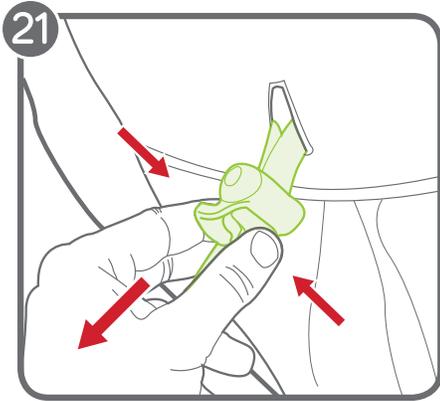

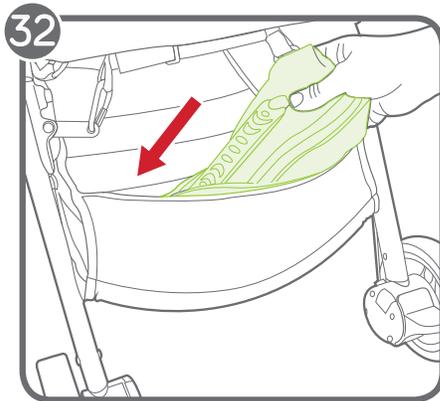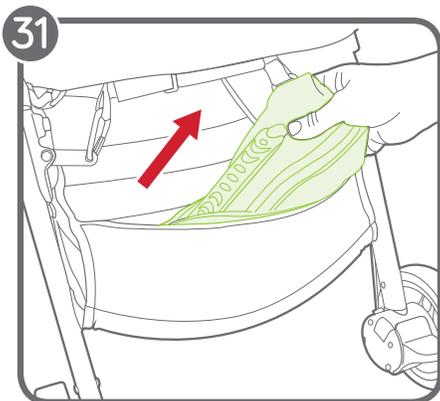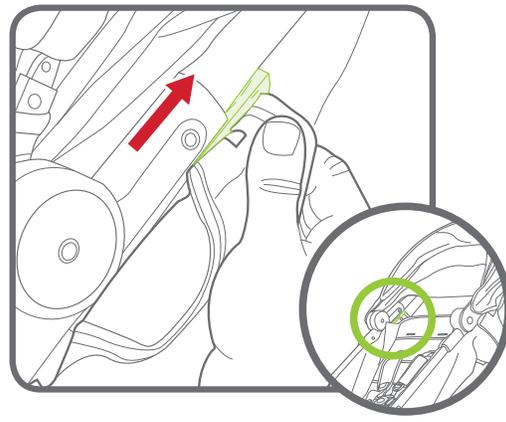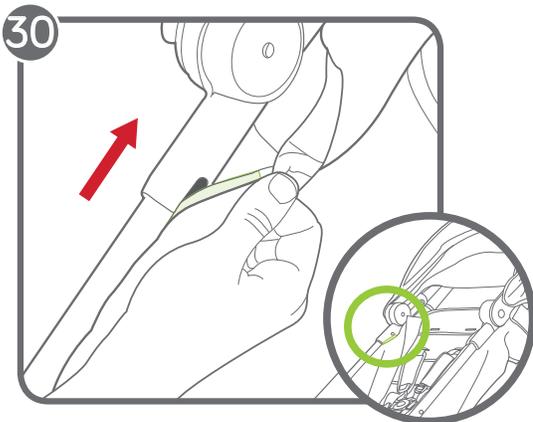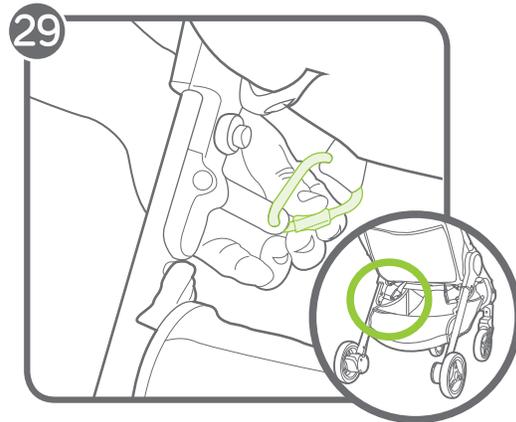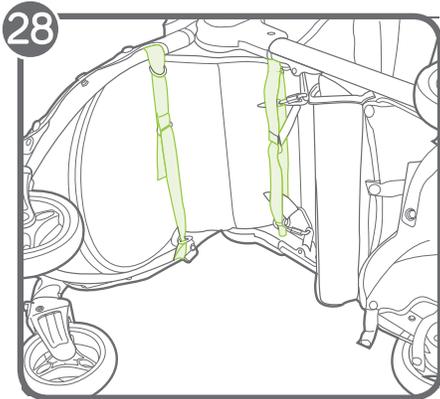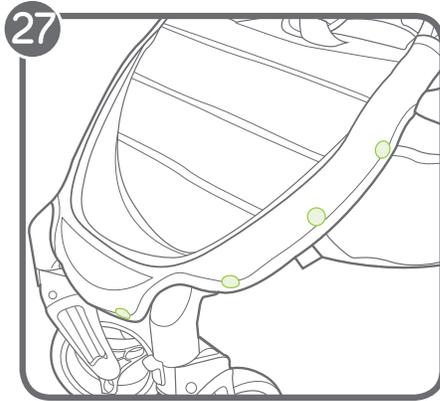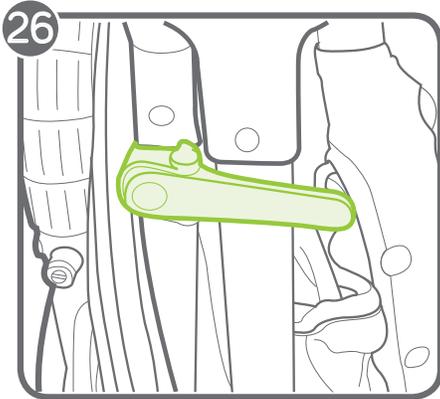

WARNING

IMPORTANT - Keep these instructions for future reference.

Read these instructions carefully before use. Your child's safety may be affected if you do not follow these instructions.

SINGLE STROLLER

- This stroller seats one passenger. NEVER allow more than one child at a time on this stroller.
- This seat unit is not suitable for children under 6 months. Maximum weight is 20 kg (45 lb); maximum height is 101.6 cm (40 in).
- Total weight load recommended for this stroller is 26 kg (57 lb). 20 kg (45 lb) in the seat, 1 kg (2 lb) in the seat back pocket, and 5 kg (10 lb) in the basket.
- This stroller is not suitable for running, jogging, skating or rollerblading.
- Never leave your child unattended.
- Always use the restraint system.
- Check that the pram body or seat unit attachment or car seat attachment devices are correctly engaged before use.
- To avoid injury, ensure that your child is kept away when unfolding and folding this product.
- Do not let your child play with this product.
- Parcels or accessory items, or both, placed on the unit may cause the unit to become unstable.
- Ensure that all the locking devices are engaged before use.
- When loading and unloading child, lock the front wheel in a fixed position.
- Any load attached to the handle affects the stability of the pushchair.
- Stroller is not meant to be used for transporting children up or down stairs, travelators, or escalators. Damage resulting to stroller will not be covered under warranty.
- This stroller does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable pram body, cot, or bed.
- Accessories which are not approved by Baby Jogger shall not be used.
- Watch out for cars - never assume that a driver can see you and your child.
- The passenger shall remain seated (no standing in the stroller).
- It may be unsafe to use replacement parts other than those supplied or approved by Baby Jogger.
- TO AVOID INJURY OR DEATH:
 - ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.
 - DO NOT LEAVE CHILDREN UNATTENDED
 - SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
 - DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
 - MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.
- WARNING: USE THE HARNESS AT ALL TIMES.
- WARNING: USE THE STRAP TO STOP THE STROLLER ROLLING AWAY.
- NOT RECOMMENDED FOR A CHILD UNDER 6 MONTHS OLD.
- Never leave the harness buckled when not fitted to a child. The harness can form loops that pose a strangulation hazard to the child.
- Do not use stroller near open fires or exposed flames.
- The stroller is designed for flat or gently sloping surfaces and may become unstable on higher sloping and uneven surfaces. care should be taken by the parent to prevent the stroller from tipping over.

FRAME

- 1 Unpack the stroller frame from the box and set the wheels aside. Unlock the stroller by pulling the Storage Lock Lever.
- 2 Lift the footwell and seat away from the lower frame. Then lift the handlebar away from the seat. The stroller will lock into place and you will hear a click.
- 3 Place the stroller in the upright position.

 **WARNING:** Ensure that all the locking devices are engaged before use.

FRONT WHEEL

- 4 Installation
 - Lay stroller on its back so the handlebar is resting on the floor.
 - Attach the front wheel by sliding it into the front wheel mount until it clicks. Gently pull on the front wheel to make sure it is properly attached.
- 5 Removal
 - While pressing the front wheel release button, gently slide the front wheel out of the front wheel mount.

SWIVEL FEATURE

- 6 Push the swivel lock button up to lock the front wheel to a fixed position.
- 7 Press the swivel lock button down to allow the front wheel assembly to swivel.

 **WARNING:** When loading and unloading child, lock the front wheel in a fixed position. Although the front wheel of your stroller locks, it is not intended for jogging or exercise purposes.

REAR WHEELS

- 8 Installation
 - Align the rear wheel axle with the wheel mount on the stroller frame and insert it into the wheel mount until it locks into place. You will hear a click.
 - Gently pull on the rear wheel to make sure it is properly attached.
- 9 Removal
 - While pressing down on the wheel release button, gently slide the rear wheel out of the wheel mount.

BRAKE

- 10 To lock the brakes: push the brake lever down to engage the brakes.
- 11 To release the brakes: lift the brake lever up.

 **WARNING:** Lock the brakes before loading and unloading your child and whenever the stroller is not moving.

CANOPY

- 12 Pull forward to open canopy, push backwards to close canopy.
- 13 To use the canopy extension: Pull the extension out from under the canopy until it snaps into place, push the extension under the main canopy to hide.

ADJUSTING SAFETY HARNESS

- 14 From the back of the seat, undo the fastening strip and open the pocket to locate the plastic square stopper. Turn stopper and pass through the openings in the PE board and seat fabric.
- 15 Reinsert stopper at seat opening closest to child's shoulders. Pass back through seat fabric and PE board. Tug on strap to ensure stopper is locked. Repeat on both sides.

 **WARNING:** Avoid serious injury from falling or sliding out. Always properly adjust and fasten safety harness.

⚠ WARNING: Always use the crotch strap in combination with the shoulder straps and waist belt.

16 Slide the harness pads up to access plastic guide on strap.

17 Hold the plastic guide and pull strap to tighten or loosen.

USING SAFETY HARNESS

18 Insert side strap buckle into harness buckle on both sides.

19 Insert connected harness and side strap buckles into the sides of the crotch buckle.

20 Press button on crotch buckle to release.

RECLINE THE SEAT

21 Pinch the clamp behind the seat, and slide it down to desired recline.

22 Pull seat down on both sides to match the clamp position. Reverse steps to return to the upright position.

⚠ WARNING: When making adjustments to the stroller seat, make sure child's head, arms, and legs are clear of moving seat parts and stroller frame.

BASKET REMOVAL

23 Unfasten the snaps of the Basket from the front, rear, and under the back support bar.

FOLDING

- Remove your child from the seat.
- Remove all attachments and all items from basket.

24 Squeeze the fold button on the handle bar and fold the frame forward.

25 Push the red lock release button.

26 Pull up on the "Pull to Fold" folding handle and let the frame collapse.

27 Make sure the storage lock lever clicks into place.

- Hold stroller by metal frame when not carrying in carry bag.

REMOVING THE SEAT FABRIC

28 Unsnap the seat fabric from the seat frame on both sides.

29 From the underside of the seat, unfasten the hook-and-loop and slide the strap through the D-ring.

31 Remove the "Pull to Fold" folding handle from the frame by unfastening the triangle carabiner hooks and slide the straps through the seat.

31 Pull the seat fabric out of the channels in the frame.

CARRY BAG

32 Unzip carry bag storage pocket, fold your stroller, place stroller into carry bag.

33 To store the carry bag: Fold the carry bag tightly, place into the storage pocket, and zip the pocket.

CARE AND MAINTENANCE

To preserve the longevity of your stroller, it is important to perform simple, regular maintenance. From time to time, make sure that the joints and folding areas are still in good condition. If you hear any squeaking or feel tension, you can take your stroller to a local bike shop for added lubrication. All repairs should only be carried out by an authorized dealer.

WASHING

Seat Fabric

- You can machine wash your stroller's seat in cold water with a mild detergent.
- Be sure to remove the metal frame and PE boards from the seat before washing.
- Do not use solvents, caustic or abrasive cleaning materials.
- To minimize shrinkage, simply reattach the seat to the frame to dry.
- Do not press, iron, dry clean, tumble dry or wring the fabric.
- If the seat covers need to be replaced, only use parts from a Baby Jogger Authorized Dealer. They are the only ones that are guaranteed to have been safety tested and designed to fit this seat.

Plastic/Metal Parts

- Wipe clean using a mild soap and warm water.
- You must not remove, dismantle or alter any part of the seat folding mechanism or brakes.

Wheel Care

- The wheels can be cleaned using a damp cloth. They will need to be dried completely with a soft towel or cloth.

STORING

- Sunshine can fade seat fabric and dry out tires, so storing your stroller indoors will prolong its good looks.
- DO NOT store outside.
- Ensure that the stroller is dry before storing for prolonged periods.
- Always store the stroller in a dry environment.
- Store the stroller in a safe place when not in use (i.e. where children cannot play with it).
- DO NOT place heavy objects on top of the stroller.
- DO NOT store the stroller near a direct heat source such as a radiator or fire.

Baby Jogger's Limited Lifetime Warranty

Baby Jogger warrants that the frame is free of manufacturer defects for the lifetime of the product. Manufacturer's defects include but are not limited to the breaking of welds and frame tube damage. Textile or soft side materials and all other components shall be warranted for one year from the date of purchase (except for tubes and tires). Proof of purchase is required to make a warranty claim and the warranty is only extended to the original purchaser.

THIS WARRANTY DOES NOT COVER:

- Normal wear and tear
- Corrosion or rust
- Incorrect assembly, or the installation of third party parts or accessories not compatible with the original design
- Accidental or intentional damage, abuse or neglect, or use on stairs or escalators.
- Commercial use
- Improper storage/care of the unit

This warranty specifically excludes claims for indirect, incidental, or consequential damages. The implied warranties of merchantability and fitness for a particular purpose is according to the specific warranty period for this model unit at time of purchase. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To know what your legal rights are in your state, consult your local or state consumer affairs office or your State's Attorney General.

If your stroller was purchased outside of the United States, please contact the distributor in the country nearest you. Their contact information can be found on our website at <http://www.babyjogger.com/retailers/#international>. Claims for warranty outside of the country in which the product was purchased may incur shipping charges.

NOTE: When contacting Baby Jogger distributor regarding your stroller, please have your stroller's serial number and manufacturing date ready. It can be found on the right fold mechanism.



IN AUSTRALIA CONTACT:

Call: 1300.661.885
Fax: 03.9873.1433
Mail: The Amazing Baby Company
11 Maurice Court
Nunawading, Victoria 3131
Australia

IN NEW ZEALAND CONTACT:

Call: (64) 03.338.7613
Fax: (64) 03.338.7615
Mail: Baby First Limited
10 Moncur Place
Middleton
Christchurch, 8024
New Zealand

NOTES:

NOTES:

NOTES:

