


Read all instructions BEFORE assembly and USE of product.
KEEP INSTRUCTIONS FOR FUTURE USE.

Sit N Stand® Double Deluxe Tandem Stroller

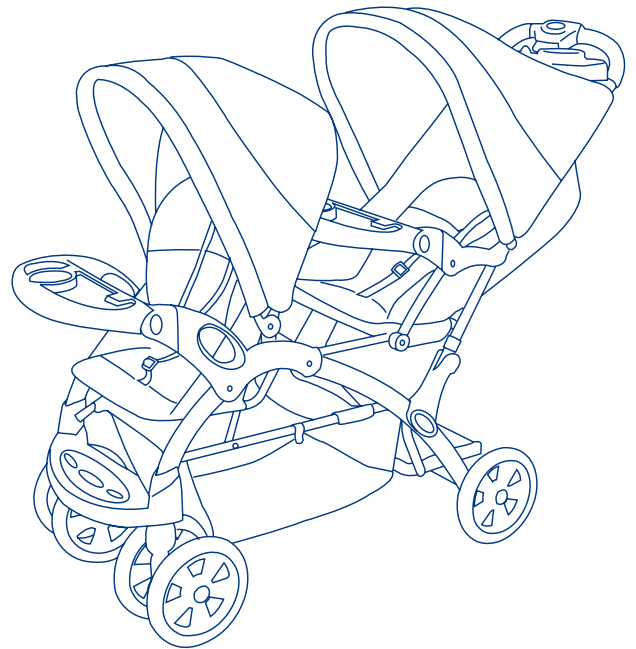

Contact us by mail:
Baby Trend, Inc.
1607 S. Campus Ave., Ontario, CA 91761

Contact us by phone:
1-800-328-7363 (8:00am ~ 4:30pm PST)
or online <http://www.babytrend.com>

Instruction Manual

baby trend
Convenience through innovation and thoughtful design
www.babytrend.com

12.09

WARNING

⚠ WARNING: Please follow all of these instructions to ensure the safety of your child. Keep these instructions for future reference.

⚠ WARNING: Failure to follow these instructions could result in serious injury or death. Avoid serious injury from falling or sliding out, always use the safety harness and insure that the children are properly positioned according to these instructions.

⚠ WARNING: Never leave children unattended.

- Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause it to become unstable.
- The maximum weight that can be carried in the storage basket is 5 lbs, parent tray and child tray is 3 lbs. Seat Belt storage pocket: To store seat belt only, maximum weight is 1 lb. Excessive weight may cause a hazardous unstable condition to exist.
- Be certain the stroller is completely opened and locked in place before allowing a child near the stroller.
- The rear stand on platform / jump seat is designed for a child who is at least 2 1/2 years old and is not over 40 inches tall. Use of the stroller with two (2) children weighing more than 40 pounds each, or children totaling more than 80 pounds, will cause excessive wear and stress on the stroller and may cause a hazardous unstable condition to exist.
- **NEVER** use the stroller on stairways or escalators.
- **NEVER** allow your stroller to be used as a toy.
- To clean use only mild household soap or detergent and warm water on a sponge or clean cloth.
- Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed.
- Discontinue use of stroller should it malfunction or become damaged. Please contact our customer service department to arrange for repair or obtain replacement parts.


If you experience any difficulty with assembly, missing parts or use, please DO NOT return this item to the store. Retail stores are unable to properly assist you. Contact our Customer Service Department directly for assistance. Call toll-free 1-800-328-7363, Monday -Friday, between the hours of 8:30 a.m. and 4:30 p.m. (PST).

Contact us by mail:
Baby Trend, Inc.
1607 S. Campus Ave., Ontario, CA 91761


Contact us by phone:
1-800-328-7363 (8:00am ~ 4:30pm PST)
or online <http://www.babytrend.com>

PARTS


Check that you have all the parts for this model before assembling the stroller.

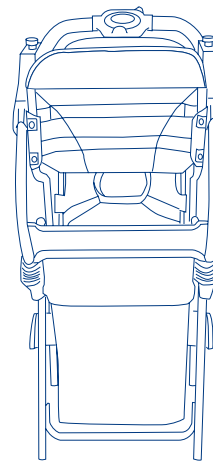


Stroller

 

Parent Tray

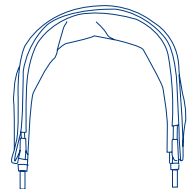

Front Canopy

 


Child Tray (x 2)



Back Canopy



 Foot Rest



Front Wheel




Rear Axle

ASSEMBLY

IMPORTANT! To ensure safe operation of your stroller, please follow these instructions carefully. Please keep these instructions for future reference.

IMPORTANT! Before assembly and each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. NEVER use if any parts are missing or broken.

IMPORTANT! Adult assembly is required.

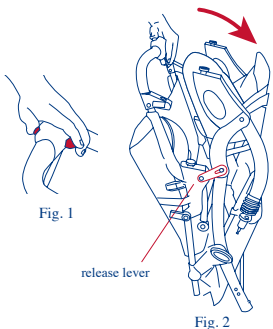


Remove stroller from box. The front wheels, rear wheels, child tray, and parent tray **MUST** be installed prior to use.

FRONT WHEELS

To attach the front wheels, unfold stroller as described in the section following:


- Unlock the release lever. (Fig. 2)
- Unfold stroller frame by sliding the **RED** thumb trigger to the left and squeezing the **RED** pull trigger (Fig. 1) while pulling backward on the stroller handle. (Fig. 2)

To attach the front wheels, lean the stroller back so that it rests on the handle with the front and rear legs pointing upward. Position the front wheels over the front leg tubes so that the hole in the housing lines up and will slide onto the legs. (Fig. 3) Firmly push down until the wheels lock securely into place. Tug on each wheel to ensure they are both securely attached.

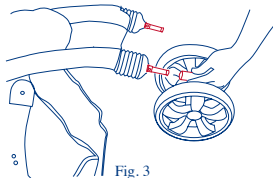

REAR WHEELS

Position rear axle over the rear leg tubes, brake pedals facing the back. At the same time, push down applying equal pressure to both sides until they lock into place. (Fig. 4)

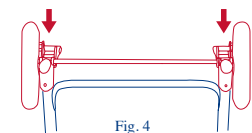


ASSEMBLY

Note: NEVER use stroller if wheels do not lock into place. If you need assistance, please contact our customer service department at 1-800-328-7363, M-F, between 8am and 4:30pm, PST.

FOOT REST

Snap foot rest onto front legs of stroller just below the seat. Push downward on the foot rest until it snaps onto the U-shaped frame cross member. (Fig. 5)

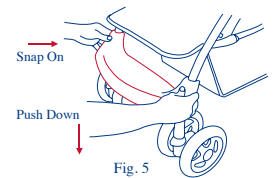


CHILD TRAY

To attach the child tray:


Push the tray downward and onto each side of the front armrests until both side snaps into place. (Fig. 6) Check that tray is securely latched in place. Repeat the above step for the rear child tray.

⚠ WARNING: The child's tray is not a restraint device: always secure your child with the seat belt. **DO NOT lift the stroller by the child's tray. Use care when attaching the child's tray on the stroller with a child in the stroller.**

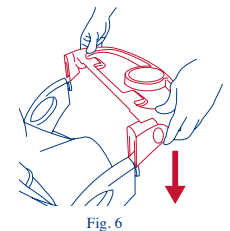

To access the child seat:

Pull one side of the release lever (Fig. 7) located on the underside of the child tray and lift upward. Either side of the child tray will lift and rotate out of the way to allow access to the front and rear seats. (Fig. 8)

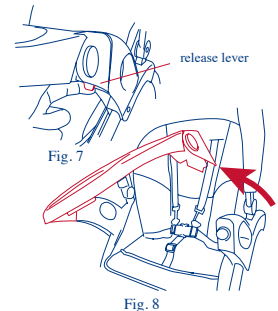

ASSEMBLY

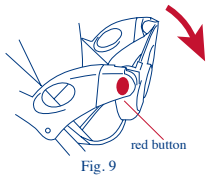


Fig. 9

To rotate the child tray:

In order to attach an infant car seat to the stroller, the child tray must be rotated to the vertical position. Press red buttons on both sides of the child tray to rotate down 90 degrees. (Fig. 9)

To remove the child tray:

Pull both release levers located on the underside of each side of the tray and lift upward. (Fig. 10)

CUP HOLDER (sold separately)

This is an optional accessory item that can be purchased online at www.babytrend.com. The removable child tray can be replaced with 2 individual cup holders. It is ideal for an older child.

To attach the cup holder:

Push the cup holder downward and onto each side of the front armrests until it snaps into place. (Fig. 11)

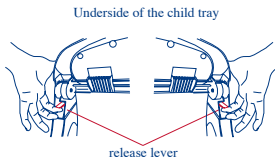


Fig. 10

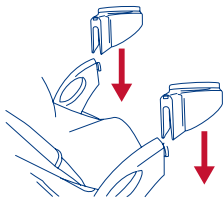


Fig. 11

CANOPY

To attach the front canopy:

Line up the male fittings on the canopy with the slots on the armrest and push both fittings downward until snapped into place. (Fig. 12) To open the canopy, push forward on the front edge of the canopy while holding the rear of canopy in place. To fold the canopy, pull backward on the front edge.

To remove the front canopy:

Press the snap button under the armrest and pull to release the fitting from the slot. Repeat for the other side.

To attach the rear canopy:

Line up the male fittings of the lower connection with the female fittings on the handle frame and push inward. (Fig. 13b) Lock upper connection of canopy into locking slots. (Fig. 13a) Fasten velcro to the stroller frame.

To remove the rear canopy:

Unfasten the velcro from stroller frame. Press the upper snap buttons (Fig. 13c) located on the outer side of parent tray to release the upper connection, then press both snap buttons on the inner side of the lower connection and pull outward.

Note: The canopies are only needed when using the seated positions for your children. They are not needed when using with the infant car seats.

PARENT TRAY

To attach the parent tray, position the tray so that the hinges for the storage compartment are facing forward. Snap the parent tray to the stand at the top of the frame. Check that the tray is securely latched in place. (Fig. 14)

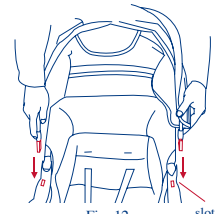


Fig. 12

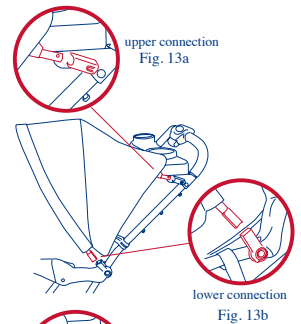


Fig. 13b

 


Fig. 13c

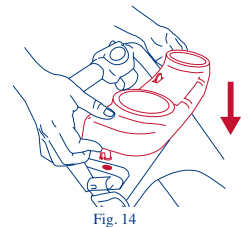


Fig. 14

Before placing your children in the stroller, please follow the instructions below.

⚠️ WARNING: Always set brakes when the stroller is not being pushed so that the stroller will not roll away. NEVER leave stroller unattended on a hill or incline as the stroller may slide down the hill.

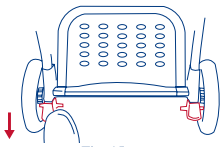


Fig. 15a

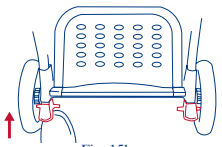


Fig. 15b

BRAKES

To engage brakes, apply light downward pressure to the brake lever located on each rear wheel. The stroller may require slight forward or rearward movement in order to line up the teeth on the brake with each wheel brake cluster. (Fig. 15a) Check that the stroller will not move and that both brakes are properly applied. To release, gently lift up on the brake lever. (Fig. 15b)

TO SECURE THE CHILD

⚠️ WARNING: Avoid serious injury from falling or sliding out. Always use the safety harness.

⚠️ STRANGULATION HAZARD: Child can strangle in loose straps. Never leave child in seat when straps are loose or undone.

TANDEM STOLLER - 5-Point Harness

- The shoulder straps of the 5-point harness has 2 attachment positions. Select the loop position that places the shoulder strap level with, or below the top of the child's shoulder and feed the shoulder harness under the

correct loop. To adjust harness slot unhook the shoulder strap from the crotch buckle. (Fig. 16) Feed the shoulder strap through the harness spread slots. You can access these slots from the rear of the seat. Feed shoulder strap through appropriate slot and reattach shoulder strap to crotch buckle.

- Carefully place the child in the stroller seat and bring the safety harness around the child's waist and over the shoulders. Place the crotch strap and between the child's legs. Insert the male end of each shoulder / waist belt into the buckle on the crotch strap. Tighten the harness to be snug around the child's waist and over the child's shoulders. (Fig.17)

- To release, apply pressure to both sides of each male clip until the clip is released. (Fig. 18) This process requires a moderate amount of effort so as to prevent an accidental release by your child. **NOTE:** Buckles may be hard to release when 1st used.

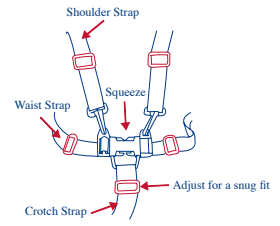


Fig. 17

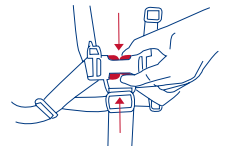


Fig. 18

TRAVEL SYSTEM - Safety Belt

- Strap the safety belt over the infant car seat through the seat belt slots on the infant car seat, connect the buckles together (Fig. 19). The safety belts for the infant car seat is located in small pockets on outer sides of seat pads. Tighten the strap so the infant car seat fits snug and can't move.

IT IS VERY IMPORTANT THAT THE INFANT CAR SEAT STRAP IS ALWAYS TIGHTLY FASTENED AROUND THE INFANT CAR SEAT.

NOTE: When the stand feature safety belt is not used, you must store the stand feature safety belt back to its storage.

JUMP SEAT - 3-Point Harness

- Secure the child with the jump seat 3-point harness (Fig. 20) when child is sitting on the jump seat.

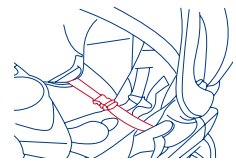


Fig. 19

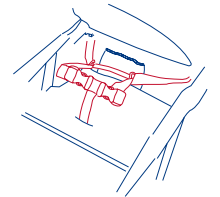


Fig. 20

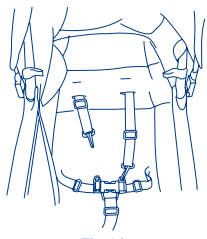


Fig. 16

SAFETY

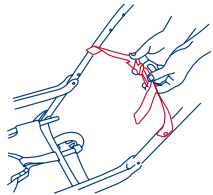


Fig. 21

PLATFORM - Safety Belt

- Secure the stand feature safety belt behind child and engage buckle (Fig. 21). This is the same safety belt you use to secure the rear infant car seat.

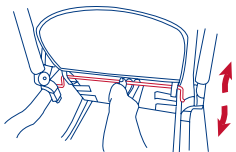


Fig. 22

TO RECLINE SEATS

FRONT SEAT

The front seat has a two position recline. To recline the seat, rotate the recline bar and press backward on the seat back. (Fig. 22) To place the seat in the upright position, press upward on the seat back while rotating the recline bar.


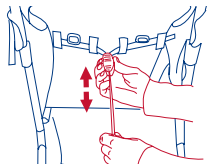


Fig. 23

⚠ WARNING: The upright position should be used only for a child that is at least 6 months old.

REAR SEAT

To recline the rear seat locate the plastic adjuster and squeeze the ends. Loosen or tighten the strap to your desired recline position. (Fig. 23)

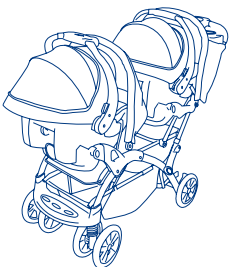

TO ATTACH INFANT CAR SEAT

To attach Baby Trend infant car seats, rotate child trays to the vertical position first. See rotate child tray for more details.

SAFETY

⚠ WARNING: When loading, car seat in REAR position first, then 2nd car seat in FRONT position. When unloading, remove FRONT car seat first then REAR car seat.

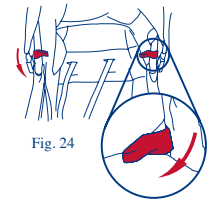


Fig. 24

⚠ WARNING: Avoid serious injury from falling, ALWAYS use the safety belt to secure both of FRONT and REAR car seats.

Attach the rear infant car seat:

Recline the back seat to the lowest position. Turn the red tabs inward on the stroller frame. (Fig. 24) Position the infant car seat, facing toward the rear of the stroller, so that the seat shell goes into the rear child tray and latches into place. (Fig. 25)

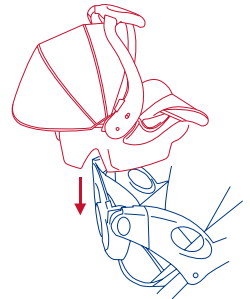


Fig. 25

Attach the front infant car seat:

Recline the front seat back. Position the infant car seat, facing toward the rear of the stroller, so the seat shell goes into the front child tray and latches into place. (Fig. 25)

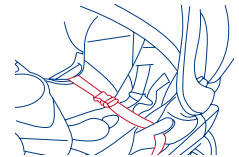


Fig. 26

Check that the infant car seat is firmly locked onto the child tray then **STRAP THE SAFETY BELT OVER THE CAR SEAT** through the seat belt slots on the infant car seat, connect the buckles together. (Fig. 26) Tighten the strap so the infant car seat fits snug and can't move.

IT IS VERY IMPORTANT THAT THE INFANT CAR SEAT STRAP IS ALWAYS TIGHTLY FASTENED AROUND THE INFANT CAR SEAT.

To remove infant car seat:

Squeeze the release handle located at the foot-end of the infant car seat and carefully lift upward. (Fig. 27)

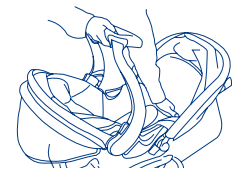


Fig. 27

JUMP SEAT

JUMP SEAT

To use jump seat, please remove the rear child tray, rear canopy and rear seat.

⚠ WARNING: The rear platform and jump seat are designed to accommodate a child who is at least 2 1/2 years old, has good balance and coordination, and is not over 40 inches tall.

To remove the rear child tray:
See page 5 for details.

To remove the rear canopy:
See page 6 for details.

To remove the rear seat:
Detach the recline strap from the frame by folding and sliding the strap through the "D-ring" located on the end of the strap (Fig. 28). Unbutton the upper (Fig. 28) and lower seat fabric from the frame (Fig. 29). The crotch buckle will fit through the slot. **DO NOT** remove the crotch strap from the seat.

⚠ WARNING: Do not use jump seat at this point. The harness strap must be adjusted before proper and safe use can commence.

To adjust the crotch strap:
Adjust the crotch strap for rear facing sitting position.

- Remove the jump seat pad, pull crotch strap towards the rear of the stroller so the crotch strap will be orientated closer to the edge of the jump platform (Fig. 30).

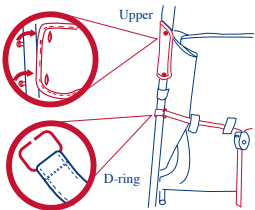


Fig. 28

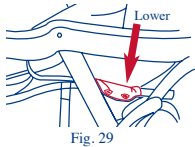


Fig. 29



Jump Seat Pad

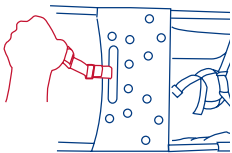


Fig. 30

- Feed the crotch buckle strap through provided slot (Fig. 31). Place jump seat pad over the jump seat. Button the jump seat pad to the stroller frame (Fig. 31).

To attach the rear seat, reverse the above steps.

SIT ON JUMP SEAT

Have the child sit on the jump seat facing backwards. Secure the child with the jump seat 3-point harness. Part of the 3-point harness is stored in the pocket on the back of the front seat. Put the seat belt around the child's waist, and buckle to the crotch strap (Fig. 32). Adjust the seat belt to be snug around the child's waist.

STAND ON THE PLATFORM

Position the child on the platform on the back of the stroller. Be sure child is standing facing forward and hands are holding frame. Secure the stand feature safety belt behind child and engage buckle (Fig. 33). Be sure that the child's feet are fully on the platform at all times.

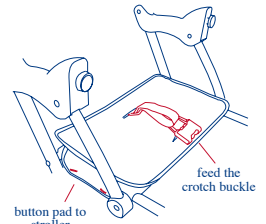


Fig. 31

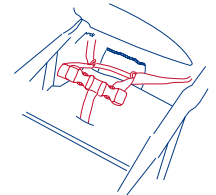


Fig. 32

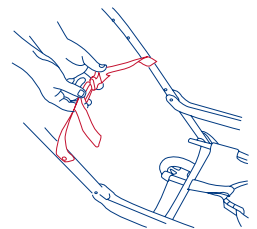


Fig. 33

CAUTION: Read the following section completely before folding your stroller!

⚠ WARNING: Care must be taken when folding and unfolding the stroller to prevent finger entrapment.

SEAT PAD

To clean the seat pad, use only mild household soap or detergent and warm water on a sponge or clean cloth.

OTHER

Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed.

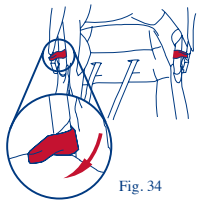


Fig. 34

TO FOLD STROLLER

- Close the canopy as described in the canopy section.
- Flip the carseat support tabs to the outside of the stroller frame before folding (Fig. 34).
- Pull stroller backward several inches to rotate the front wheels to the front. (Fig. 35)
- To fold the stroller slide the red fold lock with your thumb while squeezing the large red fold button in the center of the handle and push forward on the handle. (Fig. 36)

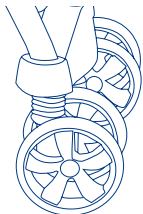


Fig. 35

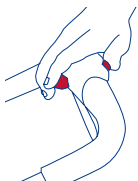


Fig. 36

Once the stroller begins to fold, release the red handle and push forward on the handle until the stroller is folded. Lock the release lever and the stroller will stand freely in the folded position.



IF YOU EXPERIENCE ANY DIFFICULTY IN USING THIS PRODUCT, PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-328-7363 BETWEEN THE HOURS OF 8:00 A.M. AND 4:30 P.M. PACIFIC STANDARD TIME FOR ASSISTANCE. PLEASE HAVE YOUR MODEL NUMBER AND MANUFACTURING DATE AVAILABLE WHEN YOU CALL. THIS INFORMATION CAN BE FOUND ON A SMALL STICKER ON THE INSIDE OF THE STROLLER FRAME.