

4358-6835
10.27.15

Safety 1st

Grow and Go Air™ 3-in-1 Car Seat

rear-facing child restraint

5-40 lb (2.3-18 kg) and 19-40 in. (48-101.6 cm)

forward-facing child restraint

22-65 lb (10.1-29 kg) and 29-49 in. (73.6-125 cm)
and at least 2 years old

booster seat

40-100 lb (18.1-45.4 kg) and 43-52 in.
(110.1-132.1 cm) and at least
4 years old

KEEP INSTRUCTIONS FOR FUTURE USE.

Read all instructions
before using this
child restraint.



Safety 1st



To see installation videos, scan the QR Code
or visit www.safety1st.com

Learn more about Air Protect at
www.safety1st.com/airprotect

©2015 Dorel Juvenile.

⚠ WARNING:

Failure to follow the warnings on the labels and in the
instruction manual can result in serious injury or death
to your child.

Important Symbols



Vehicle Belts

See pages 30-31 for vehicle belt information.



Lower Anchor Belt

See page 29 for lower anchor information and storage location.



Tether

See page 44 for Tether information.



Instruction Manual Storage

See page 2 for storage location.



To help you recognize instructions which are most critical to your child's safety, we use this symbol.

Failure to follow these warnings can result in the serious injury or death of your child.

Choosing Rear Facing, Forward Facing, or Booster Seat

Your child's height, weight, and age determine how your child restraint should be placed in the vehicle.

WARNING: Verify your child's weight and height (do not guess) before choosing the child restraint's position.












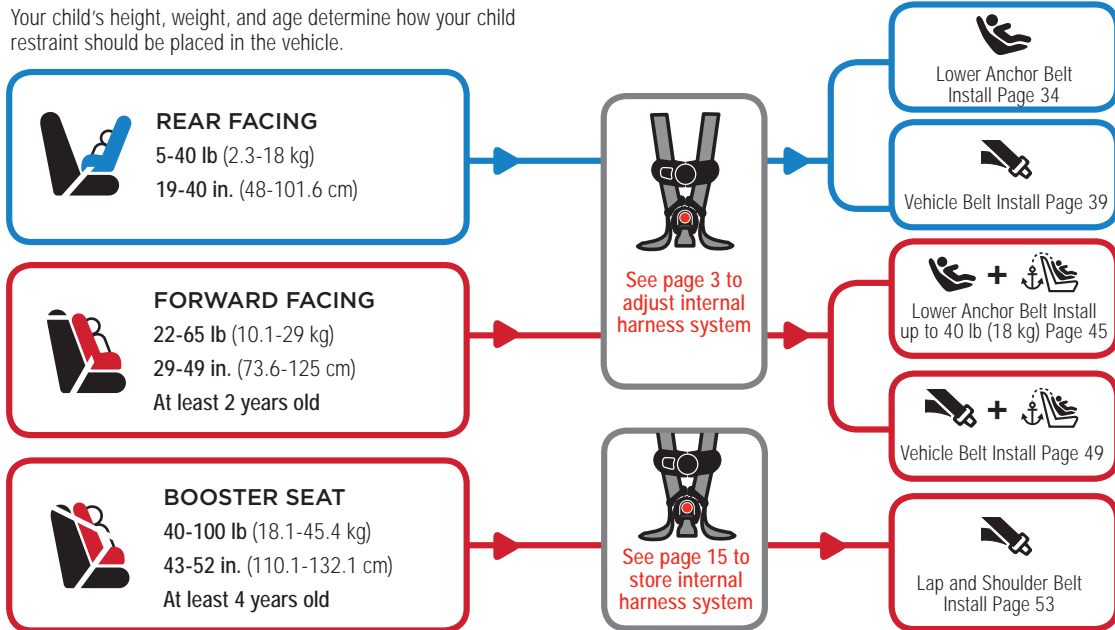



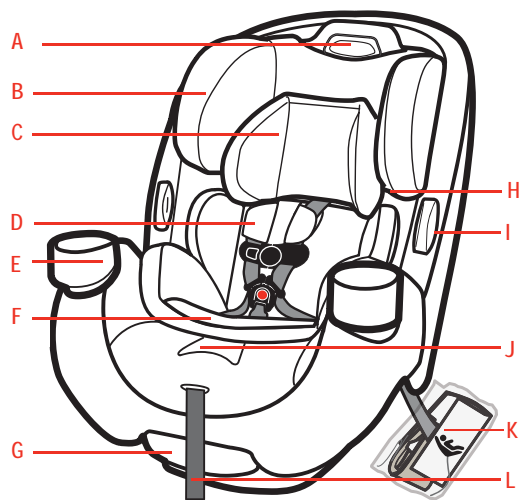


Table of Contents


 Getting Started	1
Parts of the Child Restraint.....	1
Prepare Child Restraint to Fit Your Child	3
How Does Your Child Fit?	5
Changing Position of Buckle.....	6
Adjusting Headrest/Harness Height	8
Harness System Adjustments for Smaller Infants.....	9
Securing Child in Child Restraint.....	12
 General Use	14
Reclining Child Restraint	14
Storing Harness System	15
Removing Seat Pad for Cleaning.....	19
Installing Harness System	22
Accessories on Select Models	25
 Safety Information	26
Child Restraint Use	26
Installation in Vehicle	26
Vehicle Seating Position	27
 Vehicle Information	28
Understanding Your Vehicle	28
Choosing Lower Anchor Belt or Vehicle Belts	29
Knowing Your Vehicle Belts.....	30
Aircraft Information	32
 Rear Facing	33
 Lower Anchor Belt Installation	34
 Vehicle Belt Installation	39
 Forward Facing	43
 Tether Use.....	44
 Lower Anchor Belt Installation	45
 Vehicle Belt Installation	49
 Booster Seat	52
 Lap and Shoulder Belt Installation	53
 Important Information	55
Using a Locking Clip	55
Dorel Juvenile Group Information.....	57
Registration and Safety Notices	58
Troubleshooting.....	59
Replacement Parts Order Form.....	60
Warranty.....	62

Parts of the Child Restraint


Front View



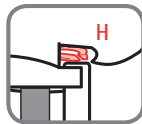
- A. Headrest/Harness Handle
- B. Adjustable Headrest
- C. Head Pillow (see page 25)
- D. Harness Covers (see page 25)
- E. Cup Holder
- F. Body Pillows (see page 25)
- G. Recline Handle
- H. Shoulder Belt-Positioning Guide (behind headrest pad)
- I. Easy Out Harness Holders
- J. Harness Release Lever (under flap)
- K. Lower Anchor Belt (see page 29)
- L. Harness Adjustment Strap



Side View

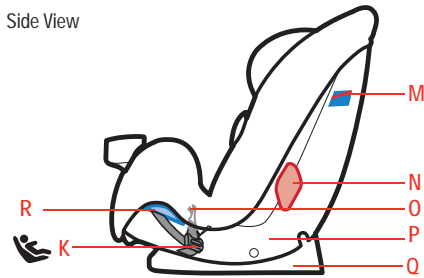


Harness System Detail

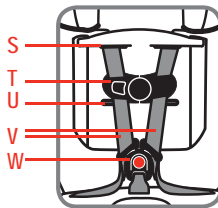

- M. Rear-Facing Level Line
- N. Forward-Facing Belt Path
- O. Lower Anchor Belt Attachment for Storage
- P. Shell (child restraint)
- Q. Base
- R. Rear-Facing Belt Path
- S. Upper Shoulder Harness Slots
- T. Chest Clip

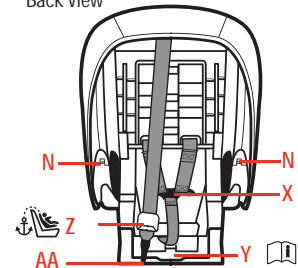Back View



- U. Lower Shoulder Harness Slots for Smaller Infants
- V. Harness Straps
- W. Buckle
- X. Splitter Plate
- Y. Instruction Manual Storage (in bottom of base)
- Z. Tether (see page 44)
- AA. Tether Attachment for Storage

1

2

Prepare Child Restraint to Fit Your Child



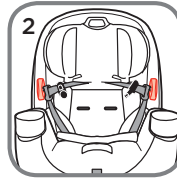
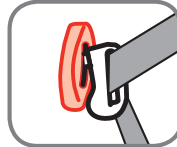
1. Fully Loosen Harness Straps
 Push down on harness release lever (under flap on front of seat pad) while pulling out on harness straps as shown.



2. Or the buckle tongues can be placed into the slots in the harness holders as shown.



2. Unbuckle Harness
 Press in towards the top of the red button.
 Pull buckle tongues out.



3. Release Chest Clip
 Press on chest clip release button and pull apart.

5. Place Child in Child Restraint to Determine Proper Harness Fit
 The child's bottom and back should be flat against the child restraint.
 See page 5 for fit guidelines.



4. Place Harness Straps Out of Way
 The Easy Out Harness Holders can be used two ways.
 1. You can secure the harness straps around them as shown.



How Does Your Child Fit?

Use the guidelines below to determine if the buckle and harness strap are in the right place for your child.

REAR FACING



Start in the 1st slot and adjust outward as your child grows. Buckle should be used in the slot closest to your child. The buckle should be not underneath or behind your child. 1st or 2nd slot **MUST** be used.



Always choose the shoulder harness slots that are closest to your child's shoulder height. Harness strap **MUST** be at or slightly below shoulders.

If the lower shoulder harness slots for smaller infants are above the child's shoulders with the headrest in the lowest position, **do not** use this child restraint.

FORWARD FACING



Start in the 1st slot and adjust outward as your child grows. Buckle should be used in the slot closest to your child. The buckle should not be underneath or behind your child. Any slot can be used.



Always choose the shoulder harness slots that are closest to your child's shoulder height. Harness strap **MUST** be at or slightly above shoulders.

If the upper shoulder harness slots are below the child's shoulders with the headrest in the highest position and the child weighs at least 40 lb (18 kg) and is at least 4 years old, you must convert the child restraint to a booster seat.

To change buckle position, see pages 6-7.

To adjust headrest/harness height, see page 8.

To make adjustments for smaller infants, see pages 9-11.

5

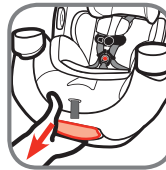
Changing Position of Buckle



1. Unbuckle Harness


Press in towards the **top** of the red button.

Pull buckle tongues out.




2. Fully Recline the Child Restraint

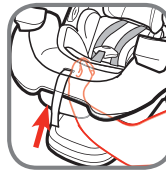Pull out on recline handle and push top of child restraint back.



3. Locate Buckle's Metal Retainer

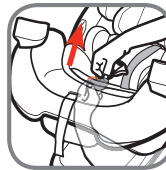Reach under the seat between the base and shell and through the recline handle.



4. Rotate Metal Retainer and Push It Up Through Shell and Pad

continued on next page

6

Adjusting Headrest/Harness Height



5. From Top of Seat, Pull Buckle Out of Shell and Pad



6. Insert Buckle's Metal Retainer into Slot Closest to Child

Buckle **MUST** face out. You **MUST** use the 1st or 2nd buckle slots when child restraint is used rear facing. Any slot can be used when forward facing.



7. Reach Under the Seat Between Base and Shell and Through Recline Handle

Pull metal retainer completely through pad and shell.

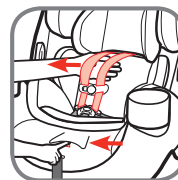


8. Check Buckle

Pull up on buckle to make sure it is secured. The buckle **MUST** not pull out.


WARNING: Failure to place buckle's metal retainer completely through pad and shell can result in serious injury or death.

7



1. Fully Loosen Harness Straps

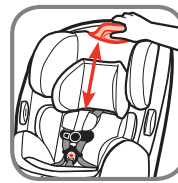Push down on harness release lever (under flap on front of seat pad) while pulling out on harness straps as shown.



2. To Adjust Headrest/Harness Height

Squeeze the button on the headrest/harness adjustment handle.

Move the headrest up or down to the proper height for your child. See page 5 for fit guidelines.

Release it into slot to lock. Make sure it is securely locked into place.

WARNING: Make sure that the harness height is correct for your child's size.



Do not use this child restraint rear facing if the top of your child's head is above the top of the child restraint's headrest.



Do not use this child restraint forward facing if the tops of your child's ears are above the top of the child restraint's headrest.

Failure to follow these steps can result in serious injury or death.

8



Harness System Adjustments for Smaller Infants

When using the lower shoulder harness slots for smaller infants, you **MUST** use the body pillow and the headrest **MUST** be in the lowest position.



1. With Buckle in the 1st Slot, Fully Recline the Seat

If you need to move the buckle to the 1st slot, see page 6.



2. Lift Pad Off of Front of Child Restraint



3. From Bottom of Seat, Pull Metal Retainer Down and Push It Up into Middle Slot As Shown



4. From Top of Seat, Lay the Metal Retainer Flat Against the Shell As Shown



5. Replace Pad and Check Buckle

Pull up on buckle to make sure it is secured. The buckle **MUST** not pull out.



6. Adjust the Headrest to the Lowest Position

The headrest **MUST** be in the lowest position.



7. Fully Loosen Harness Straps

Push down on harness release lever (under flap on front of seat pad) while pulling out on harness straps as shown.



8. From Back, Remove Harness Strap Loops From Splitter Plate



9. Pull Harness Straps Out of Upper Shoulder Harness Slots



10. Pull Body Pillow Forward Away from Seat

Thread harness straps through slots in pillow.

You **MUST** use the body pillow.

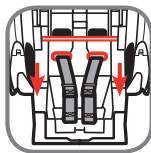
Securing Child in Child Restraint



11. Pull Bottom of Headrest Pad Off of Headrest

Thread harness straps through slots in headrest pad.

Thread harness straps through lower shoulder harness slots in headrest and through the slots in seat back (shell).



12. From the Back, Pull Harness Straps Through Shell

Harness straps **MUST** be in shoulder harness slots **BELOW** the metal bar as shown. **DO NOT** twist harness straps.




13. Attach 2nd Harness Strap Loops to Splitter Plate As Shown

Sewn ends of the harness strap loops **MUST** face towards you.

DO NOT twist harness straps or harness adjustment strap.

Make sure the same harness strap loops are fitted **COMPLETELY ON** both sides of the splitter plate.

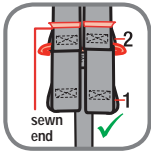Replace headrest pad around bottom of headrest.



Correct

⚠ WARNINGS: Harness system must be installed correctly. The harness strap must be returned to the upper shoulder harness slots as your child grows.

Failure to follow these steps can result in serious injury or death.

11

4358-6835 Grow and Go Air.indd 17-18



1. Place Child in Child Restraint

The child's bottom and back should be flat against the child restraint.

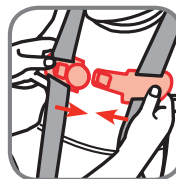
Position harness strap over child's shoulders and upper thighs.



2. Buckle Harness


Push buckle tongues into buckle until you hear them "click."

Pull up on harness strap to make sure buckle is locked.



3. Close Chest Clip

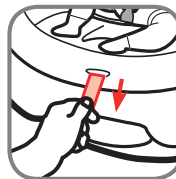Insert right half of chest clip into left half and snap together.



4. Tighten Harness

Pull on harness adjustment strap to tighten harness snugly.

continued on next page

12

10/29/15 3:33 PM

Reclining Child Restraint



5. Position Chest Clip

The chest clip must be placed at mid-chest (even with armpits) and away from the child's neck.



6. Check Harness Tightness

Try to pinch the harness at the shoulders vertically between index finger and thumb as shown.

If your fingers slip off, the harness is tight enough.

If you can pinch the harness strap, tighten more. The harness straps should be snug throughout their length.

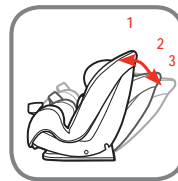
⚠ WARNINGS: Failure to fasten and tighten the harness system correctly may allow the child to be ejected from the child restraint in a crash or sudden stop causing serious injury or death.

Do not mistake comfort for safety. Harness system must be snugly adjusted.

A snug harness strap should not allow any slack. It lies in a relatively straight line without sagging. It does not press on the child's flesh or push the child's body into an unnatural position.

To Remove Child From Child Restraint:

1. Loosen Harness Strap
2. Unbuckle Harness
3. Release Chest Clip
4. Remove Child



This child restraint has 3 positions:

Rear Facing - 3 or 2

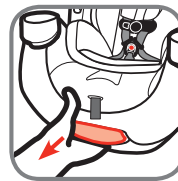
For children who cannot sit up unassisted, the level line on shell **MUST** be parallel with the ground using either position 3 or 2.

For children who can sit up unassisted, you may rotate the child restraint to be more upright.

Forward Facing - 1 Upright

Booster Seat - 1 Upright

NOTE: When forward facing, the reclined positions are to be used only to install the child restraint and booster seat flush against the vehicle seat back. Vehicle seat back must be upright.



How to Change Positions

To recline, pull out on recline handle and push top of child restraint back.

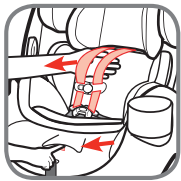
For upright, pull out on recline handle and pull top of child restraint forward.



Storing Harness System

Only store the harness system when converting child restraint into a booster seat.

To remove accessories, see page 25.



1. Fully Loosen Harness Straps

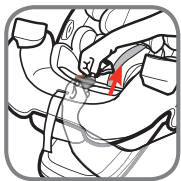
Push down on harness release lever (under flap on front of seat pad) while pulling out on harness straps as shown.



2. Unbuckle Harness

Press in towards the top of the red button.

Pull buckle tongues out.




3. Locate Buckle's Metal Retainer

Fully recline the child restraint and reach under the seat between the base and shell and through the recline handle. Rotate metal retainer and push it up through shell and pad.



4. From Top of Seat, Pull Buckle Out of Shell and Pad

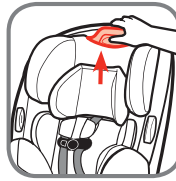Store the buckle in a safe place for future use.




5. Adjust Headrest to Highest Position




6. Pull Headrest Pad Off Bottom of Headrest As Shown



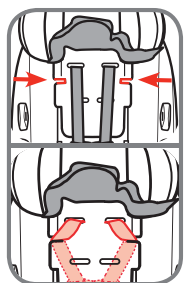
7. Undo Fasteners on Seat Pad As Shown



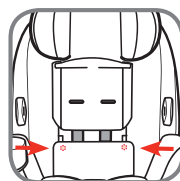8. Thread Harness Straps into Slots on Sides of Headrest As Shown



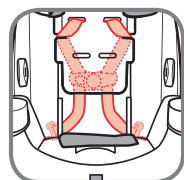11. Pull Headrest Pad Down and Wrap Around Bottom of Headrest
Attach fasteners on seat pad.



9. Place Chest Clip, Harness Straps, and Buckle Tongues Behind the Headrest and Seat Pad As Shown

Push chest clip up so it is behind the headrest.



10. Tighten Harness

Pull on harness adjustment strap to remove any slack from the harness system.

17

4358-6835 Grow and Go Air.indd 23-24

18

10/29/15 3:33 PM



Removing Seat Pad for Cleaning

You DO NOT need to remove the harness system to remove the pad from the shell.

To remove accessories, see page 25.



1. Unbuckle Harness

Press in towards the top of the red button.

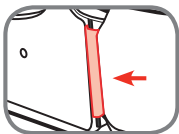
Pull buckle tongues out.



2. Adjust the Headrest to the Highest Position




3. At the Headrest/Harness Adjustment Handle, Pull the Fabric Tab Out from Between the Headrest and Headrest Foam As Shown




4. At the Back of the Headrest, Pull the Fabric Tab out from Slot in Headrest As Shown

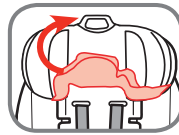
Repeat for other side.



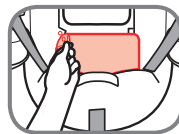
5. Starting from the Bottom, Gently Pull Headrest Pad off of Headrest



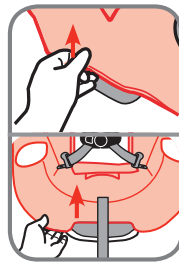6. Undo Fasteners on Seat Pad As Shown



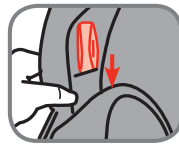7. Pull Pad Off Sides and Bottom of Shell



8. Pull Pad Down and Off of Bottom of Harness Holders

Pull up to remove completely.

Installing Harness System



9. From the Top, Pull Pad Off of Shell

⚠ WARNINGS: Do not use child restraint without the seat pad. Failure to do this can result in serious injury or death.

Cleaning Pad and Accessories

Machine wash all pieces separately with cold water on a gentle cycle. Make sure harness covers are closed so fastening strips are not exposed. Do not use bleach. Tumble dry separately for 10-12 minutes on low heat. Remove immediately.

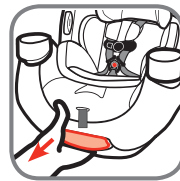
Cleaning Harness Strap

Spot clean using warm sudsy water and damp cloth.

Replacing Pad

Adjust the headrest to the highest position. Starting from the bottom, gently pull headrest pad onto headrest. Slide harness straps into slots in pad. Slide the fabric headrest tabs in slots on back of headrest and between the headrest and headrest foam by the headrest/harness adjustment handle.

Starting from bottom of child restraint, slip pad on shell. Pull harness adjustment strap through pad. Wrap pad around bottom and sides of shell. Push harness holders through slots in pad. Push pad behind headrest. Wrap around the top of shell. Attach fasteners.



1. Fully Recline the Child Restraint

Pull out on recline handle and push top of child restraint back.



2. Insert Buckle's Metal Retainer into Slot Closest to Child

Buckle **MUST** face out. You **MUST** use the 1st or 2nd buckle slots when child restraint is used rear facing. Any slot can be used when forward facing.



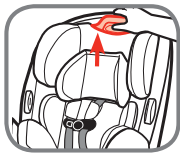
3. Reach Under Seat Between Base and Shell and Through Recline Handle

Pull metal retainer completely through pad and shell.




4. Check Buckle

Pull up on buckle to make sure it is secured. The buckle **MUST** not pull out.



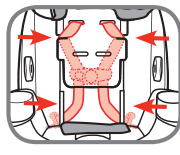5. Adjust Headrest to Highest Position



6. Undo Fasteners on Seat Pad and Pull Headrest Pad Off Bottom of Headrest

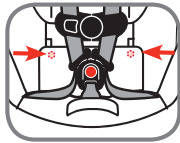
Unthread harness straps from slots on side of headrest.

Loosen harness straps.

Pull chest clip, harness straps, and buckle tongues out from behind the headrest and seat pad.

Slide harness straps into slots in headrest pad.

Attach seat pad fasteners.




If you have removed the harness straps from the splitter plate, and the buckle tongues and chest clip have been unthreaded from the harness straps, follow the steps below to rethread them.




1. Thread Buckle and Chest Clip

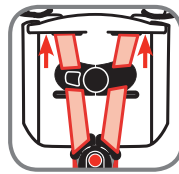Harness strap ends go through the **back** of buckle tongues and through the chest clip **front to back** as shown.



2. Thread Harness Straps into Shoulder Harness Slots

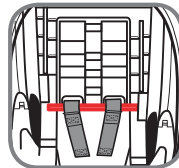If you will be using the lower shoulder harness slots for smaller infants, see pages 9-11.



3. From Back, Thread Harness Straps OVER Metal Bar

DO NOT twist harness straps.




4. Attach 1st Harness Strap Loops to Splitter Plate As Shown

Sewn ends of the harness strap loops **MUST** face towards you.

DO NOT twist harness strap or harness adjustment strap.

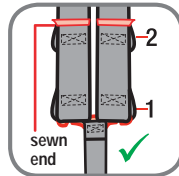Make sure the same harness strap loops are fitted **COMPLETELY ON** both sides of the splitter plate.



Correct

⚠ WARNINGS: Harness system must be installed correctly. Failure to follow these steps can result in serious injury or death.



Accessories on Select Models



Head Pillow

To remove head pillow, pull it up from behind the body pillow.

You must use the back body pillow in order to use the head pillow.

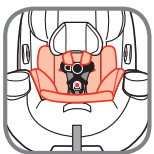


Harness Covers

Harness covers help provide comfort to the neck. If harness covers will not allow proper positioning of the chest clip or interfere with getting a tight enough fit for a smaller baby, remove and do not use.

Store until child is large enough to use these harness covers while maintaining a properly fitting harness.

To remove harness covers, pull the fastening strips apart and remove harness covers.



Body Pillows

When using the lower shoulder harness slots for smaller infants, you **MUST** use the body pillow.

To remove body pillow, pull buckle through the slot in bottom pillow and slide both pillows out from behind the harness straps.

Or if the lower shoulder harness slots were used, from the back of seat remove harness strap loops from splitter plate. From the front, pull harness straps out of shell and back body pillow. Pull buckle through slot in pillow. Rethread harness straps: For lower shoulder harness slots for smaller infants, see pages 9-11. For upper shoulder harness slots, see page 24.

Child Restraint Use



Do not use this child restraint unless the child is 5-100 lb (2.3-45.4 kg) and 19-52 in. (48-132.1 cm).

Never take your child out of the child restraint while the vehicle is moving.

Never leave child unattended.

Placing your child in a hot child restraint may result in burns.

Do not use a child restraint with damaged or missing parts.

Do not use cut, frayed or damaged harnesses.

Do not substitute parts or try to modify the child restraint in any way.

Do not lubricate buckles and fasteners.

Do not use any child restraint accessory except those approved by Dorel Juvenile Group.

Never allow any child to play with this child restraint; it is not a toy.

Do not remove or cover up any of the warning labels or other labels on the child restraint.

Read all instructions for additional warnings.

On the side of the child restraint there is a date of manufacture label. Do not use this child restraint more than 10 years after the date of manufacture.

Installation in Vehicle

Check the vehicle belt or lower anchor belt before each use. Use only if the belt is tightened properly and locked securely in place.

This child restraint should be securely belted in the vehicle even when not in use. In a crash or sudden stop, an unsecured child restraint could injure occupants.

Do not use a child restraint that has been in a crash. You must get a new child restraint.



Vehicle Seating Position



Never place a child rear facing in a seating position with an active frontal air bag.

Check the vehicle owner's manual for more information about air bag/child restraint use.



Use the child restraint only on vehicle seats that face forward.

Do not use on seats that face the sides or rear of the vehicle.



Use the center seating position if possible.

For vehicles without a back seat, refer to your vehicle owner's manual.

If you are not sure where to place the child restraint in your vehicle, consult your vehicle owner's manual, contact Dorel Juvenile Group Consumer Relations Department, or visit your local Child Passenger Inspection Station. Go to <http://www.safercar.gov/cpsApp/cps/index.htm> to find your closest station.



Children are safer when properly restrained in rear seating positions than in the front seating positions.

According to National Highway Traffic Safety Administration information, children in rear seating positions are statistically safer, whether you have air bags, advanced air bags, or no air bags at all.

To avoid your child being seriously burned, take the following precautions:

1. Park in the shade or where sun does not directly hit the child restraint.
2. Cover the child restraint with a sheet or blanket when not in use.
3. Check for hot seat and buckles before placing child in child restraint.

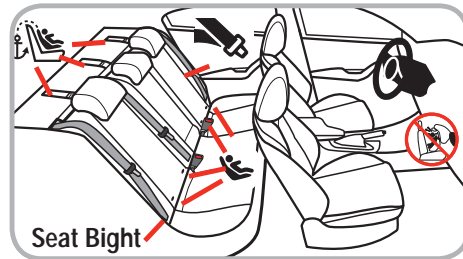
To help protect your vehicle seat's upholstery from damage, use a single layer towel underneath and behind child restraint.

27

Understanding Your Vehicle



Your vehicle's features may be considerably different than those pictured here.



Seat Bight

Consult your vehicle owner's manual to help identify your vehicle's specific features and locations.



Air Bags



Lower Anchors

For Lower Anchor Belt
Located in the seat bight



Tether Anchors

For Tether Strap
(Forward Facing with Internal Harness Only)

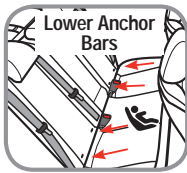


Vehicle Seat Belts

28



Choosing Lower Anchor Belt or Vehicle Belts




Lower Anchor Bars

The LATCH System

The lower anchors of LATCH (Lower Anchors and Tethers for Children) is a universal system for installing child restraints without using vehicle seat belts.


The lower anchor system can **ONLY** be used in vehicles that have the lower anchor bars installed in designated LATCH seating positions. Most vehicles manufactured after September 2002 are equipped with lower anchor bars.

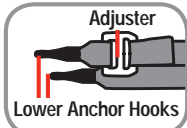Check your vehicle owner's manual to see which seating positions may be equipped with the LATCH system.



Adjuster
Lower Anchor Hooks

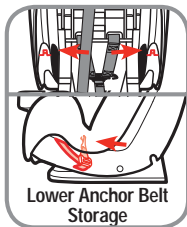When installing this child restraint with vehicle belts or when using as a booster seat, the lower anchor hooks and belt MUST be properly stored.



Lower Anchor Belt Storage

To store the lower anchor belt on this child restraint: Thread lower anchor belt through rear-facing belt path. Then attach hooks to storage attachments as shown. Gently pull free end of belt to remove slack.



Vehicle Belts

If lower anchors are not an option or your child weighs more than 40 lb (18 kg), you must use the vehicle seat belt system to install the child restraint.

There are some vehicle belts that will not work with a child restraint or will require special attention. Check your vehicle

owner's manual for specific instructions.

⚠ WARNINGS: When used correctly the lower anchor belt or vehicle belts are equally safe. Do not use both the lower anchor belt and vehicle belt at the same time.

Knowing Your Vehicle Belts



Review your vehicle owner's manual for vehicle seat belt use with child restraints. This is your best source for information concerning your vehicle.

Not all vehicle belts will work with this child restraint. This child restraint must be tightly locked in place at all times. You must determine if your vehicle's belts are compatible with this child restraint.

Vehicle Belts



• Automatic/Passive vehicle seat belts

You **MUST** have a lap belt to install any child restraint. An automatic (passive) shoulder belt may or may not have a separate lap belt.

• Do not use with inflatable seat belts

You may need to move the child restraint to another seating location or use only the lower anchor belt.

• Vehicle belts in center of the door or side panel

You must move the child restraint to another seating location.




• Vehicle belts that are in front of the seat bight

You may need to move the child restraint to another seating location.

• ELR (Emergency Locking Retractor) vehicle belts

These belts only lock in a sudden stop or crash, and do not properly secure a child restraint alone.



To determine if you have this type of belt, gently pull the belt all the way out of the retractor (spool), let it return several inches, then pull on it again. If it moves freely, it is an ELR belt. If it is

locked and will not allow any more belt to come out, it is a switchable retractor.

If you have an ELR lap and shoulder belt, review the "Vehicle Latch Plate" section on page 31 to see if you need a locking clip.

⚠ WARNING: ELR lap-only belts **MUST NOT** be used with this child restraint.



• **Switchable Retractor**

These belts switch from ELR to ALR (Automatic Locking Retractor). You **MUST** have the vehicle belts in the locking mode to use them.

With a switchable retractor, pull the shoulder belt all the way out to switch the retractor into the ALR mode before tightening.

Feed the slack back into the retractor while tightening.

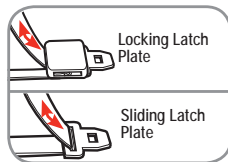
• **ALR (Automatic Locking Retractor)**

These belts lock after pulling the webbing out and letting the belt go back into the retractor an inch or two.

With an ALR belt, pull the belt all the way out before threading through the child restraint.

Vehicle Latch Plates

• **Check Latch Plates**



Grasp the tongue portion of the latch plate (the part that goes inside the buckle) and pull straight out, in line with the lap belt.

If the latch plate does not slide up and down the vehicle belt, you have a locking latch plate. You should not need to use a locking clip.

Check your vehicle owner's manual to determine the best way to lock a child restraint in place and whether the latch plate or retractor will accomplish this. If the latch plate slides up and down on the belt, and you have an ELR retractor, you **MUST** use a locking clip to install the child restraint. See pages 55-56.

You may not need to use the locking clip with a switchable or ALR retractor.

This restraint is certified for aircraft use when used with the internal harness.

This child restraint is not certified for use in aircraft when used as a booster seat because aircraft seats do not have shoulder belts.

Install the child restraint in a window seat to avoid blocking the aisle. If the aircraft lap belt is too short, ask the flight attendant for a belt extender.

Use only on forward facing aircraft seats.

Contact the airline for their specific policies.



Some airlines may ask to see a label stating that this child restraint is certified for aircraft use.

There is an airplane certification label located on the side of this child restraint as shown.

⚠ WARNING: Store the lower anchor belt and tether strap when using the aircraft belts.



Rear Facing Aircraft Installation

For rear facing installation follow pages 39-42.



Forward Facing Aircraft Installation

For forward facing installation follow pages 49-51.



Rear Facing

Lower Anchor Belt Installation



5-40 lb (2.3-18 kg)
19-40 in. (48-101.6 cm)



Lower Anchor Belt



Lap Belt



Lap/Shoulder Belt



⚠ WARNINGS: Never install a rear facing child restraint in the front seat of a vehicle equipped with an active frontal airbag.

This child restraint **MUST** always face the rear of the vehicle when the child is less than two years old.

Safety Tips

Make sure harness and buckle fit your child correctly before installing the child restraint. See pages 3-5.

Experts agree that children should remain rear facing as long as possible. In this child restraint, your child can remain rear facing up to 40 lb (18 kg) and up to 40 in. (101.6 cm).

⚠ WARNINGS: Do not use the lower anchor belt along with the vehicle lap or lap/shoulder belt.

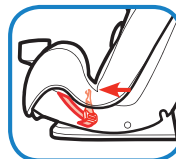
Check lower anchor belt before each use. Use only if the belt can be tightened properly and securely.

Do not fasten both lower anchor hooks on the same lower anchor bar in the vehicle.



Secure the tether hook when used rear facing. Attach the tether hook to storage attachment as shown and gently tighten to remove slack.

Failure to follow these warnings can result in serious injury or death.



1. Remove Lower Anchor Belt from Storage Location

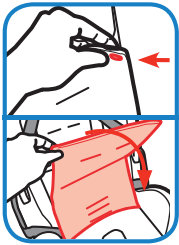
Or if the lower anchor belt was used forward facing, remove it from the forward-facing belt path so both hooks are on the same side of the seat.

continued on next page

34



2. Adjust Headrest to Highest Position and Remove Body Pillows




3. Undo Fasteners on Seat Pad and Pull Easy Belt Access Panel Down



4. Route Lower Anchor Belt Through Rear-Facing Belt Path
Do not twist belt.

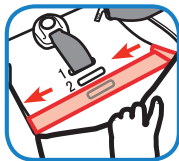The lower anchor belt adjuster can be on either side.




5. Pull Lower Anchor Belt Across to Opposite Side
Do not twist belt.

Belt **MUST** be in front of buckle strap. You **MUST** use the 1st or 2nd buckle slot. Do not place belt over child's legs.



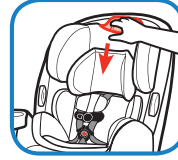
6. Finished Lower Anchor Belt Routing



7. Replace Easy Access Belt Panel


Attach seat pad fasteners and put body pillows back in seat.

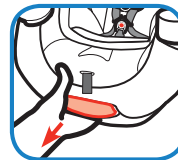Adjust the headrest/harness to the proper height for your child.
See page 5 for fit guidelines.



8. Recline the Child Restraint

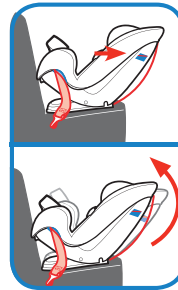Pull out on recline handle and push top of child restraint back.



9. Place Child Restraint Rear Facing in Back Seat

For children who cannot sit up unassisted, the level line on shell **MUST** be parallel with the ground using either position 3 or 2.

For children who can sit up unassisted, you may rotate the child restraint to be more upright.



10. Attach Lower Anchor Hooks to Vehicle's Lower Anchors

Review your vehicle owner's manual for lower anchor locations and lower anchor belt use.



11. Tighten Belt

Place hand in child restraint. Firmly push child restraint down and back towards the vehicle seat back while pulling free end of belt to tighten.



It may be easier to pull the free end of the belt parallel with the belt path through the Easy Access Belt Path panel in pad as shown.



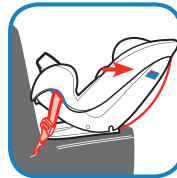
12. Check Belt Tightness

Hold child restraint at the belt path with your weakest hand. Push and pull from side to side. It should not move more than 1 in. (2.5 cm).

If it moves more than 1 in. (2.5 cm), you can try:

- A. Pulling the belt tighter.
- B. Reinstalling the child restraint.
- C. Changing to a different seating location.
- D. Switching to vehicle belt installation.

37





13. Secure Child in Child Restraint

Recheck level line.

Repeat steps 9-12 if not reclined correctly.

NOTE: You may need to place a large rolled towel(s) or foam pool noodle(s) under front of child restraint to help achieve the correct recline angle.

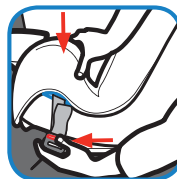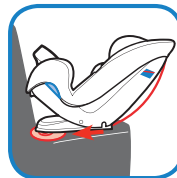Check often to be sure padding is still in place and the belt is tight.



To Release Lower Anchor Belt

Remove child from child restraint.

Remove tension from the lower anchor belt by pushing down on side of child restraint with the lower anchor belt adjuster. Then press the adjuster button to loosen belt.



Unhook from anchor by squeezing spring lever on hook, pushing hook back into the seat bight, and twisting. Then pull it out of the vehicle seat.

Store lower anchor belt when not in use. See page 29.

38

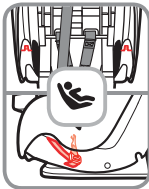


Vehicle Belt Installation

Safety Tips

Make sure harness and buckle fit your child correctly before installing the child restraint. See pages 3-5.

Experts agree that children should remain rear facing as long as possible. In this child restraint, your child can remain rear facing up to 40 lb (18 kg) and up to 40 in. (101.6 cm).




⚠ WARNINGS: Do not use the lower anchor belt along with the vehicle lap or lap/shoulder belt. Secure lower anchor hooks to storage attachments as shown when installing with vehicle belts.

Secure the tether hook when used rear facing. Attach the tether hook to storage attachment as shown and gently tighten to remove slack.




Check vehicle belt before each use. Use only if the belt can be tightened properly and locked securely in place.

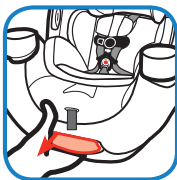Failure to follow these warnings can result in serious injury or death.




1. Recline the Child Restraint

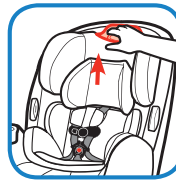
Pull out on recline handle and push top of child restraint back.



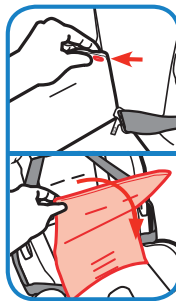2. Adjust Headrest to Highest Position and Remove Body Pillows



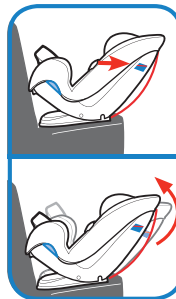
3. Undo Fasteners on Seat Pad and Pull Easy Belt Access Panel Down



4. Place Child Restraint Rear Facing in Back Seat


For children who cannot sit up unassisted, the level line on shell **MUST** be parallel with the ground using either position **3** or **2**.

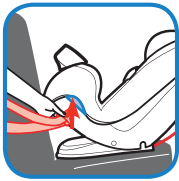For children who can sit up unassisted, you may rotate the child restraint to be more upright.



5. Route Vehicle Lap or Lap/Shoulder Belt Through Rear-Facing Belt Path

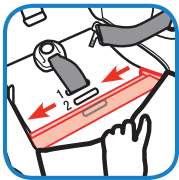
Review pages 30-31 and your vehicle owner's manual to determine what kind of vehicle belts you have and how to lock a child restraint in place.



6. Pull Vehicle Belt Across to Opposite Side

Do not twist belt. Belt **MUST** be in front of buckle strap.

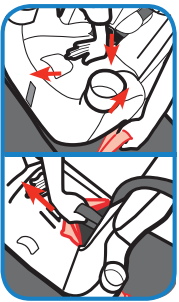You **MUST** use the 1st or 2nd buckle slot. Do not place belt over child's legs. **Buckle vehicle belt.**



7. Tighten Belt

Place hand in child restraint. Firmly push child restraint down and back towards the vehicle seat back while pulling shoulder belt or the free end of lap belt to tighten.

It may be easier to pull the shoulder belt or the free end of lap belt parallel with the belt path through the Easy Access Belt Path panel in pad as shown.



8. Check Belt Tightness

Hold child restraint at the belt path with your weakest hand.

Push and pull from side to side.

It should not move more than 1 in. (2.5 cm).

If it moves more than 1 in. (2.5 cm), you can try:

- A. Pulling the belt tighter.
- B. Reinstalling the child restraint.
- C. Changing to a different seating location.
- D. Switching to the lower anchor belt installation if lower anchors are available in your vehicle.

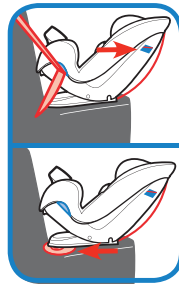


9. Replace Easy Access Belt Panel

Attach seat pad fasteners and put body pillows back in seat.

Adjust the headrest/harness to the proper height for your child.

See page 5 for fit guidelines.



10. Secure Child in Child Restraint

Recheck the level line. Repeat steps 2-9 if not reclined correctly.

NOTE: You may need to place a large rolled towel(s) or foam pool noodle(s) under front of child restraint to help achieve the correct recline angle. Check often to be sure padding is still in place and the belt is tight.



Forward Facing





22-65 lb (10.1-29 kg)
29-49 in. (73.6-125 cm)
At least 2 years old





 **Lower Anchor Belt with Tether**
 **up to 40 lb (18 kg)**



 **Lap Belt with Tether**
 **up to 65 lb (29 kg)**



 **Lap/Shoulder Belt with Tether**
 **up to 65 lb (29 kg)**

⚠ WARNINGS: In this child restraint your child **MUST** be at least 2 years old before they sit forward facing.

Safety Tip

Experts agree that children should remain rear facing as long as possible. In this child restraint, your child can remain rear facing up to 40 lb (18 kg) and up to 40 in. (101.6 cm).

43

4358-6835 Grow and Go Air.indd 49-50

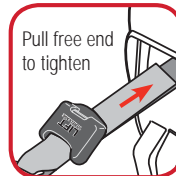
Tether Use



You **MUST** always attach, adjust, and secure the top anchorage (tether) strap when installing the child restraint forward facing with internal harness. Tethers improve the installation and stability of child restraints and reduce the risk of injury.


Attach the tether hook to the tether anchor designated by your vehicle manufacturer for that seating position. Check your vehicle owner's manual for more information.

If the seating position does not have a tether anchor, use a different seating position or see your dealer or a qualified mechanic and have one installed. The tether can greatly improve the performance of this child restraint.



Adjusting Tether Strap

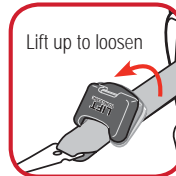To tighten: After the child restraint is locked into place with lower anchor belt or vehicle belt, push down on child restraint and gently pull on free end of tether.



To loosen: Lift up on tether lock adjuster and push it towards tether hook.



Storing Tether Strap

When installing rear facing, using as a booster, or when not in use, attach the tether hook to its storage attachment on the base as shown. Gently tighten to remove slack.

44

10/29/15 3:34 PM



Lower Anchor Belt Installation

Safety Tips

Make sure harness and buckle fit your child correctly before installing the child restraint. See pages 3-5.

Experts agree that children should remain rear facing as long as possible. In this child restraint, your child can remain rear facing up to 40 lb (18 kg) and up to 40 in. (101.6 cm).

⚠ WARNINGS: Do not use the lower anchors of the child restraint anchorage system (LATCH system) to attach this child restraint when restraining a child weighing more than 40 lbs (18 kg) with the internal harnesses of the child restraint.

The vehicle belt must be used for installation if your child weighs more than 40 lb (18 kg).

Do not use the lower anchor belt along with the vehicle lap or lap/shoulder belt.

Check the lower anchor belt before each use. Use only if the belt can be tightened properly and securely.

Do not fasten both lower anchor hooks on the same lower anchor bar in the vehicle.

Failure to follow these warnings can result in serious injury or death.

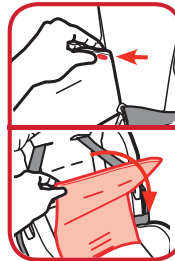


1. Remove Lower Anchor Belt from Storage Location


Remove it from the rear-facing belt path so both hooks are on the same side of the seat.



2. Adjust Headrest to Highest Position and Remove Body Pillows



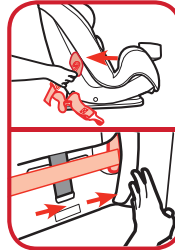3. Undo Fasteners on Seat Pad and Pull Easy Belt Access Panel Down




4. Route Lower Anchor Belt Through Forward-Facing Belt Path

Do not twist belt.

The lower anchor belt adjuster can be on either side.



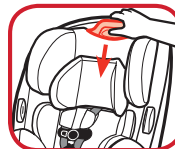5. Finished Lower Anchor Belt Routing



6. Replace Easy Access Belt Panel

Attach seat pad fasteners.

If you would like, you may put the body pillows back in seat.

Adjust the headrest/harness to the proper height for your child. See page 5 for fit guidelines.

continued on next page



7. Place Child Restraint Forward Facing Flush Against Vehicle Seat Back

Put the child restraint into position 1.

NOTE: Do not use any recline positions except to make the child restraint flush against the vehicle seat back. Vehicle seat back must be upright.



8. Loosely Attach Tether Hook to Vehicle's Tether Anchor

Check vehicle owner's manual for specific location.



9. Attach Lower Anchor Hooks to Vehicle's Lower Anchors

Review your vehicle owner's manual for lower anchor locations and lower anchor belt use.



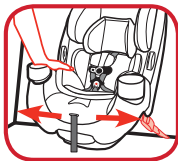
10. Tighten Belt

Place hand in child restraint.
Firmly push down while pulling free end of belt to tighten.
It may be easier to pull the free end of the belt parallel with the belt path through the Easy Access Belt Path panel in pad as shown.



11. Tighten Tether

Push firmly on the back of the seat and pull the tether strap to remove all slack and create tension on the strap.



12. Check Belt Tightness

Hold child restraint at the belt path with your weakest hand.
Push and pull from side to side.
It should not move more than 1 in. (2.5 cm).

If it moves more than 1 in. (2.5 cm), you can try:

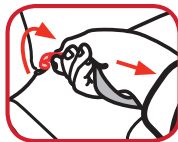
- A. Reinstalling the child restraint.
- B. Putting your knee in the seat and pulling the belt tighter.
- C. Changing to a different seating location.
- D. Switching to vehicle belt installation.



To Release Lower Anchor Belt

Remove child from child restraint.

Remove tension from the lower anchor belt by pushing down on side of child restraint with the lower anchor belt adjuster. Then press the adjuster button to loosen belt.



Unhook from anchor by squeezing spring lever on hook, pushing hook back into the seat bight, and twisting. Then pull it out of the vehicle seat.

Store lower anchor belt when not in use. See page 29.

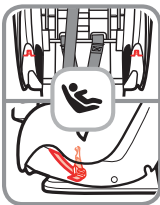


Vehicle Belt Installation

Safety Tips

Make sure harness and buckle fit your child correctly before installing the child restraint. See pages 3-5.

Experts agree that children should remain rear facing as long as possible. In this child restraint, your child can remain rear facing up to 40 lb (18 kg) and up to 40 in. (101.6 cm).




⚠ WARNINGS: Do not use the lower anchor belt along with the vehicle lap or lap/shoulder belt. Secure lower anchor hooks to storage attachments as shown when installing with vehicle belts.

Check vehicle belt before each use. Use only if the belt can be tightened properly and securely.

Failure to follow these warnings can result in serious injury or death.



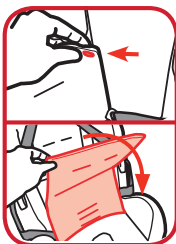1. Adjust Headrest to Highest Position and Remove Body Pillows



2. Undo Fasteners on Seat Pad and Pull Easy Belt Access Panel Down



3. Place Child Restraint Forward Facing Flush Against Vehicle Seat Back

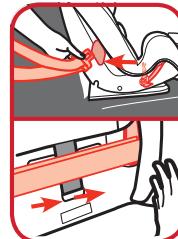
Put the child restraint into position 1.

NOTE: Do not use any recline positions except to make the child restraint flush against the vehicle seat back. Vehicle seat back must be upright.



4. Loosely Attach Tether Hook to Vehicle's Tether Anchor

Check vehicle owner's manual for specific location.



5. Route Vehicle Lap or Lap/Shoulder Belt Through Forward-Facing Belt Path

Review pages 30-31 and your vehicle owner's manual to determine what kind of vehicle belts you have and how to lock a child restraint in place.

Do not twist belt. Buckle vehicle belt.

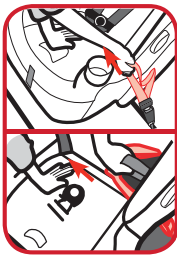


6. Replace Easy Access Belt Panel

Attach seat pad fasteners. If you would like, you may put the body pillows back in seat.

Adjust the headrest/harness to the proper height for your child. See page 5 for fit guidelines.

Booster Seat



7. Tighten Belt

Place hand in child restraint.
Firmly push down while pulling shoulder belt or the free end of lap belt to tighten.
It may be easier to pull the shoulder belt or the free end of the lap belt parallel with the belt path through the Easy Access Belt Path panel in pad as shown.



8. Tighten Tether

Push firmly on the back of the seat and pull the tether strap to remove all slack and create tension on the strap.



9. Check Belt Tightness

Hold child restraint at the belt path with your weakest hand.
Push and pull from side to side.
It should not move more than 1 in. (2.5 cm).

If it moves more than 1 in. (2.5 cm), you can try:

- Reinstalling the child restraint.
- Putting your knee in the seat and pulling the belt tighter.
- Changing to a different seating location.
- Switching to the lower anchor belt installation if lower anchors are available in your vehicle.

51

4358-6835 Grow and Go Air.indd 57-58



40-100 lb (18.1-45.4 kg)
43-52 in. (110.1-132.1 cm)
At least 4 years old

Lap/Shoulder Belt

You **MUST** store the harness system (see pages 15-18) and remove accessories (see page 25) to use as a booster seat.

⚠ WARNINGS: Do not use the harness system when using as a booster seat.



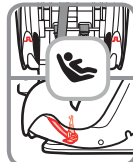
Do not use this booster seat if the tops of your child's ears are above the top of the booster seat's headrest.



Use only the vehicle's lap and shoulder belt system when restraining the child in this booster seat.

Do not use only the lap belt when using this seat as a booster seat.

The shoulder belt must always be adjusted snugly across the child's chest. **NEVER** place the shoulder belt under the child's arms.



Do not use the LATCH system when using as a booster seat. Secure lower anchor belt and tether strap to their storage locations.

Failure to follow these warnings can result in serious injury or death.



52

10/29/15 3:34 PM



Lap and Shoulder Belt Installation



1. Place Booster Seat Forward Facing Flush Against Vehicle Seat Back

Put the booster seat into position 1.

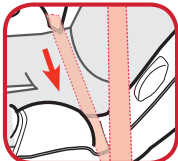
NOTE: Do not use any recline positions except to make the booster seat flush against the vehicle seat back. Vehicle seat back must be upright.



2. Place Child in Booster Seat

Tops of child's ears should be at the midpoint of the headrest, but never above the top of the headrest.

Adjust headrest if needed, see page 8.



3. Position Lap Belt on Child

Route the lap belt portion of vehicle belt through the booster belt path as shown.

The lap belt should lay snugly across the child's upper thighs and not on the stomach.



4. Buckle Vehicle Belt



5. Position Shoulder Belt on Child

Slide the shoulder belt under bottom of the Easy Out Harness Holder as shown.

Pull up on shoulder belt to tighten.

The shoulder belt should lay snugly across the center of the child's shoulder and across the chest and not on their face or neck.

To help position the shoulder belt, you may need to secure the shoulder belt in one of the two shoulder belt-positioning guides behind headrest pad.

NOTE: Use the shoulder belt positioning guide only if necessary to correctly position the shoulder belt on the child.

Check periodically to make sure your child has not moved out of position and loosened the shoulder belt.





Using a Locking Clip

You will rarely need to use a locking clip except in some older vehicles. Built-in child restraint locking systems have been required in vehicles since 1996, and many vehicles had these features even earlier. Review pages 30-31 and your vehicle owner's manual to determine if your vehicle belts require a locking clip.

If you need a locking clip immediately, they are likely available at an auto dealership, an auto store, or where you purchased this child restraint. You can also email us at consumer@djgusa.com or call us at 1-800-544-1108 for one.

A locking clip will not fix all types of seat belt problems. You **MUST** have a lap and shoulder belt to use a locking clip. **Do not use the locking clip when using this seat as a booster seat.**

For Rear Facing installation, follow pages 39-41 Warnings and Steps 1-5 before starting locking clip installation.

For Forward Facing installation, follow pages 49-51 Warnings and Steps 1-4 before starting locking clip installation.



1. Determine Locking Clip Position

Grasp both vehicle belts together just behind the latch plate to mark the position for locking clip.

Unbuckle the belt.


NOTE: If the latch plate ends up just at the belt path opening so you

cannot grasp the vehicle belt at the latch plate, grasp the vehicle belts on the opposite side of the child restraint, as close to the latch plate as possible.




2. Attach Locking Clip

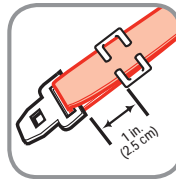Thread both portions of the vehicle belt onto the locking clip, as close to the latch plate as possible.



3. Position Locking Clip

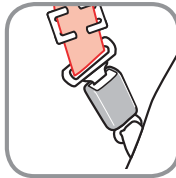It should be about 1 in. (2.5 cm) from vehicle belt's latch plate.



4. Rebuckle Vehicle Belt




5. Check Belt Tightness

Hold child restraint at the belt path with your weakest hand.

Push and pull from side to side.

If it moves more than 1 in. (2.5 cm), try reinstalling the child restraint or try another seating location.



When installed rear facing, recheck the level line.



When installed forward facing, make sure to tighten the tether strap.

Remove the locking clip when the seat belt is not being used with a child restraint.

Dorel Juvenile Group Information

Thank you for choosing this child restraint. The DJG family is committed to creating child restraints with the most comfort and convenience available today.

Remember, parents are a child's first teachers and examples. If you always buckle your seat belt, your child will think it is the natural thing to do. Make it a firm rule that the vehicle does not go until everyone is buckled up. Make no exceptions.

No one can predict if use of a child restraint will prevent injury or death in a particular crash. However, when combined with careful driving, proper use of a child restraint can lower a child's risk of injury or death in most crashes.

Your child's safety is worth the time it will take to read and follow these instructions. After reading, if you still have questions or have any concerns with this child restraint, please contact our Consumer Relations Department at:

Website: www.safety1st.com

Email: consumer@djgusa.com

Telephone: 1-800-544-1108

M-TH from 8 A.M. to 6 P.M. EST
FRI from 8 A.M. to 4:30 P.M. EST

Mailing Address:

Dorel Juvenile Group, Inc.
Consumer Relations Department
P.O. Box 2609
Columbus, IN 47202-2609

Fax: 1-800-207-8182

Registration and Safety Notices

Please complete the postage-paid registration card that came with your child restraint, and send it to us. Child restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall. Send your name, address, email address if available, the restraint's model number, and manufacturing date to:

Dorel Juvenile Group, Inc.
Consumer Relations Department
PO Box 2609
Columbus, IN 47202-2609

or call 1-800-544-1108 or register online at www.djgusa.com/registration/carseat/us.

For recall information, call the U.S. Government's Vehicle Safety Hotline at 1-888-327-4236 (TTY: 1-800-424-9153), or go to <http://www.NHTSA.gov>.

Consumer: Just fill in your name, address and email. Please print (use dark ink).

Your Name _____

Your Street Address _____

City _____ State _____

Model Number Model Number AB123CDE	Line Code Line Code S1 CARSEAT	Manufacture Date Manufacture Date 01/22/2015
---	---	---

L#11 B265035

Example of model number, manufacture date, and line code.



If you don't have the card or if your address changes, you will find the model number, manufacture date, and line code on the label located on side of shell.

Troubleshooting

- 1. Locate a Child Safety Seat Inspection Station for hands on training on how to use your child restraint:** Visit your local Child Passenger Inspection Station or go to <http://www.safercar.gov/cpsApp/cps/index.htm> to find your closest station.
- 2. If the child restraint buckle or harness release lever sticks or you cannot get the straps tight enough around child:** DO NOT LUBRICATE. Check around lever and retractor for dropped food, sticky spilled drinks, dirt, leaves, etc. Clean with warm water and/or remove object with tweezers. If you cannot get the harness to adjust and remain tight with the buckle securely locked, do not use the child restraint.
- 3. If you cannot insert the buckle tongues into buckle, switch sides and try again.**
- 4. If your harness twists:** Straighten the harness each time you put your child in the child restraint to help prevent twisting. Lock the buckle and tighten harness so it will be ready for next use.

Replacement Parts Order Form

Complete the form. Your model number and manufacturer date code **MUST** be included on the form to ensure proper replacement parts. The codes can be found on a label on side of child restraint. Payment in U.S. dollars must accompany your order. Choose parts needed from the list on the next page. Return the form with payment to:

Dorel Juvenile Group, Inc.
Consumer Relations Department
P.O. Box 2609
Columbus, IN 47202-2609

Fax orders to: 1-800-207-8182

Please make money orders payable to Dorel Juvenile Group, Inc. Fill in the area on the next page to charge credit card. (Visa or MasterCard **only**). We do not accept cash, personal checks, or other credit cards. All outside of U.S. and Canada **MUST** use credit card.

Ship To: (Please Print)

Name: _____

Address: _____

City: _____

State/Province: _____ **Zip:** _____

Telephone: _____

Email Address: _____

We **MUST** have this information:

Model Number (8 to 9 characters): _____

Manufacture Date (mm/dd/yyyy): _____

Replacement Parts List

NOTE: If requested color is not available, similar color will be substituted. Prices are subject to change.

Part	Cost	Qty	Total Cost
Buckle Assembly.....	\$7.99	\$.....
Seat Pad Set.....	\$99.00	\$.....
Chest Clip.....	\$1.50	\$.....
Tether.....	\$6.00	\$.....
Lower Anchor Belt.....	\$7.99	\$.....
Instructions.....	\$0.00	\$.....
Locking Clip.....	\$2.50	\$.....

Merchandise Total: \$.....

Shipping and handling: \$.....

Up to \$25.00.....	\$5.95	\$100.01 to \$150.00.....	\$10.95
\$25.01 to \$50.00.....	\$6.95	\$150.01 to \$200.00.....	\$11.95
\$50.01 to \$75.00.....	\$8.95	\$200.01 and up.....	\$13.95
\$75.01 to \$100.00.....	\$9.95	Outside Continental USA.....	\$10.00

Sales Tax \$.....

(Arizona, California, Georgia, Indiana, Missouri, South Carolina, and Texas residents add applicable sales tax.)

Grand Total..... \$.....

No shipping and handling on instructions for quantities under 6. Add \$.50 for each instruction over 6, then add applicable shipping and handling.

Fill Out For Credit Card

q Visa q MasterCard

Card Exp. Date:

Cardholder's Name:

Card Number:

Signature:

61

4358-6835 Grow and Go Air.indd 67-68

Warranty

Dorel Juvenile Group, Inc. (DJG) warrants this product to the original retail purchaser as follows:

This product is warranted against defective materials or workmanship for one year from the date of original purchase. **An original receipt is required to validate your warranty.** DJG will, at its option, provide replacement parts or replace this product. DJG reserves the right to substitute if the part or model has been discontinued.

To make a claim under this warranty you may email us at consumer@djgusa.com; fax us at 1-800-207-8182 24 hours a day; write to DJG, Consumer Relations Department, P. O. Box 2609, Columbus, IN 47202-2609; or call 1-800-544-1108 from 8:00 a.m. to 6:00 p.m. EST Monday through Thursday and from 8:00 a.m. to 4:30 p.m. on Friday.

Proof of purchase is required and shipping charges are the responsibility of the consumer.

Warranty Limitations: This warranty does not include damages which arise from misuse or abuse of this product.

Limitation of Damages: The warranty and remedies as set forth are exclusive and in lieu of all others, oral or written, expressed or implied. In no event will DJG or the dealer selling this product be liable to you for any damages, including incidental or consequential damages, arising out of the use or inability to use this product.

Limitation of warranties and other warranty terms and state law rights:

Any implied warranties, including implied warranties of the merchantability and fitness for a particular purpose, shall be limited to the duration and terms of the express written warranty. Some states do not allow limitations as to how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

This warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Neither DJG nor the dealer selling this product authorized any person to create for it any other warranty, obligation, or liability in connection with this product.

62

10/29/15 3:34 PM

CUT ON DOTTED LINE