



KEEP INSTRUCTIONS FOR FUTURE USE. Read all instructions before using this car seat.

WARNING: Failure to follow the warnings on the labels and in the instruction manual can result in serious injury or death to your child.

Overview

Welcome to the Maxi-Cosi family and thank you for choosing this car seat, also known as a child restraint!

To help you get started using your child's new car seat, here are the 4 main tasks you'll need to complete.



Measure Your Child



Adjust the Car Seat to Fit Your Child



Install the Car Seat into Your Vehicle




Secure Your Child in the Car Seat

Your child's safety is worth the time it will take to read and follow these instructions.

Ready? Let's go!

Pages 1-4 will introduce you to the parts of the car seat.

Page 78 has our contact information. If at any point you would like assistance, please feel free to reach out to us.

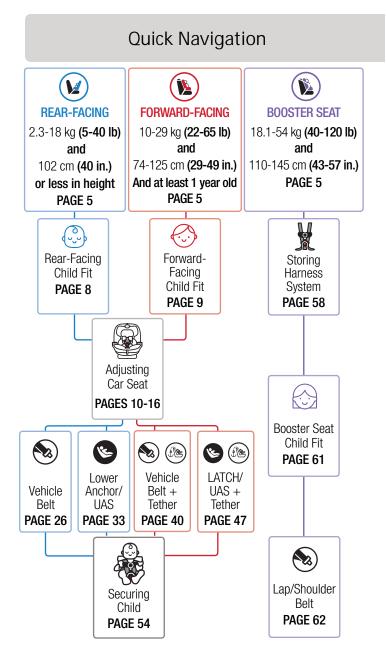

Contents

Getting Started

2

K.

Â	Parts of the Car Seat	1
Y	Accessory Use	3
	Choosing Car Seat Mode	5
	Preparing Car Seat for Child Fit	6
رت ترت	Rear-Facing Child Fit	8
	Forward-Facing Child Fit	9

Making Adjustments to Car Seat

Changing Headrest/Harness Height10
Changing Buckle Position
Changing Buckle Position for Smaller Infants14
Reclining the Car Seat
Changing Torso Position

Choosing LATCH/UAS or Vehicle Belt

LATCH: Lower Anchor/UAS Use	17
Vehicle Belts	19
Tether Use	23

Installation in Vehicle

	Rear-Facing Mode	25
	Rear-Facing Vehicle Belt Install	26
	Rear-Facing LATCH: Lower Anchor/UAS Install	33
	Forward-Facing Mode	39
	Forward-Facing Vehicle Belt + Tether Install	40
	Forward-Facing LATCH: Lower Anchor/UAS + Tether Install	/17
	II IOLAII	

Securing Child in Car Seat54	
Booster Seat	
Booster Seat Mode	
Storing Harness System	R:
Booster Seat Child Fit	
Lap/Shoulder Belt Use	C C

Car Seat Pad Use and Care


Removing Car Seat Pads for Cleaning	l	
Cleaning and Installing Car Seat Pads67		

Safety InformationAircraft Information69Replacement and Expiration of Car Seat70Child Restraint Use71Installation in Vehicle71Transport Canada Regulations71Vehicle Seating Position72USA Registration and Safety Notices73CAN Registration and Safety Notices74

Additional Information

Warranty75	
Troubleshooting76	
Replacement Parts List77	
Dorel Juvenile Group Information78	



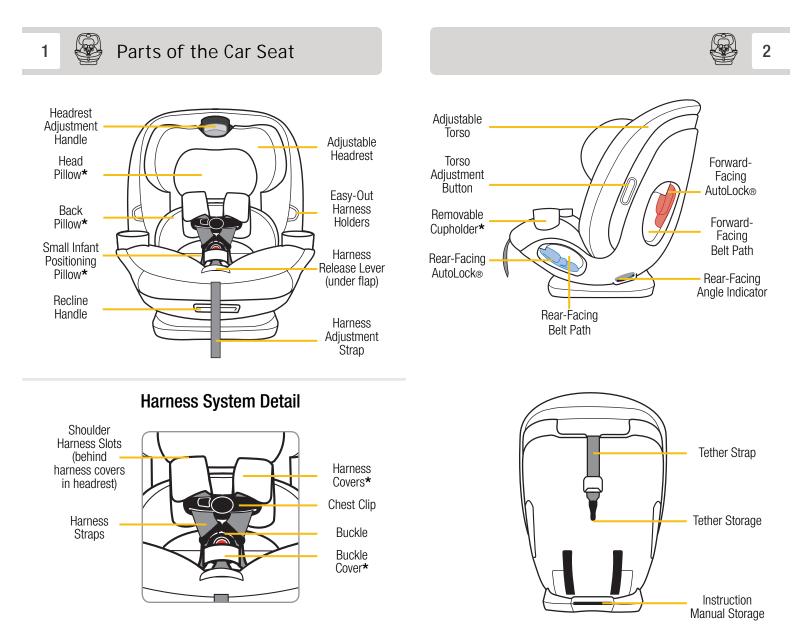

*See pages 3 & 4 for Accessory Use.

*See pages 3 & 4 for Accessory Use.



Accessory Use



Harness Covers

Harness covers help provide comfort to the neck. If the harness covers will not allow proper positioning of the chest clip or interfere with getting a tight enough harness fit for a smaller baby, remove and do not use.

Store until your child is large enough to use these harness covers while maintaining a properly fitting harness.

To remove harness covers, pull the fastening strips apart and pull them off of the harness strap.



Buckle Cover

To remove buckle cover, slide the ends out of the buckle strap slot in pad. Pull up and off of the buckle.

To install buckle cover. slide buckle cover over buckle and tuck ends of buckle cover into buckle strap slot in pad.



For Use in Rear-Facing or Forward-Facing Mode



Head and Back Pillow

The head and back pillow must be used together.

To remove head pillow, pull it out from behind the back pillow.

To remove back pillow, loosen the harness straps and slide pillow out from behind the harness straps.



Only For Use in Rear-Facing Mode



Back Pillow

Side View

Small Infant Positioning Pillow

When used, the small infant positioning pillow must be used with the back pillow as shown.

This pillow helps position your infant in the seat in order to achieve proper harness fit.

To determine if the pillow is needed:

1. Place headrest in lowest position. **2.** Place infant in car seat without the pillow. **3.** Make sure the infant's bottom and back are flat against the car seat.



Do Not Use **Pillow** if Shoulder Harness Slots are At or Below Shoulders

Check often to see how much your infant has grown. Remove the infant pillow once they can sit in the car seat without the infant pillow and the harness slots are at or below their shoulders AND you can still achieve a snug harness fit.

To learn how to check harness tightness, see pages 54-56.



Only For Use in Rear-Facing Mode

Removable Cupholders

The cupholders are top-rack dishwasher safe.

To remove cupholder, twist the cupholder counterclockwise. Pull it out of slot in shell.

To install cupholder, align tabs on bottom of cupholder with slots in shell. Twist clockwise to lock in place.



Choosing Car Seat Mode

Your child's height, weight, and age determine how the car seat should be placed in the vehicle. Please talk to your doctor about the best option for your child.

AWARNING: Verify your child's weight and height (do not guess) before choosing the car seat's mode.



REAR-FACING MODE

2.3-18 kg (5-40 lb) and

102 cm (40 in.) or less in height

Children up to 1 year of age must ride rear-facing.

The American Academy of Pediatrics recommends that children remain rear-facing until they are at least 2 years old.

In this child restraint, your child can remain rear-facing up to 18 kg (40 lb) and up to 102 cm (40 in.).



FORWARD-FACING MODE

10-29 kg (22-65 lb) and 74-125 cm (29-49 in.) and

At least 1 year old



BOOSTER SEAT MODE


18.1-54 kg (40-120 lb) and 110-145 cm (43-57 in.)

The American Academy of Pediatrics recommends that children remain in a five-point harness until they outgrow their forwardfacing harnessed child restraint.

This typically occurs around age 4, but some children outgrow them sooner and others not until later.


Preparing Car Seat for Child Fit






Fully Loosen Harness Straps

Push down on harness release lever (through opening in pad) while pulling out on harness straps as shown.

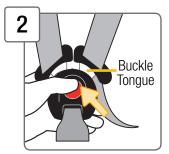

Unbuckle Harness

Press in towards the **top** of the red button to release the buckle tongues.

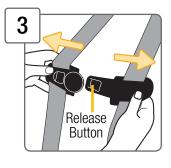


Release Chest Clip

Hold each side of the chest clip and press on the release button with your thumb and pull apart.

continued on next page

6



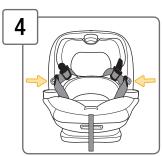

Place Harness Straps Out of the Way

Slide the buckle tongues into the Easy-Out Harness Holders as shown.



Head Position

Rear-Facing Child Fit

The top of your child's head **must be at least 2.5 cm** (1 in.) below the top of the car seat's headrest.



Harness Strap Position


The harness strap **must be at or** slightly below the shoulders; never above.



Place Child in Car Seat to Determine Proper Harness Fit

The child's bottom and back should be flat against the car seat.

For Rear-Facing child fit, see page 8. For Forward-Facing child fit, see page 9.

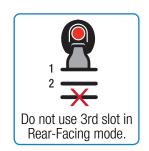

Buckle Position

Buckle must be used in either the **1st or 2nd slot**. Choose the slot closest to your child.

The buckle should not be underneath or behind your child.

Need to make adjustments? To change headrest/harness height, see page 10. To change buckle position, see pages 11-13.






Forward-Facing Child Fit



Head Position

The tops of your child's ears **must be below** the top of the car seat's headrest.

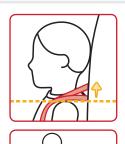

Harness Strap Position

The harness strap **must be at or** slightly above the shoulders; never below.

Max Seated Shoulder Height

In this car seat, the maximum seated shoulder height is 46 cm (18 in.).

To measure your child's seated shoulder height: have them sit on the floor with their back flat against a wall. Then measure from the floor up to the top of their shoulder.

Max Seated

Shoulder Height

Buckle Position

Buckle can be used in **any slot**. Choose the slot closest to your child.

The buckle should not be underneath or behind your child.

Need to make adjustments?

46 cm

(18 in.)

To change headrest/harness height, see page 10. To change buckle position, see pages 11-13.

Changing Headrest Harness Height



Changing Headrest/ Harness Height

Squeeze the headrest adjustment handle.


Move the headrest up or down to the proper height for your child.

Release headrest adjustment handle to lock in place.


Make sure it is locked securely.

For Rear-Facing child fit, see page 8.

For Forward-Facing child fit, see page 9.

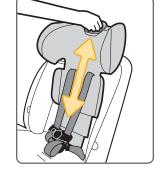


11 P Changing Buckle Positio

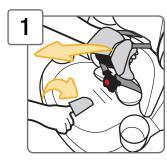


Fully Loosen Harness Straps

Push down on harness release lever (through opening in pad) while pulling out on harness straps as shown.

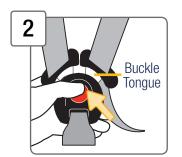

Unbuckle Harness

Press in towards the **top** of the red button to release the buckle tongues.

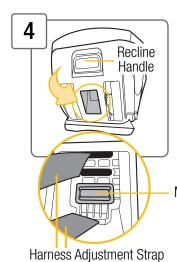


Locate the Buckle's Metal Retainer


The buckle's metal retainer is located in the opening below the recline handle.

Push the harness adjustment strap to the side to fully reveal the metal retainer.

Metal Retainer

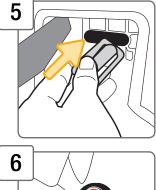


Rotate Metal Retainer and Push It Up Through Buckle Slot in Shell

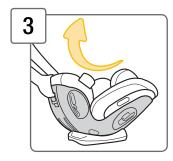

Fully Recline the Car Seat

Place one hand on the back of the car seat.

With your other hand, squeeze the recline handle and rotate the car seat until it is fully reclined.

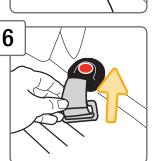

From Top of Seat, Pull Buckle Out of Shell and Pad


continued on next page

12

 \mathbb{P}

8

R

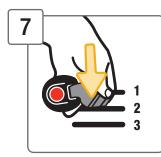

Insert Buckle's Metal Retainer into Slot Closest to Child

Rear-Facing Mode: You **must** use the 1st or 2nd buckle slots.

Forward-Facing Mode: Any slot can be used.


Pull Buckle's Metal Retainer Completely Through Pad and Shell

Changing Buckle Position for Smaller Infants

14

R

If you cannot achieve a snug harness fit for your infant, make these adjustments.



2

Shown, Pull Up Front of Car Seat Pad If you need to move the buckle to

the 1st slot, see pages 11-13.

With Buckle in the 1st Slot As

From Bottom of Car Seat, Pull Metal Retainer Towards You and Push It Up into the Middle Slot As Shown

9

Check Buckle

Pull up on buckle to make sure it is secured.

The buckle $\ensuremath{\textit{must}}\xspace$ not pull out.

If you cannot achieve a snug harness fit for your infant, see page 14.

To learn how to check harness tightness, see pages 54-56.

WARNING: Failure to place buckle's metal retainer completely through pad and shell can result in serious injury or death.

3

From Top of Car Seat, Lay the Metal Retainer Flat Against the Shell As Shown



Tuck Car Seat Pad Back Around Front of Car Seat and Check Buckle


Pull up on buckle to make sure it is secured.

The buckle must not pull out.

WARNING: Failure to place buckle's metal retainer completely through pad and shell can result in serious injury or death.





This car seat has multiple positions.



On the base, there are labels that call out the recline positions you will need to use to install this car seat in different modes.

Rear-Facing Mode





as possible.

Forward-Facing

Use any **blue** position that will put the Rear-Facing Angle Indicator ball seat as flush against in the blue zone. the vehicle seat back

Use either red position that will make the back of the car

Booster Seat


Mode

Use the fully upright purple position.



You may adjust to Position 2 as your





To Change Positions:

Push in on torso adjustment buttons on both sides of the car seat while sliding the adjustable torso up or down.

Release the buttons to lock the torso in place. Hold the sides of the torso and move it up and down to make sure it is securely locked in place.







To Recline: Place one hand on the back of the car seat. With your other hand, squeeze the recline handle. The car seat will rotate in the base. Release the recline handle to lock the seat into place.

For More Upright: Place one hand on the back of the car seat. With your other hand, squeeze the recline handle and pull top of car seat forward. Release the recline handle to lock the seat into place.

15




16



or Position 2

child grows.



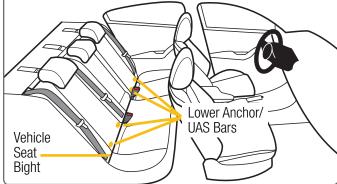

Your vehicle's features may be considerably different than those pictured here.

The lower anchors of LATCH (Lower Anchors and Tethers for CHildren) or UAS (Universal Anchorage System) is a universal system for installing child restraints without using vehicle seat belts.

The lower anchor/UAS can ONLY be used in vehicles that have the lower anchor/UAS bars installed in designated seating positions. Most vehicles manufactured after September 2002 are equipped with lower anchor/UAS bars.

Check your vehicle owner's manual to see which seating positions may be equipped with LATCH: lower anchor/UAS bars.


WARNINGS

Do not use both the lower anchor/UAS belt and vehicle belt at the same time.

When used correctly the lower anchor/UAS belt or vehicle belts are equally safe.



Storage Location

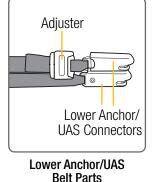


15

18

To Remove Lower Anchor/UAS Belt from Storage Location on Car Seat:

1. Lift up the front of the car seat pad.

2. Press the red release button on each connector, then pull the connectors out of the openings in shell.

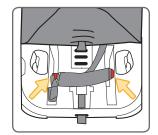

Lower Anchor/UAS Belt Storage Location

To Store Lower Anchor/ UAS Belt:


When using vehicle belts, using the booster seat mode, or when the car seat is not installed in a vehicle, the lower anchor/UAS belt must be properly stored in its storage location.

Attach the connectors to the bars in the openings in the shell as shown.

Gently tighten to remove slack.



Vehicle Belts

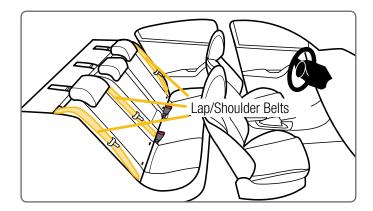


Your vehicle's features may be considerably different than those pictured here.

If lower/UAS anchors are not an option or if your child weighs more than 15.9 kg (35 lb) for **Rear-Facing** or 18 kg (40 lb) for **Forward-Facing**, you must use the vehicle seat belt system to install the child restraint.

Not all vehicle belts and seating positions will work with child restraints.

Please go through the following steps to understand how to lock a child restraint in Rear-Facing or Forward-Facing mode with a vehicle belt.

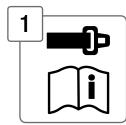

You MUST Review Your Vehicle Owner's Manual

Your vehicle owner's manual will let you know which vehicle belts and seating positions child restraints can be installed in.



Determine How the Child Restraint Will Be Locked Into Place

The vehicle belt **must not** loosen after tightening. This means there needs to be a way to lock the vehicle belt.

The ways this can be done are:

- By using this car seat's built-in AutoLock (see step 3); OR
- By using the seat belt's retractor (see step 4); **OR**
- By using the seat belt's latch plate (see step 5).



The AutoLock


When used correctly, this car seat's AutoLock will lock the vehicle belt.

Please go to the correct vehicle belt installation section of the manual to see how to properly use this feature.

Rear-Facing Vehicle Belt Install: page 26

Forward-Facing Vehicle Belt Install + Tether: page 40

If you do not use this feature, you **must** lock the vehicle belt using the retractor or the latch plate; continue to step 4.

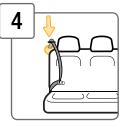

Check the Retractor

Retractors pull seat belts into stored positions and lock the belt to hold passengers in place.

See the next page for some common types of vehicle belt retractors that will work with this child restraint.

continued on next page





Types of Retractors

Switchable Retractor (most vehicles have this type)



This retractor can be switched to a locking mode.

You **must have the retractor in the locking mode** to use the seat belt with this child restraint.

Switching to locking mode: Slowly pull the shoulder belt all the way out, then let it go back in an inch or two.

As it goes back in, you will most likely hear a ratcheting sound.

Gently pull the belt to see if it has locked. You will not be able to pull any more belt out if the lock has engaged.

Automatic Locking Retractor



This retractor always locks.

It will automatically lock after slowly pulling the seat belt out at least halfway and letting the belt go back into the retractor an inch or two.

See Step 5, "Check **Emergency Locking Retractor** the Latch Plates."

If the retractor does not lock, it is most likely an Emergency Locking Retractor. These retractors only lock during a sudden stop or collision.

You will need to determine if your seat belt's latch plate can lock the belt. See Step 5, "Check the Latch Plates".



Locking Latch Plate



Sliding latch plates easily slip between the lap and shoulder portions of the belt.

Check the Latch Plates

Latch plates are the part of

buckle.

plate.

the seat belt that goes into the

To see if the latch plate locks:

seat belt while pulling it up.

If the vehicle belt does not slide

through the latch plate, it's locked.

If the latch plate slides up and down

the vehicle belt, it is a **sliding latch**

Then firmly tug the lap portion of the


Buckle the vehicle belt.

If you have an Emergency Locking Retractor with a Sliding Latch Plate, you must use the car seat's AutoLock feature.

Emergency Locking Retractor with a Sliding Latch Plate

Never Use With This Child Restraint Emergency Locking Retractor Lap Only Belt Inflatable Seat Belts



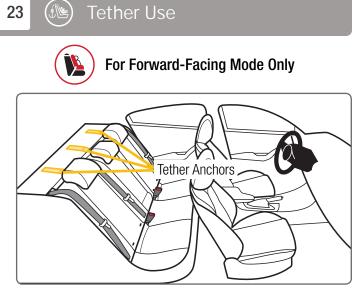

Your vehicle's features may be considerably different than those pictured here.

You **must always attach, adjust, and secure the top anchorage (tether) strap** when installing the child restraint forward-facing with internal harness. Tethers improve the installation and stability of child restraints and reduce the risk of injury.


Attach the tether hook to the tether anchor designated by your vehicle manufacturer for that seating position. Check your vehicle owner's manual for more information.

If the seating position does not have a tether anchor, use a different seating position or see your dealer or a qualified mechanic and have one installed.

WARNINGS

Using this child restraint without the tether strap anchored as recommended by the manufacturer would be a misuse of the child restraint and, in a sudden stop or crash, could result in serious injury or death.

Do not fasten multiple tether hooks on the same tether anchor in the vehicle.

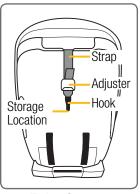

Tether Storage and Parts





Storing Tether Strap

When installing rear-facing, using the booster seat mode, or when the car seat is not installed in a vehicle, attach the tether hook to its storage attachment on back of car seat as shown.

Gently tighten to remove slack.

Adjusting Tether Strap

To tighten: After the child restraint is locked into place with the lower anchor/UAS belt or vehicle belt, push down on child restraint and gently pull on free end of tether strap.

To loosen: Lift up on tether adjuster and push it towards tether hook.





Rear-Facing Mode

2.3-18 kg **(5-40 lb) and** 102 cm **(40 in.) or less in height**





Belt

Shoulder Belt

LATCH: Lower Anchor/ UAS Belt Do not install by this method for a child weighing more than 15.9 kg (35 lbs).

WARNINGS

Never install a rear-facing child restraint in the front seat of a vehicle equipped with an active frontal airbag.

Do not use the tether for rear-facing mode. Secure tether strap to its storage location.



Do not use the lower/UAS anchors of the child restraint anchorage system (LATCH system/UAS) to attach this child restraint when restraining a child weighing more than 15.9 kg (35 lbs). The vehicle belt must be used for installation if your child weighs more than 15.9 kg (35 lb).

Do not use the lower anchor/UAS belt along with the vehicle lap or lap/ shoulder belt.

Check the vehicle belt or the lower anchor/UAS belt before each use. Use only if the belt can be tightened properly and locked securely in place.

Do not fasten multiple lower anchor/UAS connectors on the same lower/UAS anchor bar in the vehicle.

This child restraint MUST always face the rear of the vehicle until the child is at least 1 year old and weighs 10 kg (22 lb).

Failure to follow these warnings can result in serious injury or death.

The American Academy of Pediatrics recommends that children remain rearfacing until they are at least 2 years old. Please talk to your doctor about the best option for your child.

Rear-Facing Vehicle Belt Install 🔌

Before you begin installing the seat into your vehicle, did you check:




2.3-18 kg **(5-40 lb) and** 102 cm **(40 in.) or less in height**

Your child's weight and height?



Your child's fit? See page 8.

Do you need to make adjustments to the harness/headrest height or the buckle position?

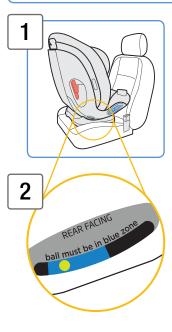

Place Car Seat Rear-Facing in Back Seat

Check the Rear-Facing Recline Angle Indicator


The angle indicator ball must be in the **blue zone** when used Rear-Facing.

Recline the car seat to achieve the proper angle, see step 3.

continued on next page





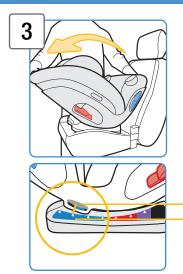

Recline the Car Seat

Squeeze the recline handle and rotate the car seat to any **blue position** that will put the angle indicator ball in the blue zone.

Rear-Facing Angle Indicator **Rear-Facing Positions**

Locate Rear-Facing **Belt Path**

Pull the car seat pad off the front of the car seat to reveal the Rear-Facing Belt Path.

It may be easier to lift up the pad if you remove the cupholders. See page 4.

You will see the lower anchor/UAS belt when you pull back the pad.

Do not remove this belt from its storage location.

The vehicle belt will be routed over top of it.



Ф

vehicle owner's manual to a child restraint in place.

Thread the vehicle belt into the **Rear-Facing** Belt Path opening.

Pull it across the seat, in front of the buckle, and over top of the lower anchor/UAS belt.

Then thread it through the other belt path opening as shown.

Do not twist belt.



28

If you will be using the AutoLock:

Do not pull the vehicle belt all the way out to lock it **BEFORE** routing the belt.

This will make threading the shoulder belt into the AutoLock easier.


If you will not be using the AutoLock:

Review pages 19-22 and your determine what kind of vehicle belt you have and how to lock


Route the Vehicle Belt

continued on next page


4

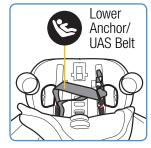



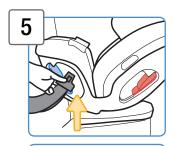

29

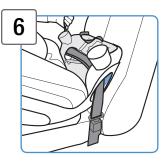


Buckle the Vehicle Belt



Tighten Belt


Place hand in child restraint.


Firmly push child restraint down and towards the vehicle seat back while pulling the shoulder belt or the free end of the lap belt parallel with the belt path through the belt path opening as shown.

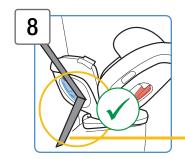

Go to the Side of the Car Seat That Does Not Have the Vehicle Buckle

No Vehicle Buckle

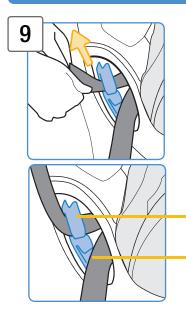

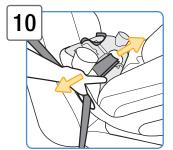

Locate AutoLock

Slide only the shoulder portion of the belt up through the AutoLock as shown.

30

Pull it up until you cannot pull it any farther.

Shoulder Belt Fully threaded into

AutoLock as shown.

Lap Belt

Lays below the bottom notch as shown.

Check Belt Tightness

Hold child restraint at the belt path with your weaker hand.

Push and pull from side to side.

It should not move more than 2.5 cm (1 in.).

If it moves more than 2.5 cm (1 in.), you can try:


- **A.** Reinstalling the child restraint.
- **B.** Changing to a different seating location.

C. Switching to lower anchor/UAS belt installation if lower/UAS anchors are available in your vehicle.





12

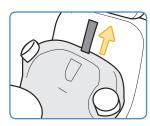

Recheck Rear-Facing Recline Angle Indicator

Make sure the angle indicator ball is in the **blue zone**.

Redo the installation if not reclined correctly.

NOTE: You may need to place a tightly rolled towel(s) or foam pool noodle(s) under the front of the base to help achieve the correct recline.

Check often to be sure padding is still in place and the belt is tight.

Replace the Car Seat Pad Around the Front of the Car Seat

Pull harness adjustment strap through slot in pad as shown.

Replace cupholders if they have been removed.



Finished!

When used correctly, the AutoLock will lock the vehicle belt in place.

32

After the seat has been installed, if your car has a switchable retractor, you may also use it to lock the belt.

Review pages 19-22 and your vehicle owner's manual to determine how to lock the belt with the retractor.

Check the tightness of the install often to make sure it has not loosened.

Securing Child in Car Seat

To properly secure your child in the car seat, see pages 54-56.

Check your child's fit often and make any needed adjustments to the car seat as they grow.





Rear-Facing LATCH: Lower Anchor/UAS Install

Do not use the lower/UAS anchors of the child restraint anchorage system (LATCH system/UAS) to attach this child restraint when restraining a child weighing more than 15.9 kg (35 lbs).

Before you begin installing the seat into your vehicle, did you check:



O

Your child's weight and height?

2.3-15.9 kg (**5-35 lb**) and 102 cm (**40 in.**) or less in height


Your child's fit? See page 8.

Do you need to make adjustments to the harness/headrest height or the buckle position?



IMPORTANT!

Do not use the AutoLock feature when installing with lower anchor/UAS belts.

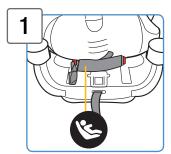

Locate Lower Anchor/ UAS Belt Storage

Pull the car seat pad off the front of the car seat to reveal the lower anchor/UAS belt and the Rear-Facing Belt Path.

It may be easier to lift up the pad if you remove the cupholders. See page 4.




Remove Connector with Adjuster from Storage

Press the red release button on the connector with the adjuster closest to it and pull it out of the opening. Press the adjuster's button and pull the belt to loosen. Then pull it through the **Rear-Facing Belt Path** opening on the left as shown.



Remove Connector without Adjuster from Storage

Press the red release button on the connector without the adjuster and pull it out of the opening. Then pull it through the **Rear-Facing Belt Path** opening on the right as shown.

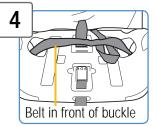



Finished Lower Anchor/UAS Belt Routing Do not twist belt.

continued on next page

34

35 🕓



Place Car Seat Rear-Facing in Back Seat

Check the Rear-Facing Recline Angle Indicator

The angle indicator ball must be in the **blue zone** when used Rear-Facing.


Recline the car seat to achieve the proper angle, see step 7.

Recline the Car Seat


Squeeze the recline handle and rotate the car seat to any **blue position** that will put the angle indicator ball in the **blue zone**.


Rear-Facing Angle Indicator Rear-Facing Positions









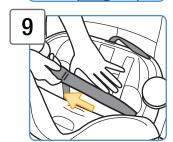

Attach Lower Anchor/ UAS Connector to Vehicle's Lower/UAS Anchor

Review your vehicle owner's manual for lower/UAS anchor locations and lower anchor/ UAS belt use.

Make sure arrows on connectors are facing up.

Fasten one lower anchor/UAS belt connector to the anchor located in the vehicle seat bight.

Repeat for other side of child restraint.

Lower Anchor/UAS Belt

Lays below the bottom notch as shown.

Tighten Belt

Place hand in child restraint.

Firmly push child restraint down and towards the vehicle seat back while pulling the free end of the belt parallel with the belt path through the belt path opening as shown.

continued on next page



K

37 🕓




Check Belt Tightness

Hold child restraint at the belt path with your weaker hand. Push and pull from side to side.

It should not move more than 2.5 cm (1 in.).

If it moves more than 2.5 cm (1 in.), you can try:

- **A.** Pulling the belt tighter.
- **B.** Reinstalling the child restraint.
- **C.** Changing to a different seating location.
- **D.** Switching to vehicle belt installation.

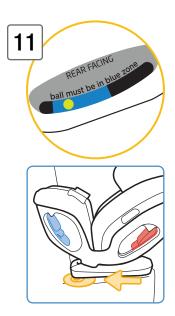


Recheck Rear-Facing Recline Angle Indicator

Make sure the angle indicator ball is in the **blue zone**.

Redo the installation if not reclined correctly.

NOTE: You may need to place a tightly rolled towel(s) or foam pool noodle(s) under the front of the base to help achieve the correct recline.

Check often to be sure padding is still in place and the belt is tight.

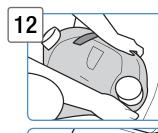

Replace the Car Seat Pad Around the Front of the Car Seat

Pull harness adjustment strap through slot in pad as shown.

Replace cupholders if they have been removed.



Finished!

Check the tightness of the install often to make sure it has not loosened.

Securing Child in Car Seat

To properly secure your child in the car seat, see pages 54-56.

Check your child's fit often and make any needed adjustments to the car seat as they grow.



K



Forward-Facing Mode

10-29 kg (22-65 lb) and 74-125 cm (29-49 in.) and at least 1 year old





Lap Belt

and Tether



Lap/Shoulder Belt and Tether LATCH: Lower Anchor/UAS Belt and Tether

Do not install by this method for a child weighing more than 18 kg (40 lbs).

A WARNINGS

Do not use the lower/UAS anchors of the child restraint anchorage system (LATCH system/UAS) to attach this child restraint when restraining a child weighing more than 18 kg (40 lbs).

The vehicle belt must be used for installation if your child weighs more than 18 kg (40 lb).

Do not use the lower anchor/UAS belt along with the vehicle lap or lap/shoulder belt.

Check the vehicle belt or the lower anchor/UAS belt before each use. Use only if the belt can be tightened properly and locked securely in place.

Do not fasten multiple lower anchor/UAS connectors on the same lower/UAS anchor bar in the vehicle.

In this child restraint your child MUST be at least 1 year old and weigh 10 kg (22 lb) before they sit forward-facing.

Failure to follow these warnings can result in serious injury or death.

The American Academy of Pediatrics recommends that children remain rear-facing until they are at least 2 years old. Please talk to your doctor about the best option for your child.

Forward-Facing Vehicle Belt + Tether Install

Before you begin installing the seat into your vehicle, did you check:

Your child's weight and height?

10-29 kg (22-65 lb) and




R

74-125 cm (29-49 in.) 0

Your child's fit? See page 9. Do you need to make adjustments to the

harness/headrest height or the buckle position?

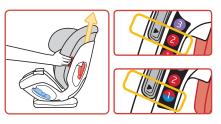

Torso Position 1 or 2 Can Be Used

40


You may adjust to Position 2 as your child grows.




Place Car Seat Forward-Facing in Back Seat

41 🐼 🛞





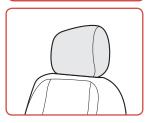


Make Car Seat Flush Against Vehicle Seat

Use either of the **red positions** to make the car seat as flush against the vehicle seat back as possible.

Vehicle seat back must be upright.


Do not refer to the Rear-Facing Angle Indicator. It does not apply to Forward-Facing mode.

NOTE: If your vehicle seat has a headrest that interferes with achieving a flush car seat fit, check your vehicle owner's manual to see if it can be removed, adjusted, or if there are other possible seating locations.

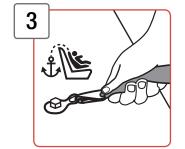

Loosely Attach Tether Hook to Vehicle's Tether Anchor


Check your vehicle owner's manual for specific tether anchor locations.

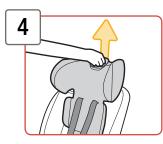

Raise the Headrest All the Way Up

(Î)

42

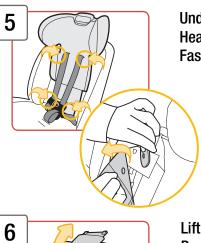

Undo All of the Headrest Pad Fasteners

Lift Up the Headrest Pad to Reveal the Forward-Facing Belt Path


Pull torso pad flap to side as shown.

continued on next page





Forward-Facing AutoLock



7

IMPORTANT!

If you will be using the AutoLock: Do not pull the vehicle belt

all the way out to lock it before routing the belt.

This will make threading the shoulder belt into the AutoLock easier.

If you will not be using the AutoLock:

Review pages 19-22 and your vehicle owner's manual to determine what kind of vehicle belt you have and how to lock a child restraint in place.


Route the Vehicle Belt

Thread the vehicle belt into the **Forward-Facing Belt Path** opening.

Pull it across the seat. Then thread it through the other belt path opening as shown.

Do not twist belt.


Buckle the Vehicle Belt

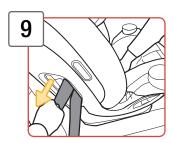

Tighten Belt


Place hand in child restraint.

Firmly push child restraint down while pulling the shoulder belt or the free end of the lap belt parallel with the belt path through the belt path opening as shown.

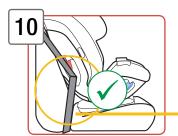

Go to the Side of the Car Seat That Does Not Have the Vehicle Buckle

No Vehicle Buckle

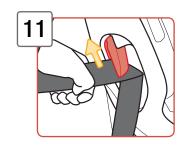

Locate AutoLock

Slide only the shoulder portion of the belt through the AutoLock as shown.

Pull it up until you cannot pull it any farther.


continued on next page









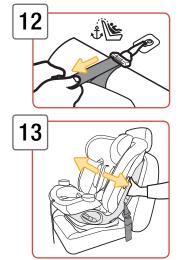

Tighten Tether

Push firmly on the back of the seat and pull the tether strap to remove all slack and create tension on the strap.

Check Belt Tightness


Hold child restraint at the belt path with your weaker hand. Push and pull from side to side.

It should not move more than 2.5 cm (1 in.).

If it moves more than 2.5 cm (1 in.), you can try:

- **A.** Reinstalling the child restraint.
- **B.** Changing to a different seating location.

C. Switching to lower anchor/UAS belt installation if lower/UAS anchors are available in your vehicle.

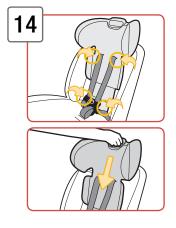

Replace Headrest Pad Fasten all the headrest pad fasteners.

Adjust the headrest/harness back to the correct position for your child. See page 9.



Finished!

When used correctly, the AutoLock will lock the vehicle belt in place.

After the seat has been installed, if your car has a switchable retractor, you may also use it to lock the belt.

Review pages 19-22 and your vehicle owner's manual to determine how to lock the belt with the retractor.

Check the tightness of the install often to make sure it has not loosened.



Securing Child in Car Seat

To properly secure your child in the car seat, see pages 54-56.

Check your child's fit often and make any needed adjustments to the car seat as they grow.



Do not use the lower/UAS anchors of the child restraint anchorage system (LATCH system/UAS) to attach this child restraint when restraining a child weighing more than 18 kg (40 lbs).

Before you begin installing the seat into your vehicle, did you check:




Your child's weight and height?

10-18 kg (22-40 lb) and 74-125 cm (29-49 in.)

	X
-	

Your child's fit? See page 9.

Do you need to make adjustments to the harness/headrest height or the buckle position?



Torso Position 1 or 2 Can Be Used


You may adjust to **Position 2** as your child grows.




Forward-Facing AutoLock

IMPORTANT!

Do not use the AutoLock feature when installing with lower anchor/UAS belts.

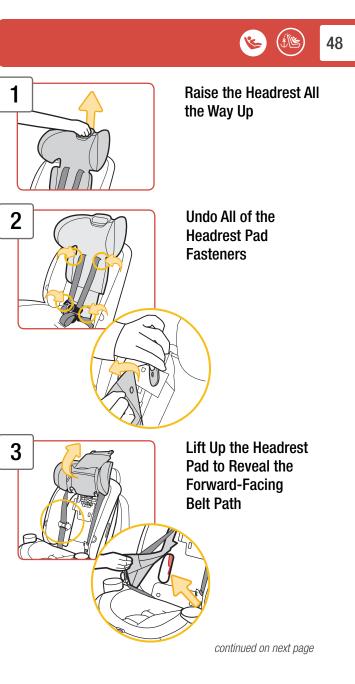



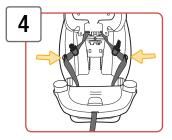


Place Harness Straps Out of the Way


Slide the buckle tongues into the Easy-Out Harness Holders as shown.



Finished Lower Anchor/UAS Belt Routing Do not twist belt.

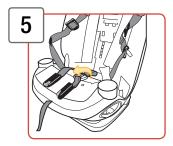






From the Back of the Seat, Flip the Seat Pad Forward to Reveal Lower Anchor/UAS Belt

Remove belt and connectors from the storage location or if belt was used rear-facing, remove from the Rear-Facing Belt Path.



Thread the connector without the adjuster through the **Forward-Facing Belt Path** opening on the left as shown.

Thread the connector with the adjuster closest to it through the **Forward-Facing Belt Path** opening on the right as shown.



Place Car Seat Forward-Facing in Back Seat 50

(I)

(1)



Make Car Seat Flush Against Vehicle Seat

Use either of the **red positions** to make the car seat as flush against the vehicle seat back as possible.


Vehicle seat back must be upright.

Do not refer to the Rear-Facing Angle Indicator. It does not apply to Forward-Facing mode.


continued on next page










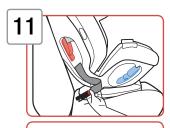





NOTE: If your vehicle seat has a headrest that interferes with achieving a flush car seat fit, check your vehicle owner's manual to see if it can be removed, adjusted, or if there are other possible seating locations.

Loosely Attach Tether Hook to Vehicle's Tether Anchor

Check your vehicle owner's manual for specific tether anchor locations.

Attach Lower Anchor/ UAS Connector to Vehicle's Lower/UAS Anchor

Review your vehicle owner's manual for lower/UAS anchor locations and lower anchor/ UAS belt use.

Make sure arrows on connectors are facing up.

Fasten one lower anchor/UAS belt connector to the anchor located in the vehicle seat bight.

Repeat for other side of child restraint.





Tighten Belt

Place hand in child restraint. Firmly push child restraint down while pulling the free end of the belt parallel with the belt path through the belt path opening as shown.



Tighten Tether

Push firmly on the back of the seat and pull the tether strap to remove all slack and create tension on the strap.



Check Belt Tightness

Hold child restraint at the belt path with your weaker hand.

Push and pull from side to side. It should not move more than 2.5 cm (1 in.).

If it moves more than 2.5 cm (1 in.), you can try:

- **A.** Putting your knee in the car seat and pulling the belt tighter.
- **B.** Reinstalling the child restraint.
- **C.** Changing to a different seating location.
- D. Switching to vehicle belt installation.


continued on next page

(I) 53 K



Replace Headrest Pad Fasten all the headrest pad fasteners.

Adjust the headrest/harness back to the correct position for your child. See page 9.

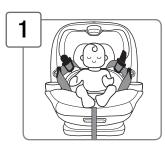

Securing Child in Car Seat



Place Child in Car Seat

The child's bottom and back should be flat against the car seat.

Position harness straps over your child's shoulders and upper thighs.

Buckle Harness

Push buckle tongues into buckle until you hear them "click."

Pull up on harness straps to make sure buckle is locked.


Fasten Chest Clip


With chest clip low on the harness straps as shown, insert right half of chest clip into left half and snap together.

Tighten Harness

Pull on harness adjustment strap to snugly tighten harness.



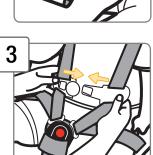



Check your child's fit often and make any needed adjustments to the car seat as they grow.

Finished!


has not loosened.

Check the tightness of the

install often to make sure it

continued on next page





54

55





Position Chest Clip

Slide chest clip up the harness straps and position it at mid-chest (even with armpits) and away from the child's neck.

Check Harness Tightness

Unfasten harness covers if in use.

Try to pinch the harness at the shoulders and hips vertically between index finger and thumb as shown.

If your fingers slip off, the harness is tight enough.

If you can pinch the harness strap, tighten more.

A snug strap should not allow any slack. It lies in a relatively straight line without sagging. It does not press on the child's flesh or push the child's body into an unnatural position.

Refasten harness covers if in use.

WARNINGS

Failure to fasten and tighten the harness system correctly may allow the child to be ejected from the child restraint in a crash or sudden stop causing serious injury or death.



Do not mistake comfort for safety. Harness system must be snugly adjusted.

Do not put snowsuits or bulky garments on your child when placing them in the child restraint. Bulky clothing can prevent the harness straps from being tightened properly.



Finished!

The child is now secured in the car seat.

Check your child's fit often and make any needed adjustments to the car seat as they grow.

To Remove Child From Child Restraint:

- 1. Loosen Harness Strap
- 2. Unbuckle Harness
- 3. Release Chest Clip
- 4. Remove Child



Å



Booster Seat Mode

18.1-54 kg (40-120 lb) and 110-145 cm (43-57 in.)



AWARNINGS

Do not use the harness system when using as a booster seat.







Use only the vehicle's lap and shoulder belt system when restraining the child in this booster seat. Do not use only the lap belt when using this seat as a booster seat.

The shoulder belt must always be adjusted snugly across the child's chest. NEVER place shoulder belt under the child's arms or behind their back.

Do not use this booster seat if the tops of your child's ears are above the top of the booster seat's headrest.

Do not use the LATCH/UAS when using as a booster seat. Secure lower anchor/UAS belt and tether strap to their storage locations.

Failure to follow these warnings can result in serious injury or death.


The American Academy of Pediatrics recommends that children remain in a five-point harness until they outgrow their forward-facing harnessed child restraint. This typically occurs around age 4, but some children outgrow them sooner and others not until later.

Please talk to your doctor about the best option for your child.


Storing Harness System



You must store the harness system when using the Booster Seat mode.

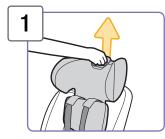


Raise the Headrest All the Way Up

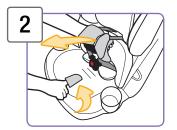

Fully Loosen Harness Straps

Push down on harness release lever (through opening in pad) while pulling out on harness straps as shown.

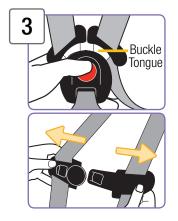

Unbuckle Harness and Release Chest Clip


Press in towards the **top** of the red button to release the buckle tongues.

Hold each side of the chest clip and press on the release button with your thumb and pull apart.

continued on next page



Å

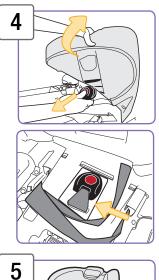

Lift Up Front Bottom of Seat Pad

Pull the buckle down through the pad and lay it flat into the storage location as shown.

Replace the seat pad when done.

Undo the Headrest Pad Fasteners As Shown

7

8

Lift Up Chest Clip Piece and Buckle Tongue and Place in Storage Pocket


Push the pieces all the way down into the pocket.

Repeat for other side.

Make sure the pieces lay flat inside the pocket.

Replace the Headrest

Pad Fasteners

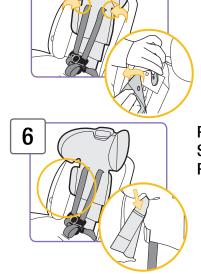

Pull Torso Pad Flap to Side to Reveal Storage Pocket



Finished!

The car seat has been converted to Booster Seat mode.





Booster Seat Child Fit



 $\left(\begin{array}{c} \\ \\ \\ \\ \end{array} \right)$

Head Position

Tops of the child's ears should never be above the top of the headrest.

Adjust headrest if needed, see page 10.

48 cm

(19 in.)

Shoulder Belt Position

The shoulder belt should lay snugly across the center of the child's shoulder and across the chest and not on their face or neck.

Max Seated Height

In this booster seat, the maximum seated height is 48 cm (19 in.).

To measure your child's seated height: have them sit on the floor with their back flat against a wall. Then measure from the floor up to the top of their shoulder.



Max Seated

Height

Lap Belt Position


Route the lap belt portion of the vehicle belt through the booster belt path as shown.

The lap belt should lay snugly across the child's hips and not on their stomach.

Lap/Shoulder Belt Use



You must store the harness system when using the Booster Seat mode. See pages 58-60.



Raise the Adjustable Torso to Position 3



3

Place Booster Seat Forward-Facing in Back Seat


You **must** use the fully upright **purple** position.


NOTE: If your vehicle seat has a headrest that interferes with achieving a flush car seat fit, check your vehicle owner's manual to see if it can be removed, adjusted, or if there are other possible seating locations.

Have Child Sit in Booster Seat

63

6

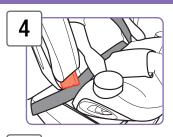

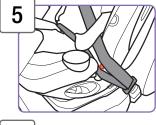

Position Lap Belt on Child

Route the lap belt portion of the vehicle belt through the booster belt path as shown.

The lap belt should lay snugly across the child's hips and not on their stomach.

Buckle Vehicle Belt

Pull up on lap belt to tighten.

Position Shoulder Belt on Child

Pull up on shoulder belt to tighten.

The shoulder belt should lay snugly across the center of the child's shoulder and across the chest and not on their face or neck.

Only use the shoulder beltpositioning guide in the headrest if necessary to help position the shoulder belt correctly on the child.

Finished!

Check periodically to make sure your child has not moved out of position and loosened the shoulder belt. To remove accessories, see pages 3-4. Removing Seat Pad

Removing Car Seat Pads for Cleaning

Undo Seat Pad Tabs

Ì


64

On the sides of the car seat above the **Rear-Facing Belt Path**, there are tabs that keep the seat pad in place.

Place your thumb over the tab and pull it down to release it from the keyhole in the car seat.

Repeat for other side.


Undo Pad Fasteners That Connect Headrest Pad and Seat Pad

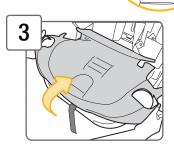

Pull Seat Pad Off the Front of the Car Seat and Remove it from the Shell


It may be easier to lift up the pad if you remove the cupholders. See page 4.

continued on next page

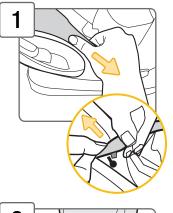





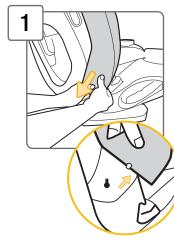

Removing Torso Pad

Undo Torso Pad Tabs

On the sides of the car seat, there are tabs that keep the torso pad in place.

Place your thumb over the tab and pull it down to release it from the keyhole in the car seat.


Repeat for other side.

Removing Headrest Pad

Undo Fasteners on **Headrest Pad**

P

66

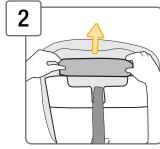

From Back of Seat, **Remove the Torso Pad** Flap That is Tucked into the Shell




1

Gently Pull Headrest Pad Off of Headrest

Make sure headrest airbags stay in place.



Remove Torso Pad from Car Seat

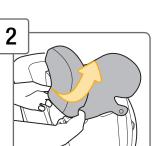



Cleaning Pads and Accessories

Machine wash separately with cold water on a gentle cycle. Make sure harness covers are closed so fastening strips are not exposed. Do not use bleach. Tumble dry separately for 10-12 minutes on low heat. Remove immediately.

Cleaning Harness Strap

Spot clean using warm sudsy water and damp cloth.

AWARNING: Do not use child restraint without the seat pad. Failure to do this can result in serious injury or death.

Installing Car Seat Pads



Seat Pad

Slip seat pad on to bottom of car seat.



Pull harness adjustment strap through pad. Replace cupholders if they have been removed.




Tuck seat pad along the sides and bottom of the car seat.





On both sides of the seat, push pad tabs into keyholes in shell and pull up to snap tab into place.





Torso Pad Wrap torso pad around the top of shell.



From the back of the seat, tuck torso pad into the shell.



Tuck pad in along the sides of shell.



On both sides of the seat, push pad tabs into keyholes in shell and pull up to snap tab into place.

Headrest Pad

Adjust the headrest to the highest position.

Starting from the top of the headrest, gently pull headrest pad onto headrest.

Make sure headrest airbags stay in place.

Slide harness straps into slots in pad.

Attach all of the headrest pad fasteners.





Aircraft Information

This restraint is certified for aircraft use when used with the internal harness.

This child restraint is not certified for aircraft use when used as a booster seat because aircraft seats do not have shoulder belts.

Install the child restraint in a window seat to avoid blocking the aisle. If the aircraft lap belt is too short, ask the flight attendant for a belt extender.

Use only on forward-facing aircraft seats.

Contact the airline for their specific policies.



Some airlines may ask to see a label stating that this child restraint is certified for aircraft use.

There is an airplane certification label located on the back of this child restraint as shown.

WARNING: Store lower anchor/UAS belt and tether strap. Do not use the AutoLock when using the aircraft belts.



Rear-Facing Aircraft Installation Follow pages 26-32.



Forward-Facing Aircraft Installation

Follow pages 40-46.

Replacement and Expiration of Car Seat 70

Do not risk your child's safety.

To keep your child as safe as possible, Dorel Juvenile Group strongly recommends replacing the car seat even after a minor crash; even if it was not occupied at the time.

Replacement After a Minor Crash

The National Highway Traffic Safety Administration states that for a crash to be considered minor **ALL of the following must be true:**

- Vehicle able to drive away from the crash site; AND
- Vehicle door nearest the car seat was not damaged; AND
- No passengers were injured; AND
- Airbags did not deploy; **AND**
- There is no visible damage to the car seat.

If the crash your car seat was involved in meets **ALL** the criteria, you may not need to replace the car seat.

If one or more of these criteria are not true or if you are uncertain of any of your answers, replace the car seat immediately.

Replacement After a Moderate to Severe Crash

You **must** replace this car seat if it has been in a moderate to severe car crash.

This car seat is intended to protect a child in a single crash. During a crash, the car seat and all of its parts absorb crash energy which can deform or weaken it. Damage is not always visible. A damaged car seat must be replaced immediately.

Expiration



On the side of the child restraint there is a date of manufacture label as shown.

Do not use this child restraint more than 12 years after the date of manufacture.

71



Never take your child out of the child restraint while the vehicle is moving.

Never leave child unattended. Placing your child in a hot child restraint may result in burns.

Do not use a child restraint with damaged or missing parts.

Do not use cut, frayed or damaged harnesses.

Do not substitute parts or try to modify the child restraint in any way. Do not lubricate buckles and fasteners.

Do not use any child restraint accessory except those approved by Dorel Juvenile Group.

Never allow any child to play with this child restraint; it is not a toy.

Do not remove or cover up any of the warning labels or other labels on the child restraint.

This child restraint has been certified for use in passenger vehicles. Do not use in a boat, on a motorcycle or in a cargo van or bus where there are no seat belts or tether anchors. Read all instructions for additional warnings.

Installation in Vehicle

Check the vehicle belt or lower anchor belt before each use. Use only if the belt is tightened properly and locked securely in place.

This child restraint should be securely belted in the vehicle even when not in use. In a crash or sudden stop, an unsecured child restraint could injure occupants.

Transport Canada Regulations

Transport Canada Road Safety Directorate regulates children's restraint systems under the Motor Vehicle Restraint Systems Safety Regulations (RSSR).


The regulations require the manufacturer and/or importer to certify the restraint to the applicable safety standards and place specified warnings and information on the labels fastened to each restraint and in this instruction manual.

Vehicle Seating Position



Never place a child rear-facing in a seating position with an active frontal air bag.

Check the vehicle owner's manual for more information about air bag/child restraint use.





Do not use on seats that face the sides or rear of the vehicle.

For vehicles without a back seat, refer to your vehicle owner's manual.



Children are safer when properly restrained in rear seating positions than in the front seating positions.

According to accident statistics, children in rear seating positions are statistically safer, whether you have air bags, advanced air bags, or no air bags at all.

If you are not sure where to place the child restraint in your

vehicle: consult your vehicle owner's manual; contact Dorel Juvenile Group Consumer Care Department; or for USA residents visit your local Child Passenger Inspection Station. Go to http://www.safercar.gov/cpsApp/cps/index.htm to find your closest station.

To avoid your child being seriously burned, take the following precautions:

1. Park in the shade or where sun does not directly hit the child restraint.

2. Cover the child restraint with a sheet or blanket when not in use.

3. Check for hot seat and buckles before placing child in child restraint.

To help protect your vehicle seat's upholstery from damage, use a single layer towel underneath and behind child restraint.



USA Registration and Safety Notices


Please complete the postage-paid registration card that came with your child restraint, and send it to us. Child restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall. Send your name, address, e-mail address if available and the restraint's model number and manufacturing date to:

Dorel Juvenile Group, Inc. **Consumer Care Department** PO Box 2609 Columbus, IN 47202-2609

73

or call 1-800-951-4113 or register online at www.djgusa.com/ registration/carseat/us.

For recall information, call the U.S. Government's Vehicle Safety Hotline at 1-888-327-4236 (TTY: 1-800-424-9153), or go to http://www.NHTSA.gov.

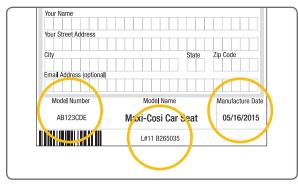


Example of model number, manufacture date, and line code.



If you don't have the card or if your address changes, you will find the model number, manufacture date, and line code on the label located on the side of the shell.

CAN Registration and Safety Notices *

Although child restraints are tested, evaluated, and certified by the manufacturer and tested by Transport Canada, it is possible that a safety-related problem may be found. If there is ever a safety issue with your child restraint, we use registration information to reach owners.

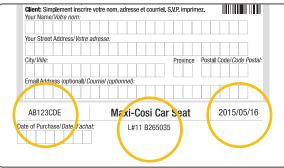

Example of model number, manufacture date, and line code.



If you don't have the card or if your address changes, you will find the model number, manufacture date, and line code on the label located on the side of the shell.

There are three additional ways to register your information:

Online:	www.djgusa.com/registration/carseat/can
Telephone:	1-800-951-4113
Mail:	Send your name, address and your child restraint's model number, manufacture date line code, and date of nurchase to:

purchase to: line code. and date Dorel Juvenile Canada **Consumer Care Department**

2855 Argentia Road, Unit 4 Mississauga, ON L5N 8G6

Please do not send in your registration card if you have registered your child restraint online. For information on safety-related problems, you can also call Transport Canada's Road Safety Dept. at: 1-800-333-0371.

74

Warranty

75

Dorel Juvenile Group, Inc. (DJG) warrants this product to the original retail purchaser as follows: This product is warranted against defective materials or workmanship for one year from the date of original purchase. **An original receipt is required to validate your warranty.** DJG will, at its option, provide replacement parts or replace this product. DJG reserves the right to substitute if the part or model has been discontinued.

To make a claim under this warranty contact our Consumer Care Department by phone at 1-800-951-4113 or text us at 1-812-652-2525. Our hours of operation are from 8:00 a.m. to 6:00 p.m. EST Monday through Thursday and from 8:00 a.m. to 4:30 p.m. on Friday.

Proof of purchase is required and shipping charges are the responsibility of the consumer. Warranty Limitations: This warranty does not include damages which arise from misuse or abuse of this product.

Limitation of Damages: The warranty and remedies as set forth are exclusive and in lieu of all others, oral or written, expressed or implied. In no event will DJG or the dealer selling this product be liable to you for any damages, including incidental or consequential damages, arising out of the use or inability to use this product. Limitation of warranties and other warranty terms and state law rights: Any implied warranties, including implied warranties of the merchantability and fitness for a particular purpose, shall be limited to the duration and terms of the express written warranty. Some states do not allow limitations as to how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

This warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Neither DJG nor the dealer selling this product authorized any person to create for it any other warranty, obligation, or liability in connection with this product. **Please note:** Our product warranty only applies when purchased from an authorized Maxi-Cosi retailer. The origin of products not purchased through these authorized retailers is unknown and could be counterfeit.

We cannot support products from an unknown origin as we cannot verify the handling or condition of such merchandise. We maintain a strong network of authorized retailers to ensure you are purchasing safe and complete products.

Fulfillment by a third party does not guarantee you are purchasing from one of these authorized retailers. Pricing which is inconsistent with the majority of retailers is a strong indication that the retailer is not authorized, as we have a consistent price offering across all authorized retailers.

If you are unsure of the authorization status of a retailer you are considering purchasing from, or have purchased from, you can check www.maxi-cosi.com/us-en/shops.aspx; or call our Consumer Care Department at 1-800-951-4113; or text us at 1-812-652-2525.

Troubleshooting

1. If the child restraint buckle or harness release lever sticks or you cannot get the straps tight enough around child:

DO NOT LUBRICATE. Check around lever and retractor for dropped food, sticky spilled drinks, dirt, leaves, etc. Clean with warm water and/or remove object with tweezers. If you cannot get the harness to adjust and remain tight with the buckle securely locked, do not use the child restraint.

2. If your harness twists:

Straighten the harness each time you put your child in the child restraint to help prevent twisting. Lock the buckle and tighten harness so it will be ready for next use.

Replacement Parts List

If requested color is not available, similar color will be substituted. Prices are subject to change. Applicable tax and shipping & handling will also be added.

Part	Cost
Buckle Assembly	\$7.99
Seat Pad Set	\$109.99
Cupholder (1)	\$2.50
Lower Anchor/UAS Belt	\$24.99
Instructions	\$0.00

For availability and questions, please call us at:

1-800-951-4113; or text us at 1-812-652-2525.

Hours of Operation:

M-TH from 8:00 AM to 6:00 PM EST FRI from 8:00 AM to 4:30 PM EST

If you already know which parts you need, you may complete your order with a credit card by calling us at 1-800-951-4113.

See list above for available parts. We accept Visa or MasterCard.

78

Thank you for choosing this child restraint. The DJG family is committed to creating child restraints with the most comfort and convenience available today.

Remember, parents are a child's first teachers and examples. If you always buckle your seat belt, your child will think it is the natural thing to do. Make it a firm rule that the vehicle does not go until everyone is buckled up. Make no exceptions.

No one can predict if use of a child restraint will prevent injury or death in a particular crash. However, when combined with careful driving, proper use of a child restraint can lower a child's risk of injury or death in most crashes.

If you still have questions or have any concerns with this child restraint, please contact our Consumer Care Department:

Call: 1-800-951-4113

Text: 1-812-652-2525

Website: www.maxi-cosi.com

Hours of Operation:

M-TH from 8:00 AM to 6:00 PM EST FRI from 8:00 AM to 4:30 PM EST

77