

HIGHBACK 2-in-1 BOOSTER CAR SEAT

Forward Facing: 22-40 lb and 34-43 in. (10.1-18 kg and 85.1-110 cm) Belt-Positioning Booster: 40-80 lb and 43-52 in. (18.1-36.3 kg and 110.1-132.1 cm)


KEEP INSTRUCTIONS FOR FUTURE USE. Read all instructions before using this child restraint.

AWARNING:

Failure to follow the warnings on the labels and in the instruction manual can result in serious injury or death to your child.

4358-6742 Highback.indd 1-2

Important Symbols



See pages 19-20 for vehicle belt information.



LATCH

See page 18 for LATCH information and storage location.

Choosing Forward Facing or Booster Seat

Your child's height, weight, and age determine how your child

Tether




Instruction Manual Storage See page 2 for storage location.

See page 23 for Tether information.



To help you recognize instructions which are most critical to your child's safety, we use this symbol.

Failure to follow these warnings can result in the serious injury or death of your child.

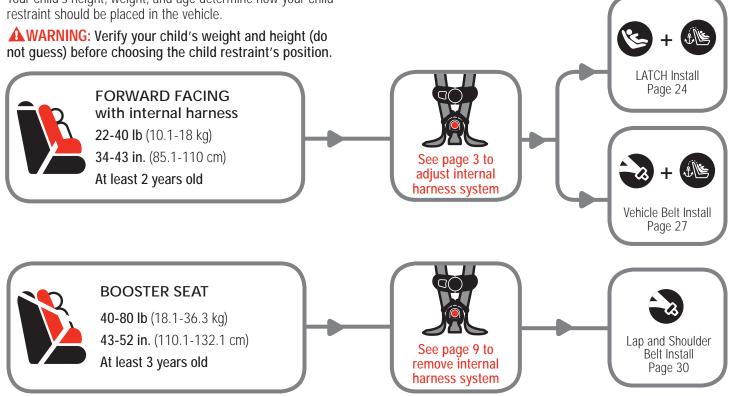


4358-6742 Highback.indd 3-4

Table of Contents


1
9
9
15
15 15 16
17

Forward Facing	22
Tether Use	23
Sector CH Installation	24
Vehicle Belt Installation	27
Booster Seat	29
Lap and Shoulder Belt Installation	
Important Information	31
Using a Locking Clip	31
Using a Locking Clip Dorel Juvenile Group Information	
· · ·	33
Dorel Juvenile Group Information	33 34
Dorel Juvenile Group Information Registration and Safety Notices	33 34 35
Dorel Juvenile Group Information Registration and Safety Notices Troubleshooting	33 34 35 36


Parts of the Child Restraint

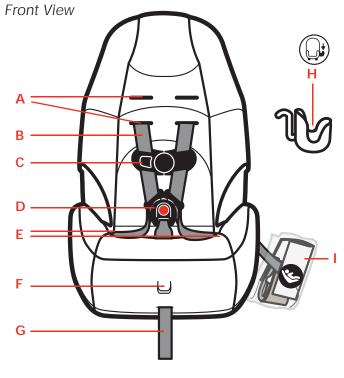

- A. Shoulder Harness Slots
- B. Harness Strap
- C. Chest Clip
- D. Buckle
- E. Hip Harness Slots
- F. Harness Release Lever (under flap)
- G. Harness Adjustment Strap
- H. Cup Holder (see page 14)
- I. LATCH (see page 18)

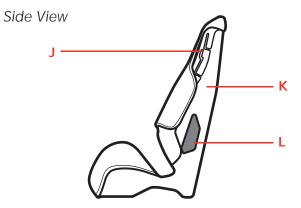

Back View

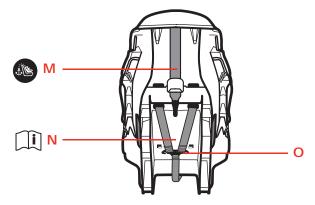

- J. Belt-Positioning Guide
- K. Shell (child restraint)
- L. Forward-Facing Belt Path
- M. Tether (see page 23)
- N. Instruction Manual Storage
- O. Splitter Plate

Prepare Child Restraint to Fit Your Child

How Does Your Child Fit?



1. Fully Loosen Harness Strap

Push down on harness release lever (under flap on front of seat pad) while pulling out on harness straps as shown.



2. Unbuckle Harness

Press in towards the **top** of the red button.

Pull buckle tongues out.



3. Release Chest Clip Press on chest clip release button and pull apart.

Place harness straps out of the way.



Place Child in Child Restraint to Determine Proper Harness Fit

The child's bottom and back should be flat against the child restraint.

See page 4 for fit guidelines.

Use the guidelines below to determine if the harness strap is in the right place for your child.

FORWARD FACING with Internal Harness



Always choose the shoulder harness slot that is closest to your child's shoulder height.

Harness strap **MUST** be **at or slightly above** shoulders. **To make changes to the harness strap**, see pages 5-6.

If the highest shoulder harness slots are below the child's shoulders, and the child weighs at least 40 lb (18 kg) and is at least 3 years old, you must convert the child restraint to a booster seat.

To prepare seat as a booster, see pages 9-10.



Changing Position of Shoulder Harness Strap



1. Fully Loosen Harness Strap

2. From Back, Remove

From Splitter Plate

Harness Strap Loops

Push down on harness release lever (under flap on front of seat pad) while pulling out on harness straps as shown.



Attach Harness Strap Loops to Splitter Plate As Shown

Sewn ends of the harness strap loops **MUST** face towards you.

DO NOT twist harness strap or harness adjustment strap.

Make sure the loops are fitted **COMPLETELY ON** both sides of the splitter plate.

WARNINGS: Verify frequently that the harness height is correct for your child's size. It is very important to read, understand and follow all instructions and warnings.



Do not use this child restraint forward facing if the tops of your child's ears are above the top of the child restraint.

Failure to follow these steps can result in serious injury or death.



3. Pull Harness Strap Out of Shoulder Harness Slots



 Rethread Harness Strap into Correct Shoulder Harness Slots For Your Child

See page 4 for fit guidelines.



Securing Child in Child Restraint



1. Place Child in Child Restraint

The child's bottom and back should be flat against the child restraint.

Position harness strap over child's shoulders and thighs.



2. Buckle Harness

Push buckle tongues into buckle until you hear them "click."

Pull up on harness strap to make sure buckle is locked.





5. Position Chest Clip

The chest clip must be placed at mid-chest (even with armpits) and away from the child's neck.

6. Check Harness Tightness

Try to pinch the harness at the shoulders vertically between index finger and thumb as shown.

If your fingers slip off, the harness is tight enough.

If you can pinch the harness strap, tighten more. The harness strap should be snug throughout their length.

WARNINGS: Failure to fasten and tighten the harness system correctly may allow the child to be ejected from the child restraint in a crash or sudden stop causing serious injury or death.

Do not mistake comfort for safety. Harness system must be snugly adjusted.

A snug harness strap should not allow any slack. It lies in a relatively straight line without sagging. They do not press on the child's flesh or push the child's body into an unnatural position.

To Remove Child From Child Restraint

- 1. Loosen Harness Strap
- 2. Unbuckle Harness
- 3. Release Chest Clip
- 4. Remove Child



3. Close Chest Clip

Insert right half of chest clip into left half and snap together.



4. Tighten Harness

Pull on harness adjustment strap to tighten harness snugly.

4358-6742 Highback.indd 13-14



Removing Harness System

Only remove the harness system to clean seat pad or when changing child restraint to a booster seat.



1. Fully Loosen Harness Straps

Push down on harness release lever (under flap on front of seat pad) while pulling out on harness straps as shown.



2. From Back, Remove Harness Strap Loops From Splitter Plate





 Pull Harness Strap Out of Seat

5. Unthread Buckle

Do not unbuckle the buckle.

7. Turn Seat Over Locate buckle's metal retainer on bottom of shell.



3. Pull Harness Strap Out of Shoulder Harness Slots



8. Rotate Metal Retainer and Push It Up Through Shell and Pad

9. From Top of Seat, Pull Buckle Out of Shell

Store the buckle and harness strap in a safe place for future use.



4. Unthread Chest Clip





Removing Seat Pad for Cleaning

Installing Harness System



You must remove the harness system to remove the pad from the shell. See pages 9-10.



1. Release Elastic Straps on Back and Bottom of the Shell



1. Insert Buckle's Metal Retainer into Slot Buckle MUST face out.



2. Pull Metal Retainer Completely Through Pad and Shell



2. Remove Pad

Pull pad off the bottom of child restraint and remove pad.

WARNINGS: Do not use child restraint without the seat pad. Failure to do this can result in serious injury or death.

Cleaning Pad

Machine wash separately with cold water on a gentle cycle. Do not use bleach. Tumble dry separately for 10-12 minutes on low heat. Remove immediately.

Cleaning Harness Straps

Spot clean using warm sudsy water and damp cloth.

Replace Pad

Starting from bottom of child restraint, slip pad on shell. Pull harness adjustment strap through pad. Wrap pad around the top of shell. Attach all of the elastic straps. Install harness system, see pages 12-13.



3. Check Buckle

Pull up on buckle to make sure it is secured.

The buckle **MUST** not pull out.

4. Rethread Harness Strap

With sewn end of harness strap loop facing the buckle, thread harness strap down through hip harness slot.

5. Pull Harness Strap Across Bottom of Shell

Harness strap **MUST** lay in front harness adjustment strap as shown. Push harness strap up through other hip harness slot.

Accessories







Sewn ends of harness strap loops MUST face each other.

6. Make Harness Strap Even

7. Thread Buckle and Chest Clip

Harness strap ends go through the **back** of buckle tongues and through the chest clip **front to back** as shown.



8. Thread Harness Strap Into Correct Shoulder Harness Slots For Your Child

See page 4 for fit guidelines.

- Sewn end
 - 7. Attach Harness Strap Loops to Splitter Plate As Shown

Sewn ends of the harness strap loops **MUST** face towards you.

DO NOT twist harness strap or harness adjustment strap.

Make sure the loops are fitted **COMPLETELY ON** both sides of the splitter plate.

WARNINGS: Harness system must be installed correctly. Failure to follow these steps can result in serious injury or death.





Cup Holder

The cup holder can be attached to either side of the shell.

Pull pad off corner of shell.

Align symbol on cup holder with symbol on shell.

Hook bottom of cup holder under edge of shell.

Snap top of cup holder over edge of shell.

Replace pad.





Child Restraint Use

Vehicle Seating Position

Do not use this child restraint unless the child is 22-80 lb (10.1-36.3 kg) and 34-52 in. (85.1-132.1 cm).

Never take your child out of the child restraint while the vehicle is moving.

Never leave child unattended.

Placing your child in a hot child restraint may result in burns.

Do not use a child restraint with damaged or missing parts.

Do not use cut, frayed or damaged harnesses.

Do not substitute parts or try to modify the child restraint in any way.

Do not lubricate buckles and fasteners.

Do not use any child restraint accessory except those approved by Dorel Juvenile Group.

Never allow any child to play with this child restraint; it is not a toy.

Do not remove or cover up any of the warning labels or other labels on the child restraint.

Read all instructions for additional warnings.

On the side of the child restraint there is a date of manufacture label. Do not use this child restraint more than 10 years after the date of manufacture.

Installation in Vehicle

Check the vehicle belt or LATCH belt before each use. Use only if the belt is tightened properly and locked securely in place.

This child restraint should be securely belted in the vehicle even when not in use. In a crash or sudden stop, an unsecured child restraint could injure occupants.

Do not use a child restraint that has been in a crash. You must get a new child restraint.

Check the vehicle owner's manual for more information about air bag/child restraint use.

Use the child restraint only on vehicle seats that face forward.



Do not use on seats that face the sides or rear of the vehicle.

Use the center seating position if possible.



For vehicles without a back seat, refer to your vehicle owner's manual.

If you are not sure where to place the child restraint in your vehicle, consult your vehicle owner's manual, contact Dorel Juvenile Group Consumer Relations Department, or visit your local Child Passenger Inspection Station. Go to http://www.safercar.gov/cpsApp/cps/index. htm to find your closest station.



Children are safer when properly restrained in rear seating positions than in the front seating positions.

According to National Highway Traffic Safety Administration information, children in rear seating

positions are statistically safer, whether you have air bags, advanced air bags, or no air bags at all.

To avoid your child being seriously burned, take the following precautions:

1. Park in the shade or where sun does not directly hit the child restraint.

2. Cover the child restraint with a sheet or blanket when not in use.


3. Check for hot seat and buckles before placing child in child restraint.

To help protect your vehicle seat's upholstery from damage, use a single layer towel underneath and behind child restraint.



Understanding Your Vehicle

Your vehicle's features may be considerably different than those pictured here.

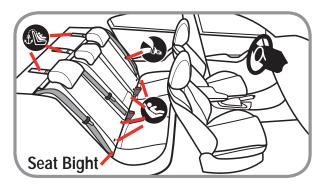

Consult your vehicle owner's manual to help identify your vehicle's specific features and locations.



LATCH Anchors

Located in the seat bight. (Forward Facing with Internal Harness Only)

Tether Anchors

For Tether Strap (Forward Facing with Internal Harness Only)



Vehicle Seat Belts

Choosing LATCH or Vehicle Belts



Adjuster LATCH Hooks



with the LATCH system. When installing this child restraint with vehicle belts or when using as a booster seat, the LATCH hooks and belt MUST be properly stored. To store LATCH on this child restraint: Thread LATCH belt through forward facing belt path

installed and designated LATCH seating

positions. Most vehicles manufactured after September 2002 are equipped with LATCH. Check your vehicle owner's manual to see which seating positions may be equipped

and fasten LATCH hooks together behind the child restraint as shown. Gently pull free end of belt to remove slack.



Vehicle Belts

If LATCH is not an option, you must use the vehicle seat belt system to install the child restraint.

There are some vehicle belts that will not work with a child restraint or will require special attention.

Check your vehicle owner's manual for specific instructions.

WARNINGS: When used correctly the LATCH or Vehicle Belts are equally safe.

Do not use both the UAS belt and vehicle belt at the same time.

17

18



Knowing Your Vehicle Belts

Review your vehicle owner's manual for vehicle seat belt use with child restraints. This is your best source for information concerning your vehicle.

Not all vehicle belts will work with this child restraint. This child restraint must be tightly locked in place at all times. You must determine if your vehicle's belts are compatible with this child restraint.

Vehicle Belts



• Automatic/Passive vehicle seat belts

You **MUST** have a lap belt to install any child restraint. An automatic (passive) shoulder belt may or may not have a separate lap belt.

• Do not use with inflatable seat belts

You may need to move the child restraint to another seating location or use LATCH belts only.

· Vehicle belts in center of the door or side panel

You must move the child restraint to another seating location.



Vehicle belts that are in front of the seat bight

You may need to move the child restraint to another seating location.

• ELR (Emergency Locking Retractor) vehicle belts

These belts only lock in a sudden stop or crash, and do not properly secure a child restraint alone.

To determine if you have this type of belt, gently pull the belt all the way out of the retractor (spool), let it return several inches, then pull



on it again. If it moves freely, it is an ELR belt. If it is locked and will not allow any more belt to come out, it is a switchable retractor.

If you have an ELR lap and shoulder belt, review the "Vehicle Latch Plate" section on page 20 to see if

you need a locking clip.

WARNING: ELR lap-only belts MUST NOT be used with this child restraint.

Switchable Retractor

These belts switch from ELR to ALR (Automatic Locking Retractor). You **MUST** have the vehicle belts in the locking mode to use them.

With a switchable retractor, pull the shoulder belt all the way out to switch the retractor into the ALR mode before tightening.

Feed the slack back into the retractor while tightening.


• ALR (Automatic Locking Retractor)

These belts lock after pulling the webbing out and letting the belt go back into the retractor an inch or two.

With an ALR belt, pull the belt all the way out before threading through the child restraint.

Vehicle Latch Plates

Check Latch Plates



Grasp the tongue portion of the latch plate (the part that goes inside the buckle) and pull straight out, in line with the lap belt.

If the latch plate does not slide up and down the vehicle belt, you have a locking latch plate. You should not need to use a locking clip.

Check your vehicle owner's manual to determine the best way to lock a child restraint in place and wether the latch plate or retractor will accomplish this. If the latch plate slides up and down on the belt, and you have an ELR retractor, you **MUST** use a locking clip to install the child restraint. See pages 31-32.

You may not need to use the locking clip with a switchable or ALR retractor.



Aircraft Information

Forward Facing



This restraint is certified for aircraft use when used with the internal harness.

This child restraint is not certified for use in aircraft when used as a booster seat because aircraft seats do not have shoulder belts.

Install the child restraint in a window seat to avoid blocking the aisle. If the aircraft lap belt is too short, ask the flight attendant for a belt extender.

Use only on forward facing aircraft seats.

Contact the airline for their specific policies.



Some airlines may ask to see a label stating that this child restraint is certified for aircraft use.

There is an airplane certification label located on the side of this child restraint as shown.

AWARNING: Store LATCH belts and tether strap when using the aircraft belts.



Forward Facing Aircraft Installation For forward facing installation follow pages 27-28.



22-40 lb (10.1-18 kg) 34-43 in. (85.1-110 cm) At least 2 years old



LATCH Belt with Tether









Lap Belt with Tether



WARNING: Child MUST be at least 2 years old to use this child restraint.



Tether Use

LATCH Installation

Always attach, adjust, and secure the top anchorage (tether) strap when installing the child restraint forward facing. Tethers improve the installation and stability of child restraints and reduce the risk of injury.

Attach the tether hook to the tether anchor designated by your vehicle manufacturer for that seating position. Check your vehicle owner's manual for more information.

If the seating position does not have a tether anchor, use a different seating position or see your dealer or a qualified mechanic and have one installed. The tether can greatly improve the performance of this child restraint.

To Adjust Tether Strap:



To tighten: After the child restraint is locked into place with LATCH or vehicle belt, push down on child restraint and gently pull on free end of tether.

Safety Tip

Make sure the harness strap fits your child correctly **before** installing the child restraint. See pages 3-4.

Review your vehicle owner's manual for LATCH belt use and designated LATCH locations.

WARNINGS: Do not use LATCH belt along with the vehicle lap or lap/shoulder belt.

Check LATCH belt before each use. Use only if the belt can be tightened properly and locked securely in place.

Failure to follow these warnings can result in serious injury or death.



1. Remove LATCH from Packaging

Pull LATCH belt packaging out of forward-facing belt path. Remove LATCH from packaging. Discard the packaging.



To loosen: Lift up on tether lock adjuster and push it towards tether hook.



2. Route LATCH Belt Through Forward-Facing Belt Path

Do not twist belt.

LATCH adjuster can be on either side.

24



3. Finished LATCH Routing



8. Tighten Tether

With knee still in child restraint, push firmly on the back of the seat and tighten tether strap.



4. Place Child Restraint Forward Facing Flush Against Vehicle Seat Back



9. Check Belt Tightness

Hold child restraint at the belt path with your weakest hand.

Push and pull from side to side.

If it moves more than 1 in. (2.5 cm), try pulling the belt tighter, try reinstalling the child restraint, try another seating location, or try using the vehicle belts.



To Release LATCH

Remove child from child restraint.

Remove tension from LATCH belt by pushing down on side of child restraint with LATCH adjuster. Then press adjuster button to loosen belt.

Unhook LATCH from bar by squeezing spring lever, pushing hook back into the seat bight and twisting. Then pull it out of the vehicle seat.

Store LATCH when not in use. See page 18.



6. Hook LATCH to Vehicle

5. Loosely Attach Tether

Check vehicle owner's manual for

Hook

specific location.

7. Tighten Belt

Anchor

Place knee in child restraint.

Firmly push down while pulling shoulder belt or free end of lap belt to tighten.

Vehicle Belt Installation

Safety Tip

Make sure the harness strap fits your child correctly **before** installing the child restraint. See pages 3-4.

WARNINGS: Do not use LATCH along with the vehicle lap or lap/shoulder belt.



Store LATCH hook and belts when installing with vehicle belts.

Check vehicle belt before each use. Use only if the belt can be tightened properly and locked securely in place.

Failure to follow these warnings can result in serious injury or death.



1. Place Child Restraint Forward Facing Flush Against Vehicle Seat Back



3. Route Vehicle Lap or Lap/Shoulder Belt Through Forward-Facing Belt Path

Review pages 19-20 and your vehicle owner's manual to determine

what kind of vehicle belts you have and how to lock a child restraint in place.

Do not twist belt. Buckle vehicle belt.



4. Tighten Belt

Place knee in child restraint.

Firmly push down while pulling shoulder belt or free end of lap belt to tighten.

5. Tighten Tether

With knee still in child restraint, push firmly on the back of the seat and tighten tether strap.

6. Check Belt Tightness

Hold child restraint at the belt path with your weakest hand.

Push and pull from side to side.

If it moves more than 1 in. (2.5 cm), try pulling the belt tighter, try

reinstalling the child restraint, try another seating location, or switch to using the LATCH belt.



2. Loosely Attach Tether Hook

Check vehicle owner's manual for specific location.

27

Воо

Booster Seat



40-80 lb (18.1-36.3 kg) **43-52 in.** (110.1-132.1 cm) **At least 3 years old**



You **MUST** remove the harness system to use as a booster seat. See pages 9-10.

WARNINGS: Do not use the harness system when using as a booster seat.



Do not use this booster seat if the tops of your child's ears are above the top of the booster seat.



Use only the vehicle's lap and shoulder belt system when restraining the child in this booster seat.

Do not use only the lap belt when using this seat as a booster seat.

The shoulder belt must always be adjusted snugly across the child's chest. NEVER place the shoulder belt under the child's arms.

Do not use the LATCH belts or tether strap when using as a booster seat.

Store both LATCH and tether strap as shown.



Failure to follow these warnings can result in serious injury or death.



Lap and Shoulder Belt Installation







Place Booster Seat Forward Facing Flush Against Vehicle Seat Back

Tuck the tether hook and strap under the booster seat.

2. Position Lap Belt on Child

The lap belt should lay snugly across the child's upper thighs and not on the stomach.

3. Buckle Vehicle Belt

4. Position Shoulder Belt on Child

Pull up on shoulder belt to tighten. The shoulder belt should lay snugly across the center of the child's shoulders and across the chest and not on the face or neck.

To help position the shoulder belt, you may need to secure the shoulder belt in one of the notches in the shoulder belt-positioning guides.

NOTE: Use the shoulder belt positioning guide only if necessary to correctly position the shoulder belt on the child. Check periodically to ensure your child has not moved out of position and loosened the shoulder belt.

H

Using a Locking Clip

You will rarely need to use a locking clip except in some older vehicles.

Built-in child restraint locking systems have been required in vehicles since 1996, and many vehicles had these features even earlier. Review pages 19-20 and your vehicle owner's manual to determine if your vehicle belts require a locking clip.

If you need a locking clip immediately, they are likely available at an auto dealership, an auto store, or where you purchased this child restraint. You can also email us at consumer@djgusa.com or call us at 1-800-544-1108 for one.

A locking clip will not fix all types of seat belt problems. You **MUST** have a lap and shoulder belt to use a locking clip.

Do not use the locking clip when using this seat as a booster seat.

For Forward Facing installation, follow Pages 27-28 Warnings and Steps 1-4 before starting locking clip installation.



1. Determine Locking Clip Position

Grasp both vehicle belts together just behind the latch plate to mark the position for locking clip.


Unbuckle the belt.

NOTE: If the latch plate ends up just at the belt path opening so you cannot grasp the vehicle belt at the latch plate, grasp the vehicle belts on the opposite side of the child restraint, as close to the latch plate as possible.



2. Attach Locking Clip

Thread both portions of the vehicle belt onto the locking clip, as close to the latch plate as possible.



3. Position Locking Clip

It should be about 1 in. (2.5 cm) from vehicle belt's latch plate.

4. Rebuckle Vehicle Belt

5. Check Belt Tightness

Hold child restraint at the belt path with your weakest hand.

Push and pull from side to side.

If it moves more than 1 in. (2.5 cm), try reinstalling the child restraint or try another seating location.

6. Tighten Tether

With knee in child restraint, push firmly on the back of the seat and tighten tether strap.

Remove the locking clip when the seat belt is not being used with a child restraint.

Dorel Juvenile Group Information

Thank you for choosing this child restraint. The DJG family is committed to creating child restraints with the most comfort and convenience available today.

Remember, parents are a child's first teachers and examples. If you always buckle your seat belt, your child will think it is the natural thing to do.

Make it a firm rule that the vehicle does not go until everyone is buckled up. Make no exceptions.

No one can predict if use of a child restraint will prevent injury or death in a particular crash. However, when combined with careful driving, proper use of a child restraint can lower a child's risk of injury or death in most crashes.

Your child's safety is worth the time it will take to read and follow these instructions. After reading, if you still have questions or have any concerns with this child restraint, please contact our Consumer Relations Department at:




Registration and Safety Notices

Please complete the postage-paid registration card that came with your child restraint, and send it to us. Child restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall. Send your name, address, email address if available, and the restraint's model number and manufacturing date to:

Dorel Juvenile Group, Inc. Consumer Relations Department PO Box 2609 Columbus, IN 47202-2609

or call 1-800-544-1108 or register online at www.djgusa.com/ registration/carseat/us.

For recall information, call the U.S. Government's Vehicle Safety Hotline at 1–888–327–4236 (TTY: 1–800–424–9153), or go to http://www.NHTSA.gov.

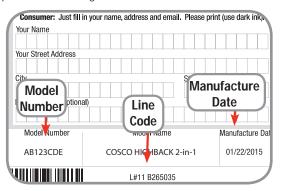

Example of model number, manufacture date, and line code.



If you don't have the card or if your address changes, you will find the model number, manufacture date, and line code on the label located on side of shell.

Troubleshooting

1. Locate a Child Safety Seat Inspection Station for hands on training on how to use your child restraint:

Visit your local Child Passenger Inspection Station or go to http://www.safercar.gov/cpsApp/cps/index.htm to find your closest station.

2. If the child restraint buckle or harness release lever sticks or you cannot get the straps tight enough around child:

DO NOT LUBRICATE. Check around lever and retractor for dropped food, sticky spilled drinks, dirt, leaves, etc. Clean with warm water and/or remove object with tweezers. If you cannot get the harness to adjust and remain tight with the buckle securely locked, do not use the child restraint.

3. If you cannot insert the buckle tongues into buckle, switch sides and try again.

4. If your harness twists:

Straighten the harness each time you put your child in the child restraint to help prevent twisting. Lock the buckle and tighten harness and it will be ready for next use.

Replacement Parts Order Form

Complete the form. Your model number with color code and manufacturer date code **MUST** be included on the form to ensure proper replacement parts. The codes can be found on a label on side of child restraint. Payment in U.S. dollars must accompany your order. Choose parts needed from the list on the next page. Return the form with payment to:

Dorel Juvenile Group, Inc. Consumer Relations Department P.O. Box 2609 Columbus, IN 47202-2609

Fax orders to: 1-800-207-8182

Please make money orders payable to Dorel Juvenile Group, Inc. Fill in the area on the next page to charge credit card. (Visa or Master-Card **only**). We do not accept cash, personal checks, or other credit cards. All outside of U.S. and Canada **MUST** use credit card.

Ship To: (Please Print)

Name:			
Address:			
		Zip	
Telephone: _			
Email Addre	ss:		
	We MUST	have this information	:

Model Number (8 to 9 characters):____

Manufacture Date (mm/dd/yyyy):_____

Replacement Parts List

NOTE: If requested color is not available, similar color will be substituted. Prices are subject to change.

Part	Cost Qty	Total Cost
Buckle Assembly	\$7.99	\$
Harness Strap		
Seat Pad	\$18.00	\$
Chest Clip	\$1.50	\$
Tether		
LATCH	\$17.99	\$
Instructions	\$0.00	\$
Locking Clip	\$2.50	\$
Merchandise Total:		\$
Shipping and handling:		\$
Up to \$25.00 \$5.95	\$100.01 to \$150.00	\$10.95
\$25.01 to \$50.00 \$6.95	\$150.01 to \$200.00	\$11.95
\$50.01 to \$75.00 \$8.95	\$200.01 and up	\$13.95
\$75.01 to \$100.00 \$9.95	Outside Continental USA	A\$10.00
Sales Tax		.\$

(Arizona, California, Georgia, Indiana, Missouri, South Carolina, and Texas residents add applicable sales tax.)

Grand Total

No shipping and handling on instructions for quantities under 6. Add \$.50 for each instruction over 6, then add applicable shipping and handling.

Fill Out For Credit Card Visa MasterCard

Card Exp. Date:

Cardholder's Name:

Card Number:

Signature:

37

Warranty

CUT

ON DOTTED LINE

Dorel Juvenile Group, Inc. (DJG) warrants this product to the original retail purchaser as follows:

This product is warranted against defective materials or workmanship for **one year** from the date of original purchase. **An original receipt is required to validate your warranty.** DJG will, at its option, provide replacement parts or replace this product. DJG reserves the right to substitute if the part or model has been discontinued.

To make a claim under this warranty you may email us at consumer@djgusa.com; fax us at 1-800-207-8182 24 hours a day; write to DJG, Consumer Relations Department, P. O. Box 2609, Columbus, IN 47202-2609; or call 1-800-544-1108 from 8:00 a.m. to 6:00 p.m. EST Monday through Thursday and from 8:00 a.m. to 4:30 p.m. on Friday.

Proof of purchase is required and shipping charges are the responsibility of the consumer.

Warranty Limitations: This warranty does not include damages which arise from misuse or abuse of this product.

Limitation of Damages: The warranty and remedies as set forth are exclusive and in lieu of all others, oral or written, expressed or implied. In no event will DJG or the dealer selling this product be liable to you for any damages, including incidental or consequential damages, arising out of the use or inability to use this product.

Limitation of warranties and other warranty terms and state law rights:

Any implied warranties, including implied warranties of the merchantability and fitness for a particular purpose, shall be limited to the duration and terms of the express written warranty. Some states do not allow limitations as to how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

This warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Neither DJG nor the dealer selling this product authorized any person to create for it any other warranty, obligation, or liability in connection with this product.